YAMAHA

PARTS CATALOGUE

XSR900H (B90H) U49
XSR900HC (B90J) CALIFORNIA

YAMAHA GENUINE Parts & Accessories

1SB90-110E1

( )

XSR900H/XSR900HC
PARTS CATALOGUE
©2016 by Yamaha Motor Co., Ltd.
1st edition, October 2016
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   “UR” Use specified parts number.

   “UN” Use as many as needed.

   “AP” Alternate Parts

   “LM” Locally Made (Parts need to be ordered locally)

   “F#” Frame No. (Applicable machine No.)

   “O/S” Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q’TY	REMARKS
2F5–83310–60	FRONT FLASHER LIGHT ASSY	2	
115–83311–60	.BULB (6V–18W)	1	

4. Applicable colours of graphics are represented in the “REMARKS” as shown below.

PART NO.	DESCRIPTION	Q’TY	REMARKS
2N4–24110–00–X5	FUEL TANK COMP.	2	MXR
3J1–24240–10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.

6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Engine Serial No.

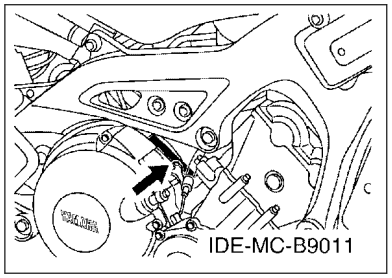

Frame Serial No.

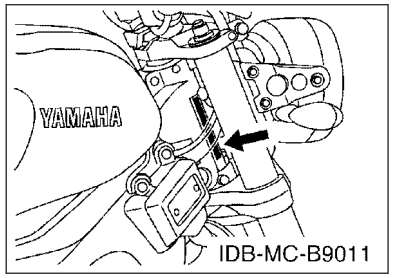

8. Applicable Colour Code (The (*) mark shows Model colour.)

Abbreviation	Colour Name	Colour Code
LGB	LOW GLOSS BLACK	0098
MBL2	MAT BLACK 2	0582
NBM4(*)	GRAYISH BLUE METALLIC 4	0969

MODEL LABEL

(1) A label called “Model Label” is affixed in the location as indicated in (3) below.
When using this parts catalogue, please be sure to cross–reference the “model code – production code No.” in the catalogue with the “model code – production code No.” indicated on the Model Label affixed onto the product concerned.

(2) “Model Label” Indication

a b
○ xxxx – xxx
● x c

a: Model Type Code
b: Production Code No.
c: Colouring Type

○ 4TW1–010
● A

(3) Model Label Affixing Location

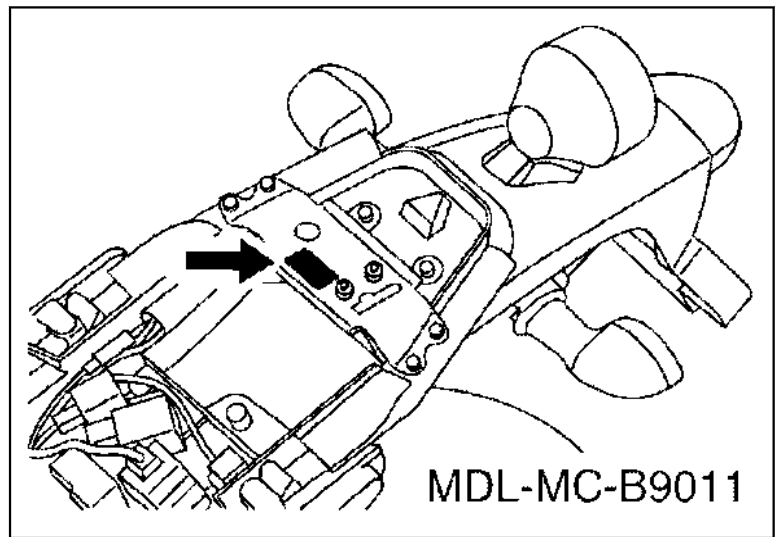

(4) Colouring Information

Model Code	Colouring Type Code	Colour Code	Colour Name	Abbrevia-tion
B90H	B	0969	GRAYISH BLUE METALLIC 4	NBM4
B90J	B	0969	GRAYISH BLUE METALLIC 4	NBM4

(5) Model Code – Production Code Number of Model Listed in This Parts Catalogue

Model Code	Production Code No.	Country (destination)	Model Code	Production Code No.	Country (destination)
B90H	010	U49			
B90J	010	CALIFORNIA			

CONTENTS

ENGINE

CYLINDER HEAD....1
CRANKSHAFT & PISTON....3
VALVE....4
CAMSHAFT & CHAIN....6
WATER PUMP....7
RADIATOR & HOSE....9
OIL PUMP....11
OIL CLEANER....12
INTAKE....13
INTAKE 2....14
AIR INDUCTION SYSTEM....16
EXHAUST....17
CRANKCASE....18
CRANKCASE COVER 1....20
STARTER....22
CLUTCH....23
TRANSMISSION....25
SHIFT CAM & FORK....27
SHIFT SHAFT....28

CHASSIS

FRAME....29
FENDER....30
SIDE COVER....33
REAR ARM....35
REAR SUSPENSION....37
STEERING....38
FRONT FORK....40
FUEL TANK....42
SEAT....45
FRONT WHEEL....46
FRONT BRAKE CALIPER....47
REAR WHEEL....49
REAR BRAKE CALIPER....51
STEERING HANDLE & CABLE....52
FRONT MASTER CYLINDER....53
STAND & FOOTREST....55
REAR MASTER CYLINDER....58
GENERATOR....60
STARTING MOTOR....61
FLASHER LIGHT....62
METER....63
HEADLIGHT....64
TAILLIGHT....65
HANDLE SWITCH & LEVER....66
ELECTRICAL 1....67
ELECTRICAL 2....69
ELECTRICAL 3....71

INDEX

NUMERICAL INDEX....72

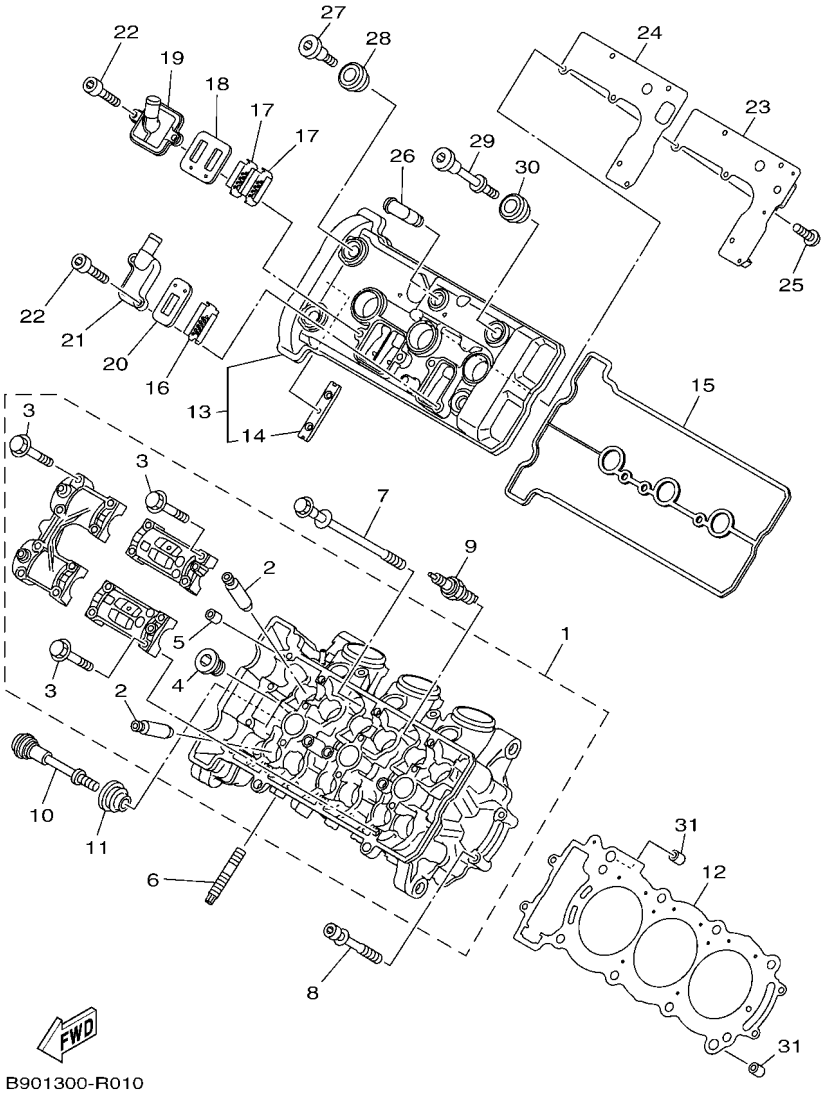

B901300-R010

FIG. 1 CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–11101–09	CYLINDER HEAD ASSY	1	1				
2	2C0–11133–11	.GUIDE, VALVE 1	12	12				
3	90105–06027	.BOLT, FLANGE	16	16				
4	90340–18002	.PLUG, STRAIGHT SCREW	2	2				
5	91808–16023	.PIN, DOWEL	6	6				
6	90116–08087	BOLT, STUD	6	6				
7	90119–09017	BOLT, WITH WASHER	8	8				
8	90109–061F7	BOLT	4	4				
9	94701–00431	PLUG, SPARK (NGK R CPR9EA-9)	3	3				
10	90109–06293	BOLT	1	1				
11	5VY–1111G–00	RUBBER, MOUNT 1	1	1				
12	BS2–11181–00	GASKET, CYLINDER HEAD 1	1	1				
13	1RC–11191–10	COVER, CYLINDER HEAD 1	1	1				
14	5BE–12241–00	.GUIDE, STOPPER 2	1	1				
15	1RC–11193–01	GASKET, HEAD COVER 1	1	1				
16	5JW–1482K–01	PLATE	1	1				
17	5VY–1482K–00	PLATE	2	2				
18	5SL–14890–00	REED VALVE ASSY	1	1				
19	5SL–14899–00	CAP, CASE	1	1				
20	5PS–14890–00	REED VALVE ASSY	1	1				
21	5JW–14889–00	CAP, CASE	1	1				
22	90110–06175	BOLT, HEXAGON SOCKET HEAD	4	4				
23	B90–11165–00	PLATE, BREATHER	1	1				
24	1RC–11169–00	GASKET, BREATHER COVER	1	1				
25	90149–05037	SCREW	5	5				
26	4TR–11167–00	PIPE, BREATHER 2	1	1				
27	90109–066F0	BOLT	3	3				

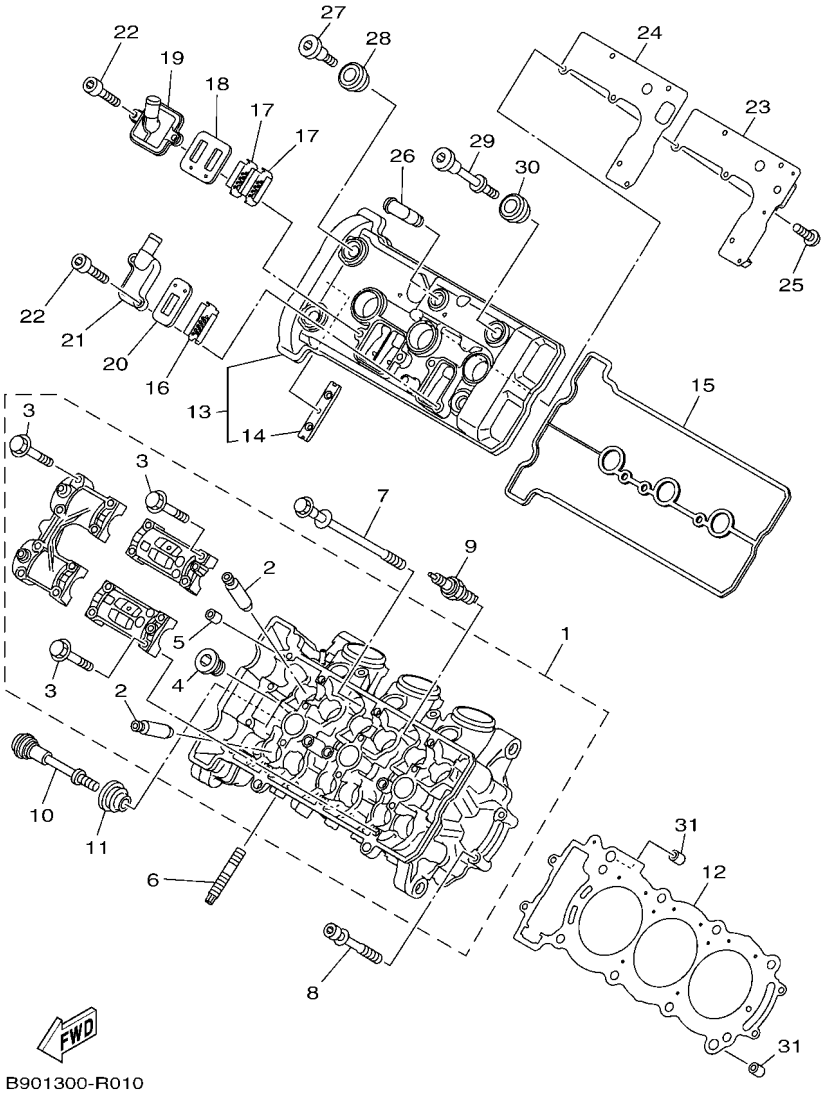

B901300-R010

FIG. 1 CYLINDER HEAD

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	5VY–1111G–00	RUBBER, MOUNT 1	3	3				
29	90109–06271	BOLT	1	1				
30	5VY–1111G–00	RUBBER, MOUNT 1	1	1				
31	99530–12016	PIN, DOWEL	2	2				

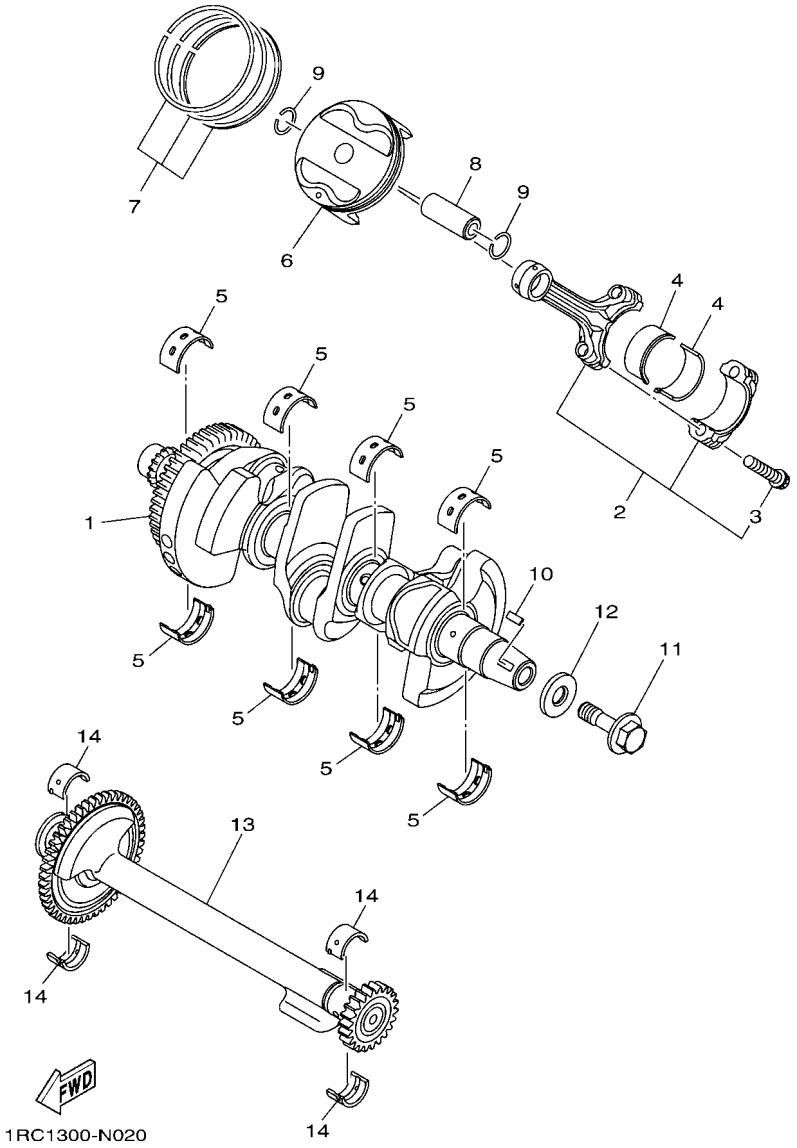

FIG. 2 CRANKSHAFT & PISTON

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–11400–00	CRANKSHAFT ASSY	1	1				
2	1RC–11650–00	CONNECTING ROD ASSY	3	3				
3	1RC–11654–00	.BOLT, CONNECTING ROD	2	2				
4	1RC–11656–00	PLANE BEARING, CONNECTING ROD	6	6				UR BLUE
	1RC–11656–10	PLANE BEARING, CONNECTING ROD	6	6				UR BLACK
	1RC–11656–20	PLANE BEARING, CONNECTING ROD	6	6				UR BROWN
	1RC–11656–30	PLANE BEARING, CONNECTING ROD	6	6				UR GREEN
5	5VY–11416–A0	PLANE BEARING, CRANKSHAFT 1	8	8				UR WHITE
	5VY–11416–00	PLANE BEARING, CRANKSHAFT 1	8	8				UR BLUE
	5VY–11416–10	PLANE BEARING, CRANKSHAFT 1	8	8				UR BLACK
	5VY–11416–20	PLANE BEARING, CRANKSHAFT 1	8	8				UR BROWN
	5VY–11416–30	PLANE BEARING, CRANKSHAFT 1	8	8				UR GREEN
6	1RC–11631–00	PISTON (STD)	3	3				
7	1RC–11603–00	PISTON RING SET (STD)	3	3				
8	39P–11633–00	PIN, PISTON	3	3				
9	93450–18157	CIRCLIP	6	6				
10	90280–05029	KEY, WOODRUFF	1	1				
11	90105–126A8	BOLT, FLANGE	1	1				
12	90201–12008	WASHER, PLATE	1	1				
13	1RC–11500–00	BALANCER ASSY	1	1				
14	2S3–11413–00	METAL, BALANCE WEIGHT	4	4				UR BLUE
	2S3–11413–10	METAL, BALANCE WEIGHT	4	4				UR BLACK
	2S3–11413–20	METAL, BALANCE WEIGHT	4	4				UR BROWN
	2S3–11413–30	METAL, BALANCE WEIGHT	4	4				UR GREEN
	2S3–11413–40	METAL, BALANCE WEIGHT	4	4				UR YELLOW

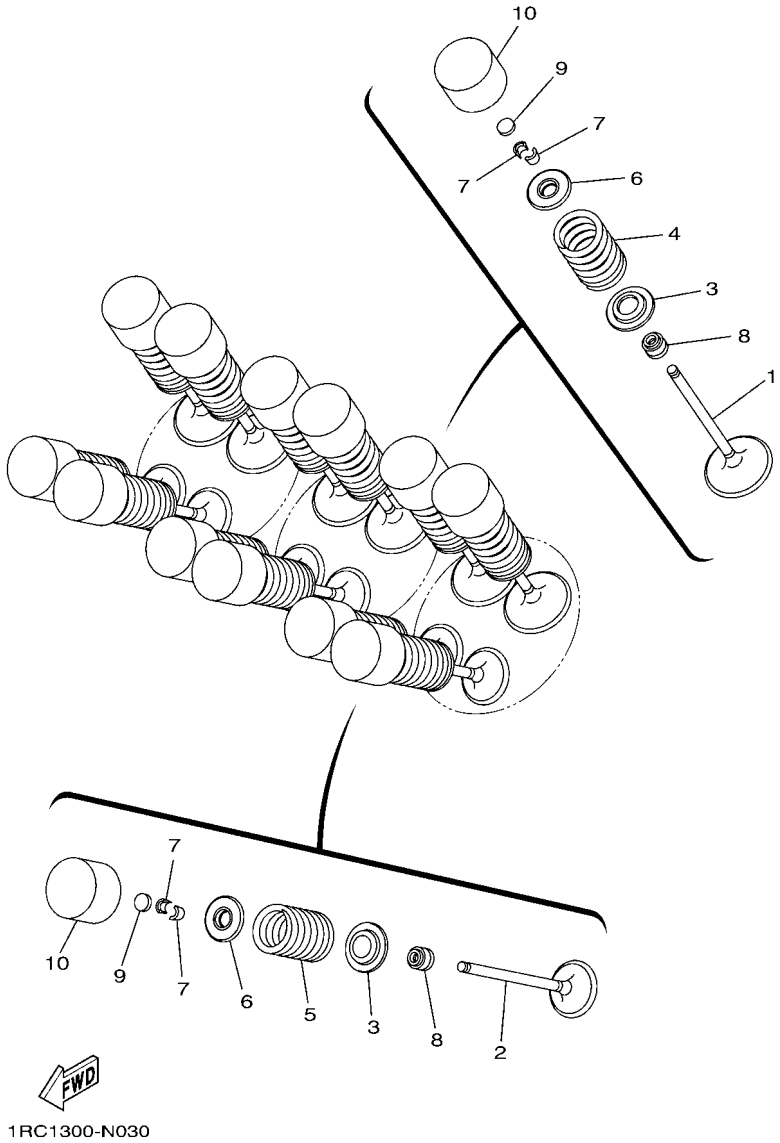

1RC1300-N030

FIG. 3 VALVE

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–12111–00	VALVE, INTAKE	6	6				
2	1RC–12121–00	VALVE, EXHAUST	6	6				
3	1RC–12116–00	SEAT, VALVE SPRING	12	12				
4	1RC–12113–00	SPRING, VALVE INNER	6	6				
5	1RC–12114–00	SPRING, VALVE OUTER	6	6				
6	3D7–12117–00	RETAINER, VALVE SPRING	12	12				
7	1WG–12118–00	LOCK, VALVE SPRING RETAINER	24	24				
8	4TE–12119–00	SEAL, VALVE STEM	12	12				
9	1HX–12168–F0	PAD, ADJUSTING 2 (1.50)	12	12				UR
	1HX–12168–H1	PAD, ADJUSTING 2 (1.55)	12	12				UR
	1HX–12168–K1	PAD, ADJUSTING 2 (1.60)	12	12				UR
	1HX–12168–M1	PAD, ADJUSTING 2 (1.65)	12	12				UR
	1HX–12168–R1	PAD, ADJUSTING 2 (1.70)	12	12				UR
	1HX–12168–U1	PAD, ADJUSTING 2 (1.75)	12	12				UR
	1HX–12168–W1	PAD, ADJUSTING 2 (1.80)	12	12				UR
	1HX–12168–Y1	PAD, ADJUSTING 2 (1.85)	12	12				UR
	1HX–12169–11	PAD, ADJUSTING 2 (1.90)	12	12				UR
	1HX–12169–31	PAD, ADJUSTING 2 (1.95)	12	12				UR
	1HX–12169–50	PAD, ADJUSTING 2 (2.00)	12	12				UR
	1HX–12169–70	PAD, ADJUSTING 2 (2.05)	12	12				UR
	1HX–12169–90	PAD, ADJUSTING 2 (2.10)	12	12				UR
	1HX–12169–E0	PAD, ADJUSTING 2 (2.15)	12	12				UR
	1HX–12169–G0	PAD, ADJUSTING 2 (2.20)	12	12				UR
	1HX–12169–J0	PAD, ADJUSTING 2 (2.25)	12	12				UR
	1HX–12169–L0	PAD, ADJUSTING 2 (2.30)	12	12				UR
	1HX–12169–N0	PAD, ADJUSTING 2 (2.35)	12	12				UR
	1HX–12169–T0	PAD, ADJUSTING 2 (2.40)	12	12				UR

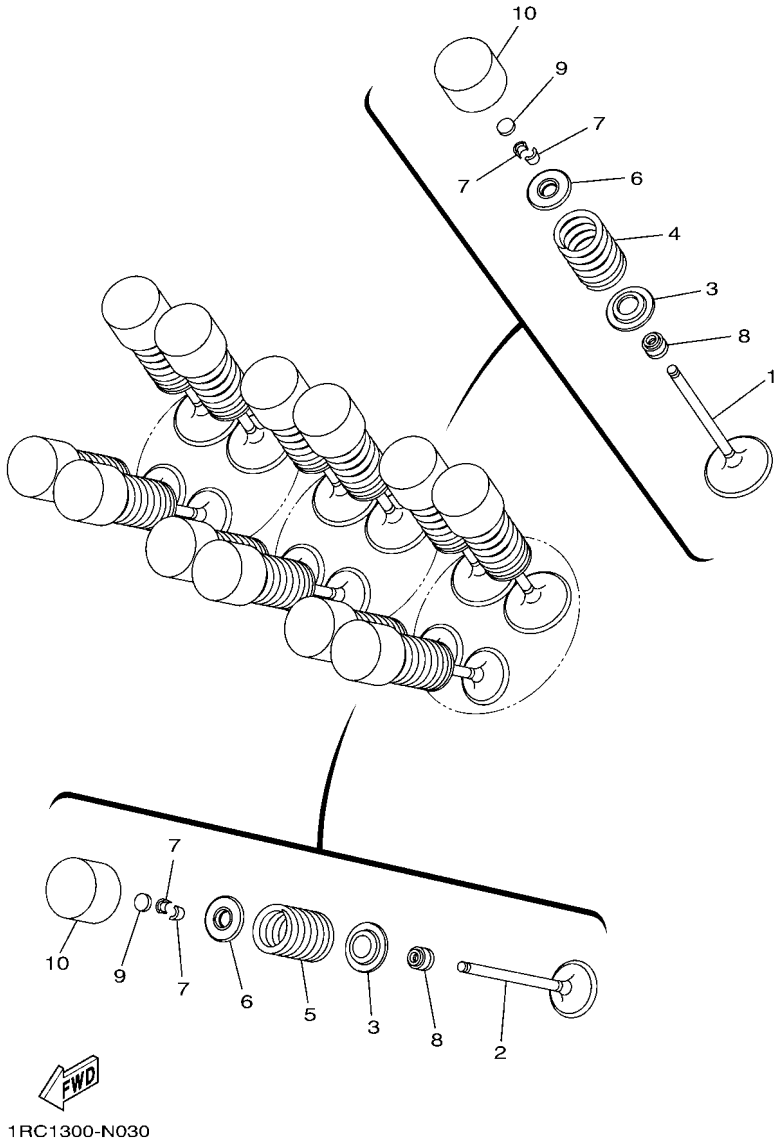

1RC1300-N030

FIG. 3 VALVE

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
10	4C8–12153–10	LIFTER, VALVE	12	12				UR YELLOW
	4C8–12153–09	LIFTER, VALVE (O/S)	12	12				AP GREEN

FIG. 4 CAMSHAFT & CHAIN

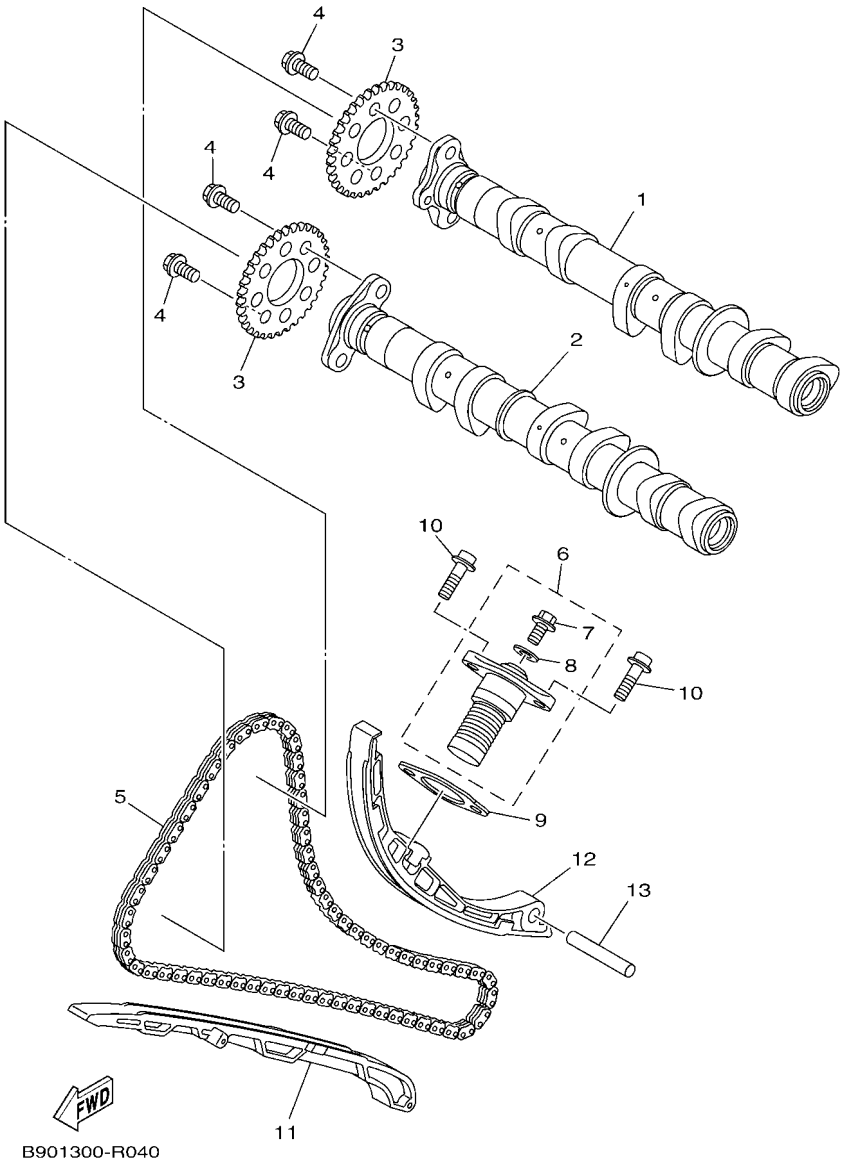

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–12170–00	CAMSHAFT ASSY 1	1	1				
2	1RC–12180–00	CAMSHAFT ASSY 2	1	1				
3	20S–12176–00	SPROCKET, CAM CHAIN	2	2				
4	90105–07006	BOLT, FLANGE	4	4				
5	94591–57128	CHAIN (98XRH2010-128M)	1	1				
6	B90–12210–00	TENSIONER ASSY, CAM CHAIN	1	1				
7	5EL–12228–00	.BOLT	1	1				
8	5SL–12214–00	.GASKET	1	1				
9	1WS–12213–00	GASKET, TENSIONER CASE	1	1				
10	90110–06395	BOLT, HEXAGON SOCKET HEAD	2	2				
11	1RC–12251–00	DAMPER, CHAIN 1	1	1				
12	1RC–12250–01	CHAIN DAMPER ASSY	1	1				
13	93607–44002	PIN, DOWEL	1	1				

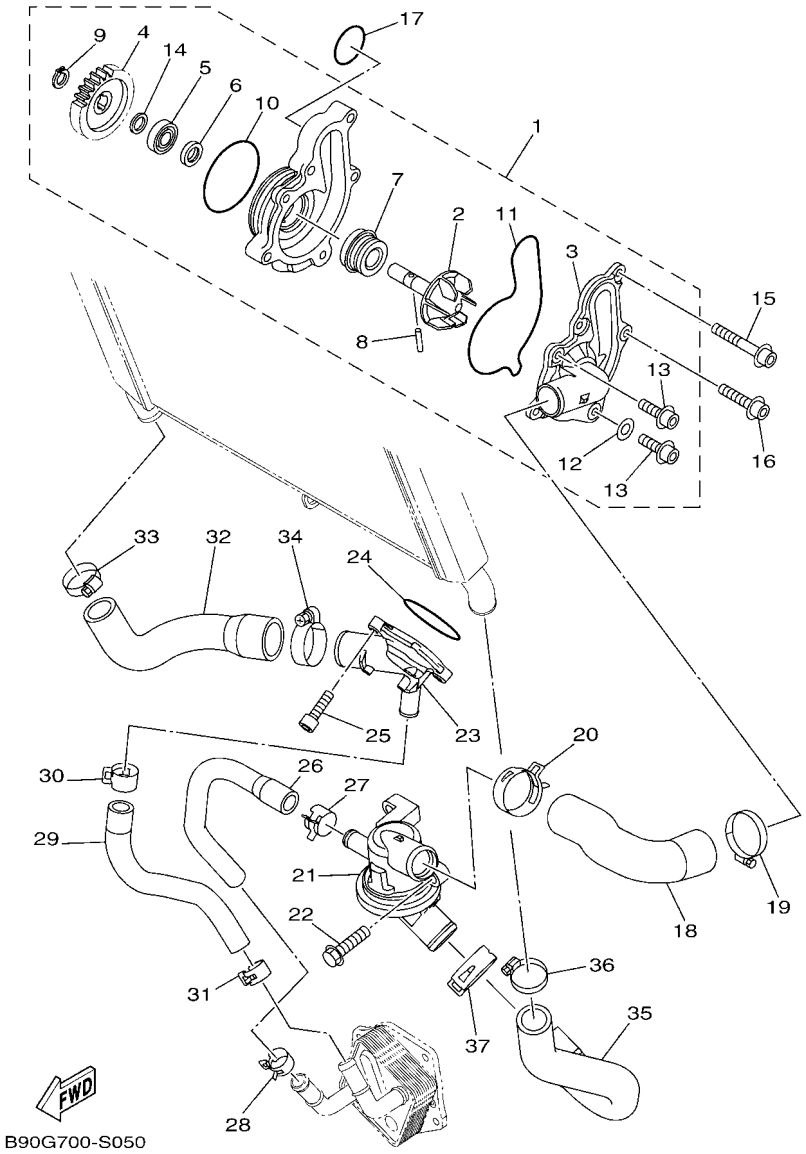

FIG. 5 WATER PUMP

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–12420–00	WATER PUMP ASSY	1	1				
2	1RC–12450–00	.IMPELLER SHAFT ASSY	1	1				
3	1RC–12422–00	.COVER, HOUSING	1	1				
4	1RC–12459–00	.GEAR, IMPELLER SHAFT	1	1				
5	93306–00106	.BEARING	1	1				
6	93101–12173	.OIL SEAL	1	1				
7	5VK–12438–00	.SEAL, MECHANICAL	1	1				
8	93603–16219	.PIN, DOWEL	1	1				
9	99009–12400	.CIRCLIP	1	1				
10	93210–61750	.O-RING	1	1				
11	1RC–12439–00	.O-RING	1	1				
12	90430–06014	.GASKET	1	1				
13	90110–06396	.BOLT, HEXAGON SOCKET HEAD	2	2				
14	90201–12541	.WASHER, PLATE	1	1				
15	90110–06394	BOLT, HEXAGON SOCKET HEAD	3	3				
16	90110–06388	BOLT, HEXAGON SOCKET HEAD	1	1				
17	93210–30694	O-RING	1	1				
18	1RC–12577–00	HOSE 2	1	1				
19	90450–38040	HOSE CLAMP ASSY	1	1				
20	90467–310A0	CLIP	1	1				
21	1RC–12410–00	THERMOSTAT ASSY	1	1				
22	95822–06025	BOLT, FLANGE	2	2				
23	1RC–12469–00	JOINT 1	1	1				
24	93210–46044	O-RING	1	1				
25	90110–06274	BOLT, HEXAGON SOCKET HEAD	2	2				
26	BS2–12578–00	HOSE 3	1	1				
27	90467–21068	CLIP	1	1				

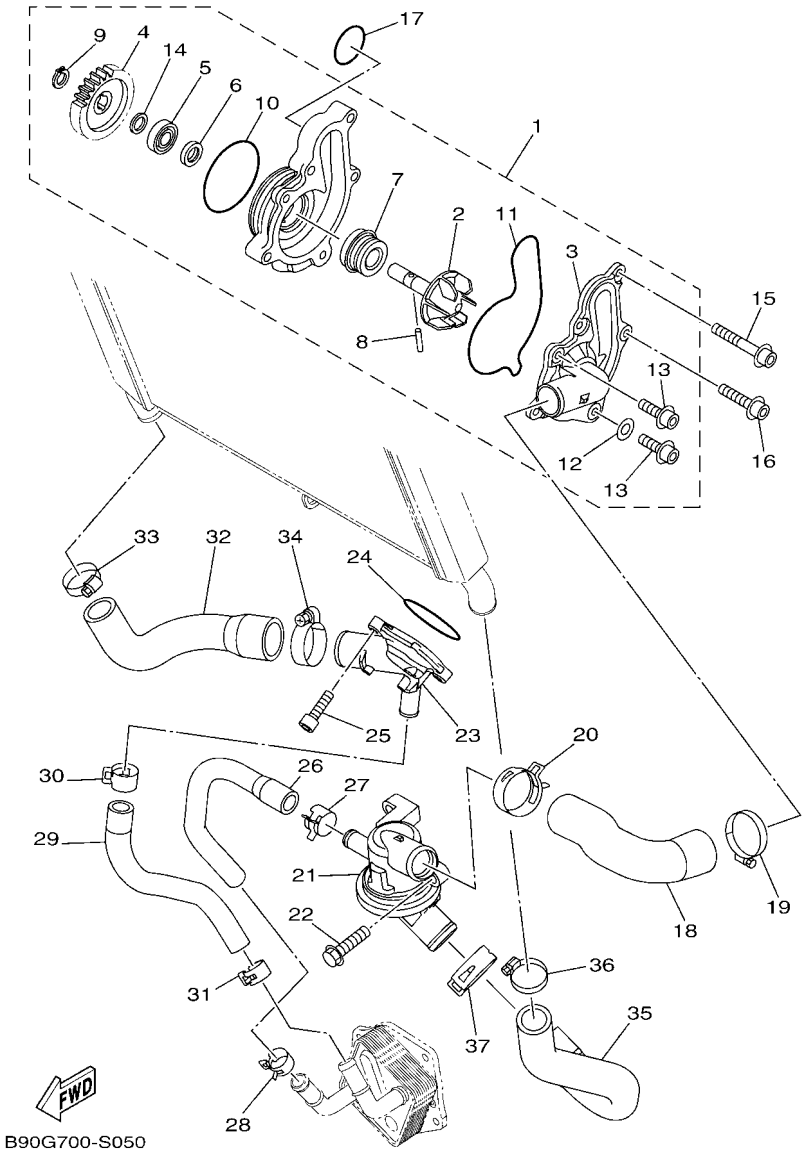

FIG. 5 WATER PUMP

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90467–200A0	CLIP	1	1				
29	BS2–12579–00	HOSE 4	1	1				
30	90467–21068	CLIP	1	1				
31	90467–200A0	CLIP	1	1				
32	1RC–12588–00	HOSE 5	1	1				
33	90450–32003	HOSE CLAMP ASSY	1	1				
34	90450–38040	HOSE CLAMP ASSY	1	1				
35	1RC–12576–00	HOSE 1	1	1				
36	90450–32003	HOSE CLAMP ASSY	1	1				
37	90467–310A0	CLIP	1	1				

FIG. 6 RADIATOR & HOSE

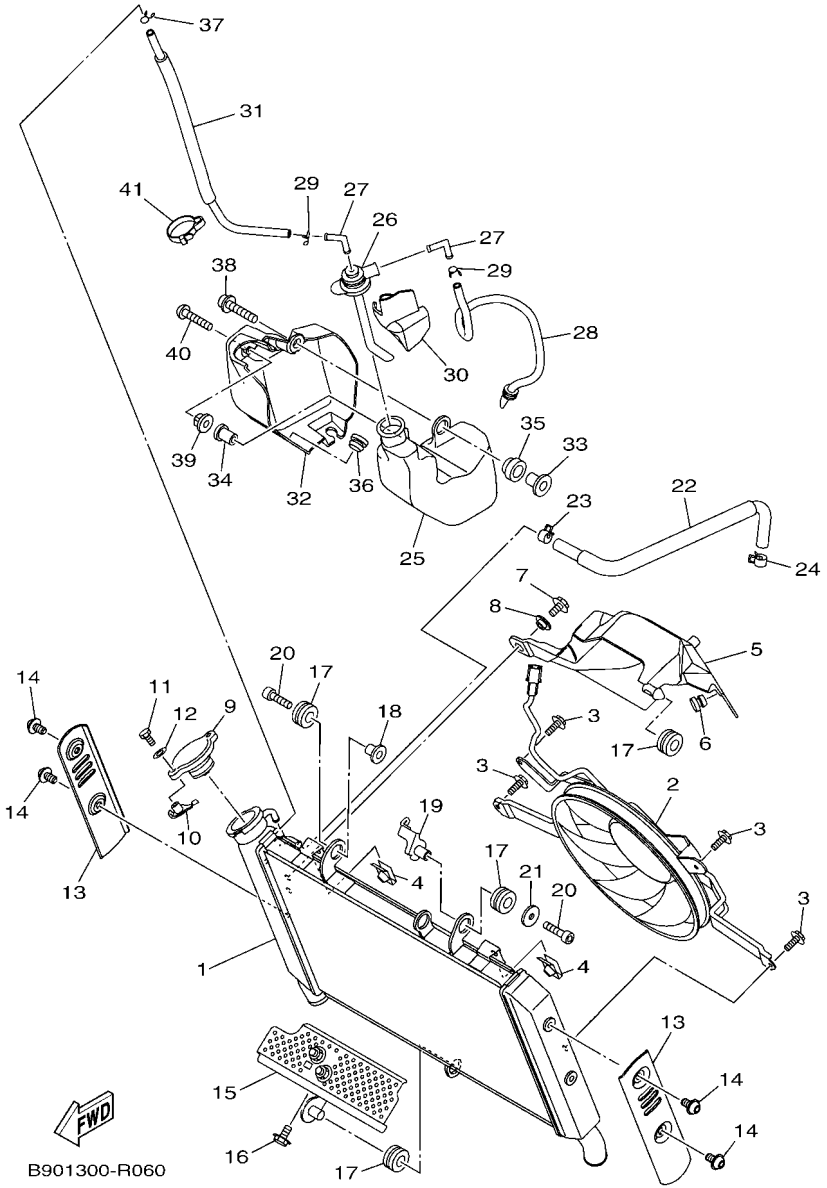

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	2PP–12461–00	RADIATOR COMP	1	1				
2	1RC–12405–01	BLOWER ASSY	1	1				
3	3D8–12675–00	BOLT, BLOWER HOLDING	4	4				
4	1AA–12535–00	PLATE	2	2				
5	1RC–12467–00	COVER, RADIATOR	1	1				
6	90338–07157	PLUG	1	1				
7	90105–06080	BOLT, FLANGE	1	1				
8	90387–07717	COLLAR	1	1				
9	4FL–12462–00	CAP, RADIATOR	1	1				
10	5FC–12437–00	STOPPER	1	1				
11	97007–05012	BOLT	1	1				
12	92907–05600	WASHER, PLATE	1	1				
13	B90–1240J–00	RADIATOR COVER ASSY1	2	2				
14	90111–06159	BOLT,HEX. SOCKET BUTTON	4	4				
15	1RC–12637–00	STAY 1	1	1				
16	95822–06012	BOLT, FLANGE	1	1				
17	90480–15363	GROMMET	4	4				
18	90387–06158	COLLAR	1	1				
19	1RC–26132–00	GUIDE, CABLE 2	1	1				
20	91312–06030	BOLT	2	2				
21	90201–06033	WASHER, PLATE	1	1				
22	1RC–1243A–00	HOSE 1	1	1				
23	90467–10039	CLIP	1	1				
24	90467–10039	CLIP	1	1				
25	1RC–21871–00	TANK, RECOVERY	1	1				
26	1RC–21875–00	CAP	1	1				
27	1RC–21828–00	ELBOW	2	2				

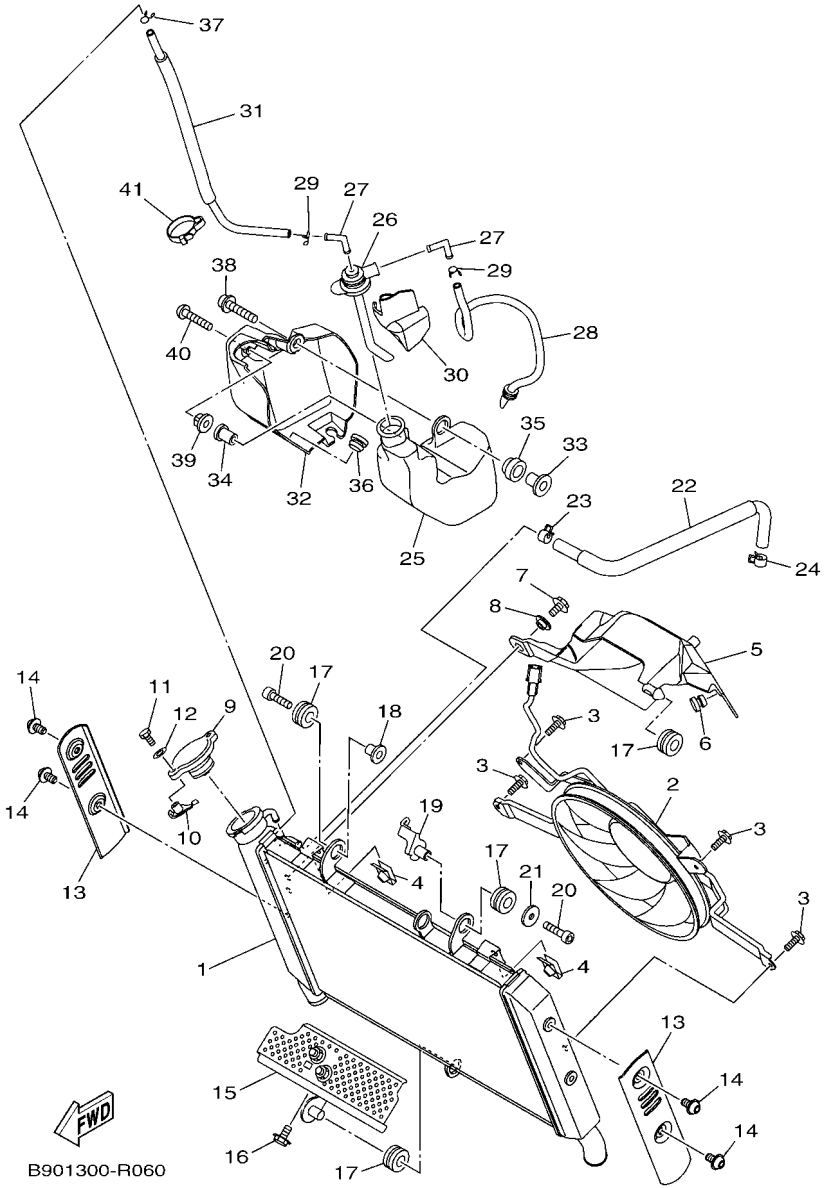

FIG. 6 RADIATOR & HOSE

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	1RC–21826–00	PIPE, BREATHER	1	1				
29	90467–08075	CLIP	2	2				
30	1RC–22825–00	PROTECTOR 1	1	1				
31	1RC–21816–00	PIPE 1	1	1				
32	1RC–2172W–00	COVER	1	1				
33	90387–06285	COLLAR	1	1				
34	90179–05523	NUT	1	1				
35	1RC–21749–00	COLLAR	1	1				
36	90480–13203	GROMMET	1	1				
37	90467–08075	CLIP	1	1				
38	90110–06233	BOLT, HEXAGON SOCKET HEAD	1	1				
39	1RC–21748–00	COLLAR	1	1				
40	92012–05030	BOLT, BUTTON HEAD	1	1				
41	90464–07M40	CLAMP	1	1				

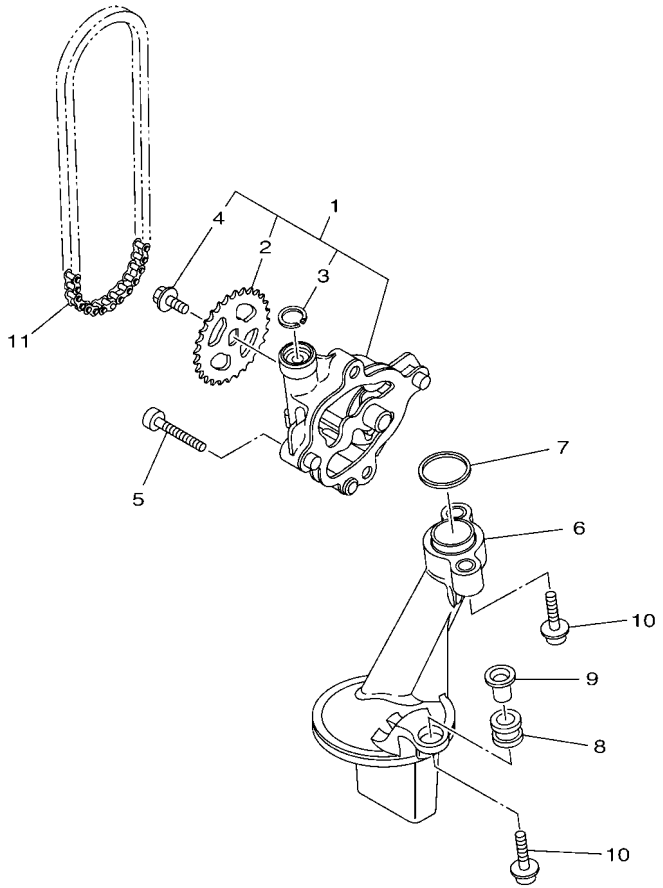

1RC1300-N070

FIG. 7 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–13300–00	OIL PUMP ASSY	1	1				
2	1RC–13355–00	.SPROCKET, DRIVEN	1	1				
3	99009–15500	.CIRCLIP	1	1				
4	90105–06066	.BOLT, FLANGE	1	1				
5	91312–06035	BOLT	4	4				
6	1RC–13410–00	STRAINER HOUSING ASSY	1	1				
7	93210–22001	O-RING	1	1				
8	90480–13010	GROMMET	1	1				
9	5VY–13117–10	COLLAR, DISTANCE	1	1				
10	90110–06173	BOLT, HEXAGON SOCKET HEAD	3	3				
11	94581–79066	CHAIN (DID 25H)	1	1				

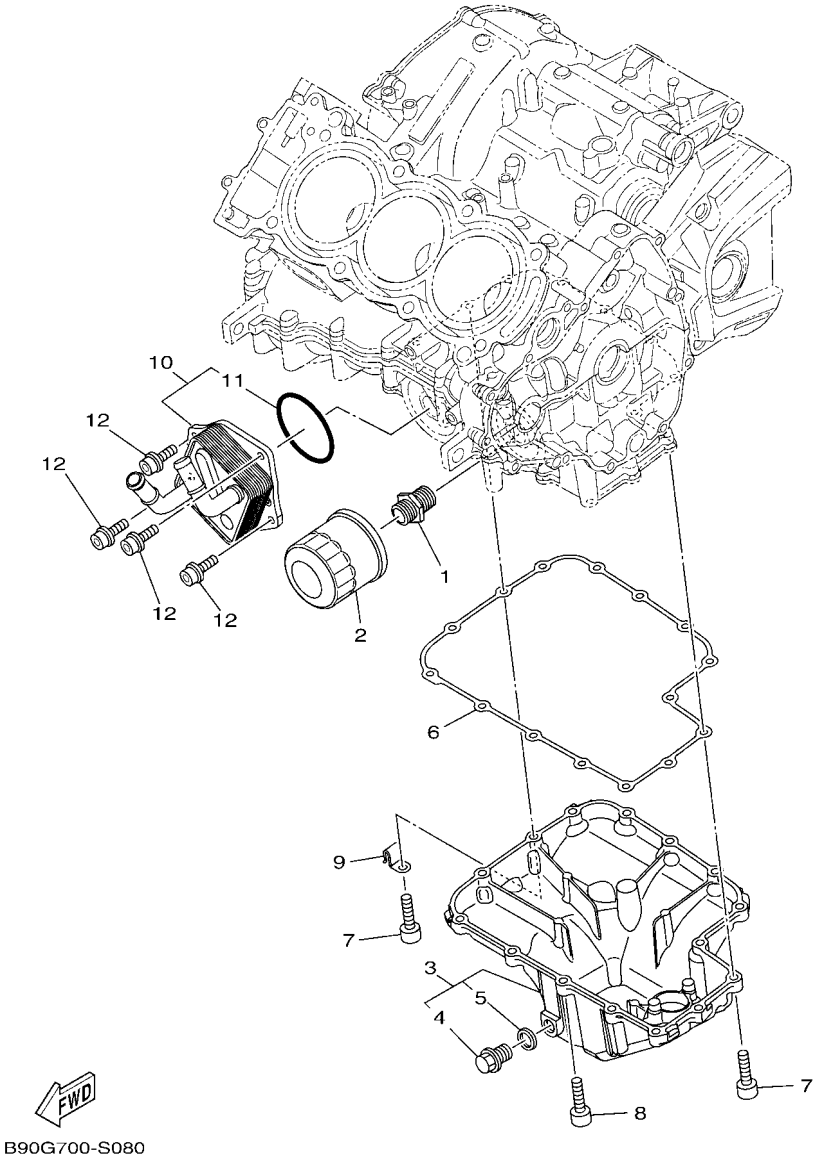

B90G700-S080

FIG. 8 OIL CLEANER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	90401–20008	BOLT, UNION	1	1				
2	5GH–13440–60	ELEMENT ASSY, OIL CLEANER	1	1				
3	B56–13400–10	STRAINER COVER ASSY	1	1				
4	90340–14132	.PLUG, STRAIGHT SCREW	1	1				
5	214–11198–01	.GASKET	1	1				
6	1RC–13414–00	GASKET, STRAINER COVER	1	1				
7	91312–06025	BOLT, HEXAGON SOCKET HEAD	14	14				
8	90110–06169	BOLT, HEXAGON SOCKET HEAD	1	1				
9	90465–06025	CLAMP	1	1				
10	BS2–13470–00	OIL COOLER ASSY	1	1				
11	2HC–13473–00	.O-RING	1	1				
12	90110–06164	BOLT, HEXAGON SOCKET HEAD	4	4				

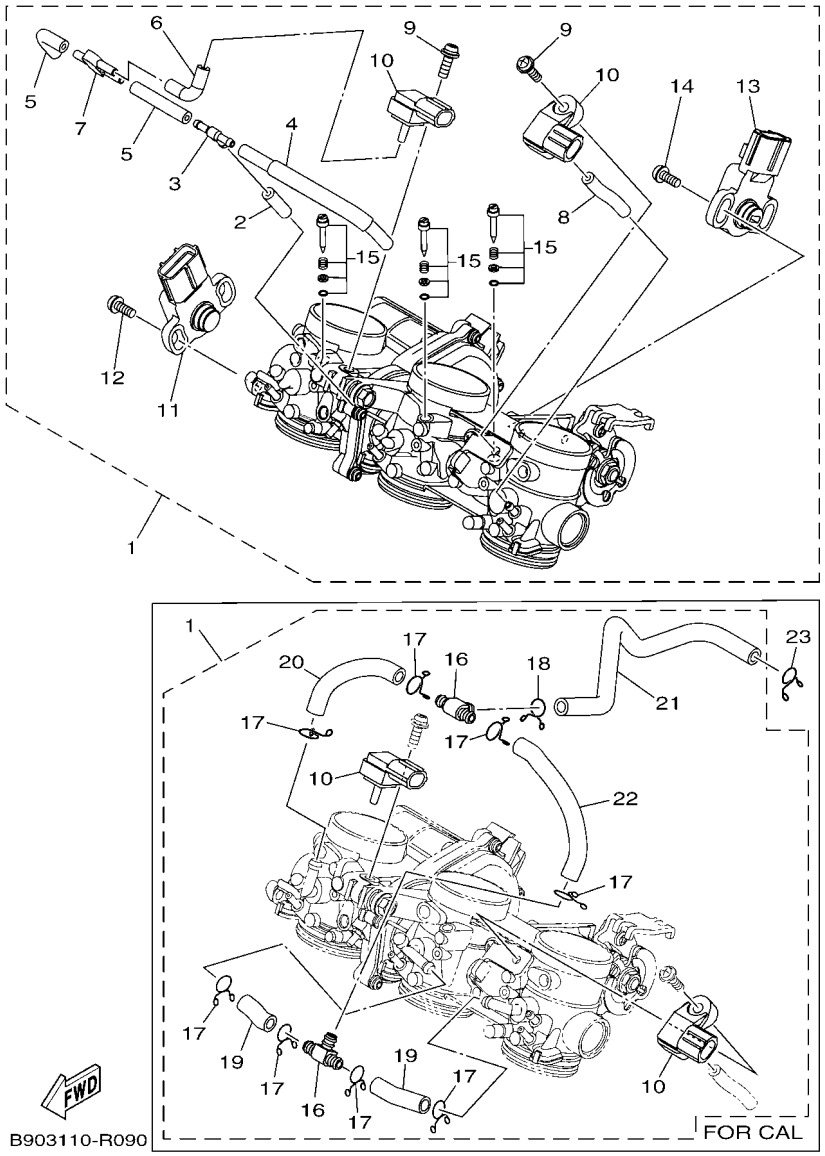

FIG. 9 INTAKE

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–13750–00	THROTTLE BODY ASSY	1					FOR U49
	B90–13750–10	THROTTLE BODY ASSY		1				FOR CAL
2	1RC–13544–00	.HOSE, VACUUM SENSING 2	1	1				
3	68V–24376–00	.PIPE, JOINT 1	1	1				
4	1RC–13542–00	.HOSE, VACUUM SENSING 1	1	1				
5	8FP–14349–20	.PIPE	2	2				
6	8FP–14349–00	.PIPE	1	1				
7	3XV–14251–00	.NIPPLE	1	1				
8	8FP–14349–30	.PIPE	1	1				
9	2C0–14216–00	.SCREW	2	2				
10	2C0–82380–00	.SENSOR, PRESSURE	2					FOR U49
	1WS–82380–00	.SENSOR, PRESSURE		2				FOR CAL
11	13S–85885–00	.THROTTLE SENSOR ASSY	1	1				
12	8CC–14216–10	.SCREW	2	2				
13	1MC–85884–00	.ACCELERATOR SENSOR ASSY	1	1				
14	5FL–14216–00	.SCREW	2	2				
15	2C0–14105–00	.PILOT SCREW SET	3	3				
16	90413–06031	.WAY 3		2				FOR CAL
17	90467–100A1	.CLIP		8				FOR CAL
18	90467–09103	.CLIP		1				FOR CAL
19	14B–14465–00	.PIPE		2				FOR CAL
20	1RC–14466–00	.PIPE		1				FOR CAL
21	B90–1443J–10	.PIPE		1				FOR CAL
22	1RC–1444J–00	.PIPE		1				FOR CAL
23	90467–09006	CLIP		1				FOR CAL

FIG. 10 INTAKE 2

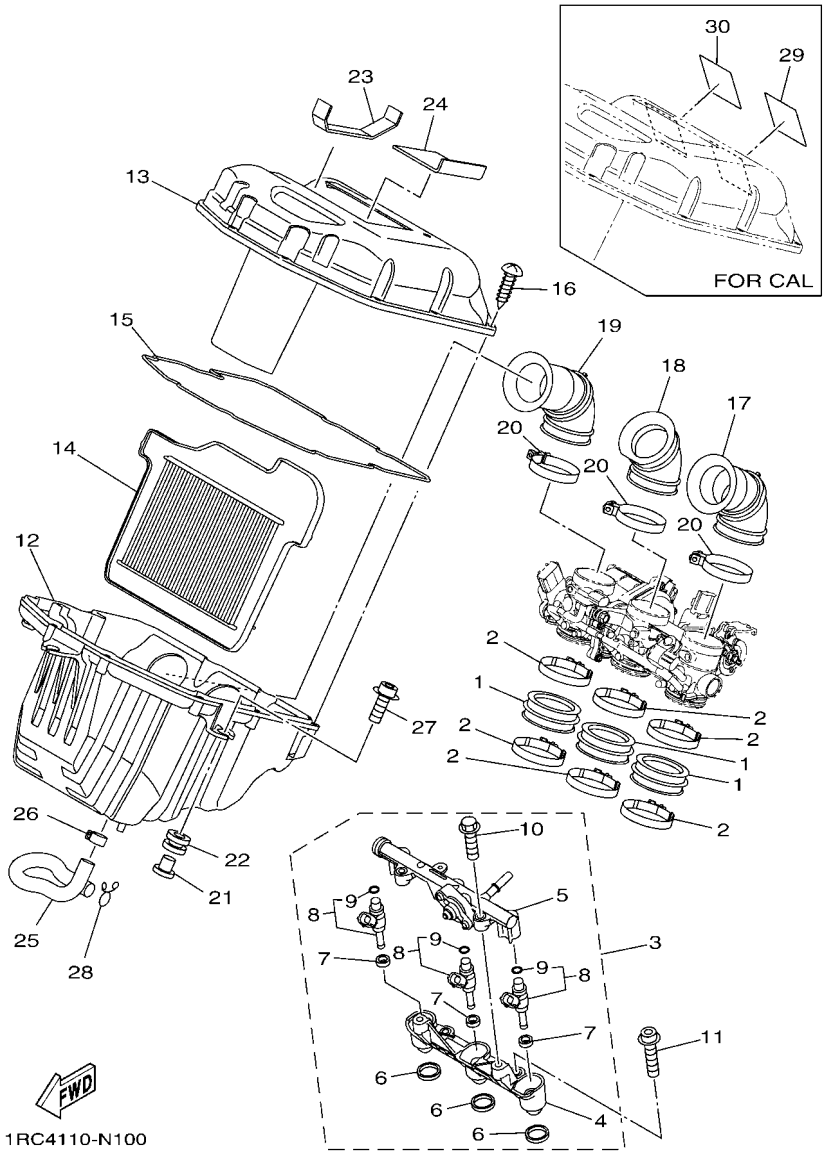

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–13635–00	JOINT, INTAKE 1	3	3				
2	90450–56009	HOSE CLAMP ASSY	6	6				
3	1RC–13930–00	PIPE INLET ASSEMBLY	1	1				
4	1RC–12572–00	.ADAPTER	1	1				
5	1RC–13938–00	.PIPE	1	1				
6	1RC–13556–00	.GASKET, MANIFOLD	3	3				
7	8FP–13556–00	.RUBBER, INJECTOR	3	3				
8	4C8–13761–00	.INJECTOR	3	3				
9	5PS–14147–00	..O-RING	1	1				
10	1RC–13573–00	.BOLT 1	2	2				
11	90110–06388	BOLT, HEXAGON SOCKET HEAD	2	2				
12	1RC–14411–00	CASE, AIR CLEANER 1	1	1				
13	1RC–14421–20	CASE, AIR CLEANER 2	1	1				
14	1RC–14451–00	ELEMENT, AIR CLEANER	1	1				
15	1RC–14452–00	SEAL	1	1				
16	90160–05013	SCREW, ROUND TAPPING	10	10				
17	1RC–14453–00	JOINT, AIR CLEANER 1	1	1				
18	1RC–14463–00	JOINT, AIR CLEANER 2	1	1				
19	1RC–14454–00	JOINT	1	1				
20	90450–53007	HOSE CLAMP ASSY	3	3				
21	90387–06205	COLLAR	3	3				
22	90480–12314	GROMMET	3	3				
23	1RC–14425–00	DAMPER 1	1	1				
24	1RC–14426–00	DAMPER 2	1	1				
25	1RC–15393–00	PIPE, BREATHER 2	1	1				
26	90467–15001	CLIP	1	1				
27	90110–06233	BOLT, HEXAGON SOCKET HEAD	3	3				

FIG. 10 INTAKE 2

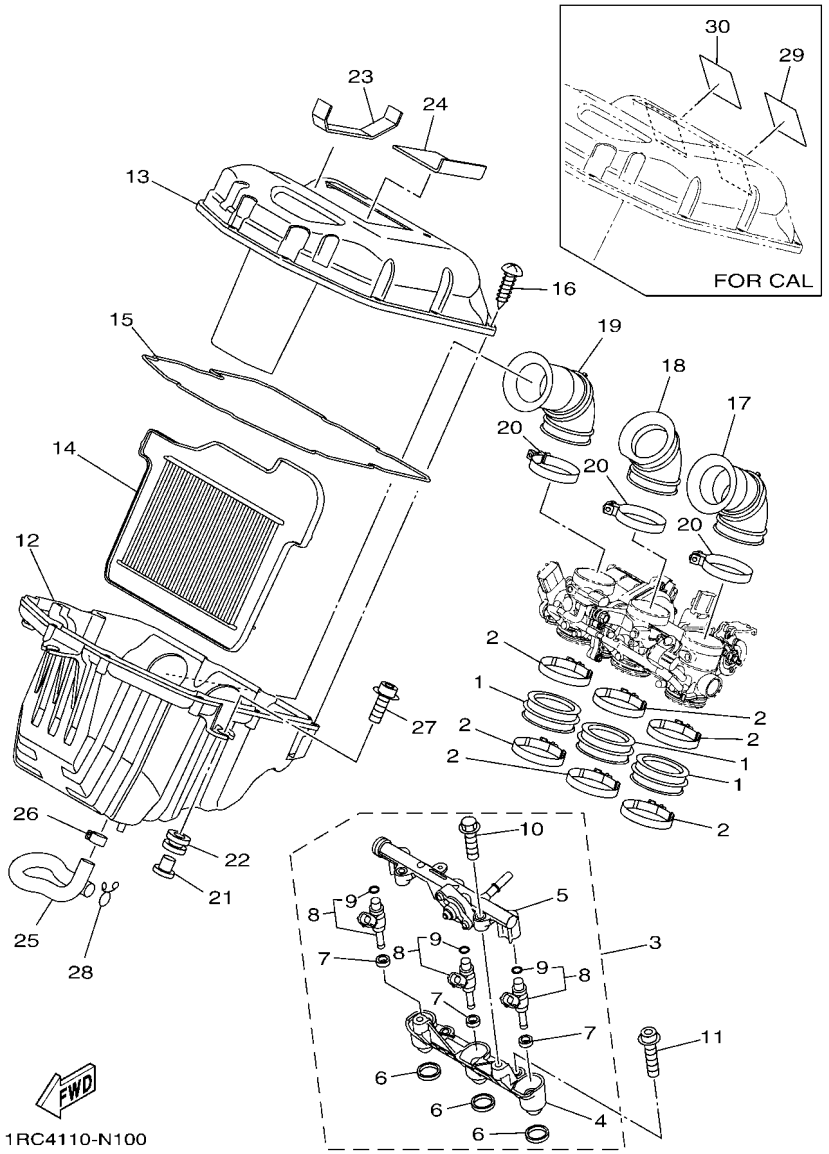

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90467–14015	CLIP	1	1				
29	1RC–21684–00	PLATE, ROUTING		1				FOR CAL
30	1RC–21686–00	PLATE, ROUTING 2		1				FOR CAL

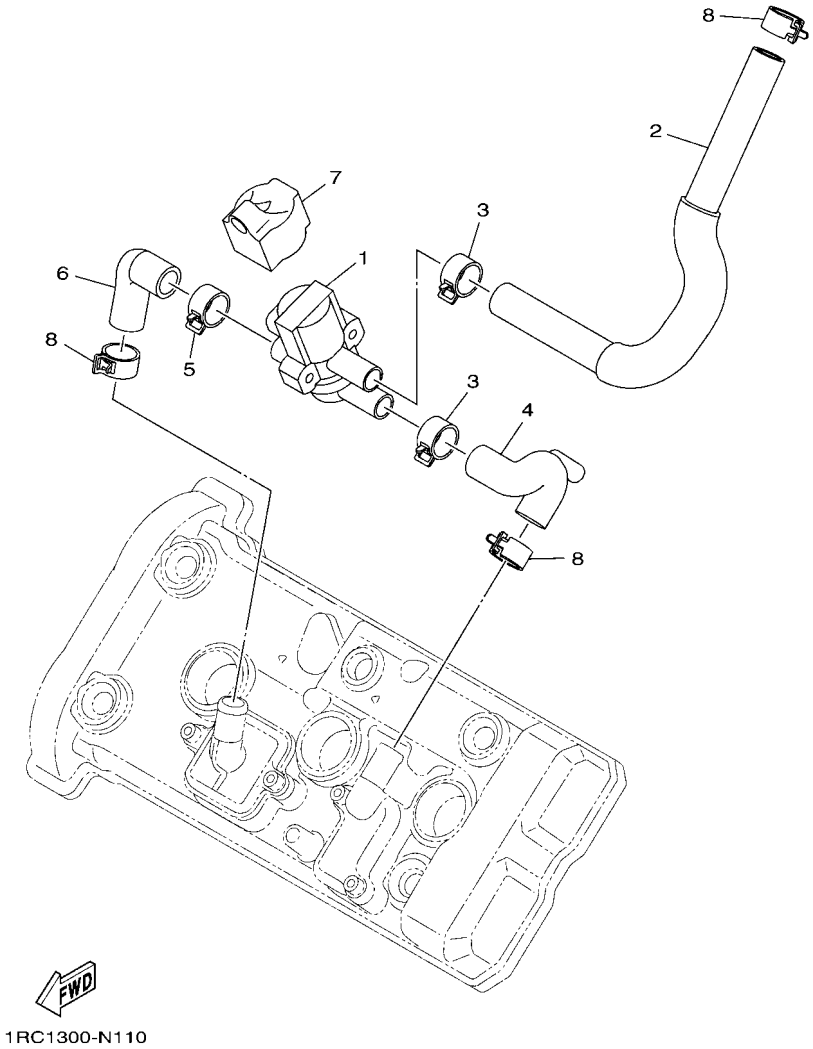

1RC1300-N110

FIG. 11 AIR INDUCTION SYSTEM

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	2S3–14840–00	AIR CUT VALVE ASSY	1	1				
2	1RC–14881–00	HOSE, BEND 1	1	1				
3	90467–17089	CLIP	2	2				
4	1RC–14882–00	HOSE, BEND 2	1	1				
5	90467–17089	CLIP	1	1				
6	1RC–14883–00	HOSE, BEND 3	1	1				
7	1RC–1445C–00	HOLDER	1	1				
8	90467–17003	CLIP	3	3				

FIG. 12 EXHAUST

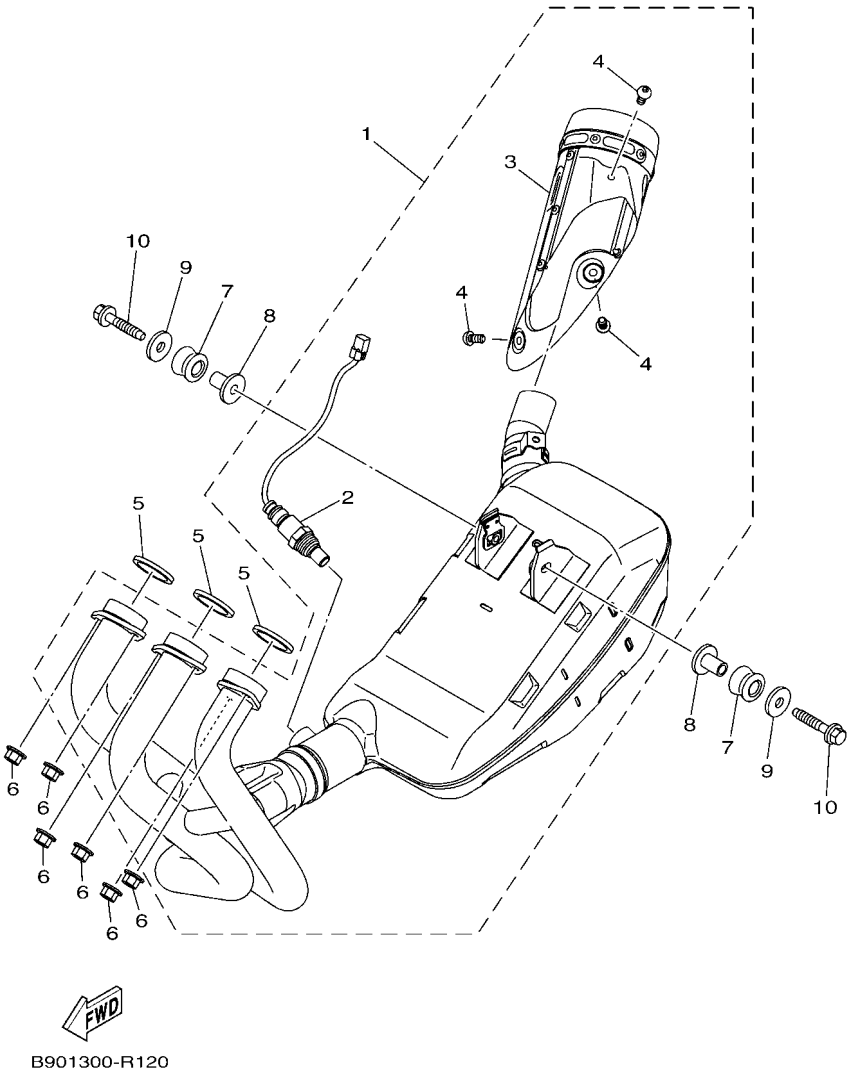

B901300-R120

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–14710–00	MUFFLER ASSY 1	1	1				
2	59C–8592A–00	.SENSOR, OXYGEN	1	1				
3	B90–14708–00	.PROTECTOR ASSY	1	1				
4	90111–06099	.BOLT,HEX. SOCKET BUTTON	3	3				
5	4FM–14613–00	GASKET, EXHAUST PIPE	3	3				
6	90179–08410	NUT	6	6				
7	5VY–14747–00	DAMPER, MUFFLER	2	2				
8	90387–08021	COLLAR	2	2				
9	90201–087G2	WASHER, PLATE	2	2				
10	90109–08170	BOLT	2	2				

FIG. 13 CRANKCASE

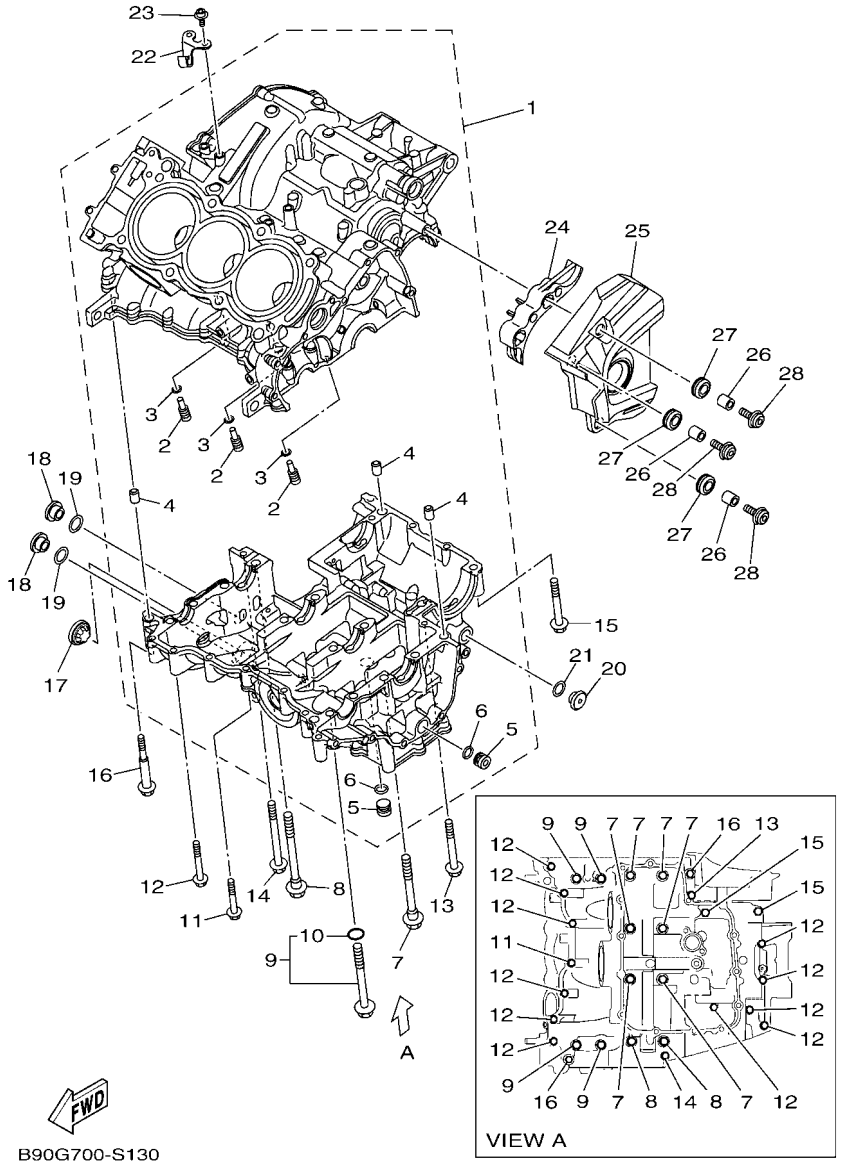

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	BS2–15100–09	CRANKCASE ASSY	1	1				
2	5EB–15155–00	.NOZZLE 3	3	3				
3	93210–04092	.O-RING	3	3				
4	99530–10014	.PIN, DOWEL	3	3				
5	90338–16262	.PLUG	2	2				
6	93210–12790	.O-RING	2	2				
7	90119–09013	BOLT, WITH WASHER	6	6				
8	90119–09010	BOLT, WITH WASHER	2	2				
9	23P–15156–00	BOLT, CRANKCASE JOURNAL	4	4				
10	93210–07540	.O-RING	1	1				
11	95812–06040	BOLT, FLANGE	1	1				
12	95812–06050	BOLT, FLANGE	11	11				
13	95812–06065	BOLT, FLANGE	1	1				
14	90105–06202	BOLT, FLANGE	1	1				
15	95812–08060	BOLT, FLANGE	2	2				
16	90109–06100	BOLT	2	2				
17	2H7–15361–00	GAUGE, LEVEL	1	1				
18	36Y–15189–00	PLUG	2	2				
19	93210–16325	O-RING	2	2				
20	90340–14011	PLUG, STRAIGHT SCREW	1	1				
21	93210–14369	O-RING	1	1				
22	1RC–15441–00	HOLDER, CLUTCH CABLE	1	1				
23	90110–06108	BOLT, HEXAGON SOCKET HEAD	2	2				
24	1RC–15377–00	GUIDE, INLET	1	1				
25	1RC–15418–00	COVER, CHAIN CASE	1	1				
26	90387–06286	COLLAR	3	3				
27	90480–13018	GROMMET	3	3				

FIG. 13 CRANKCASE

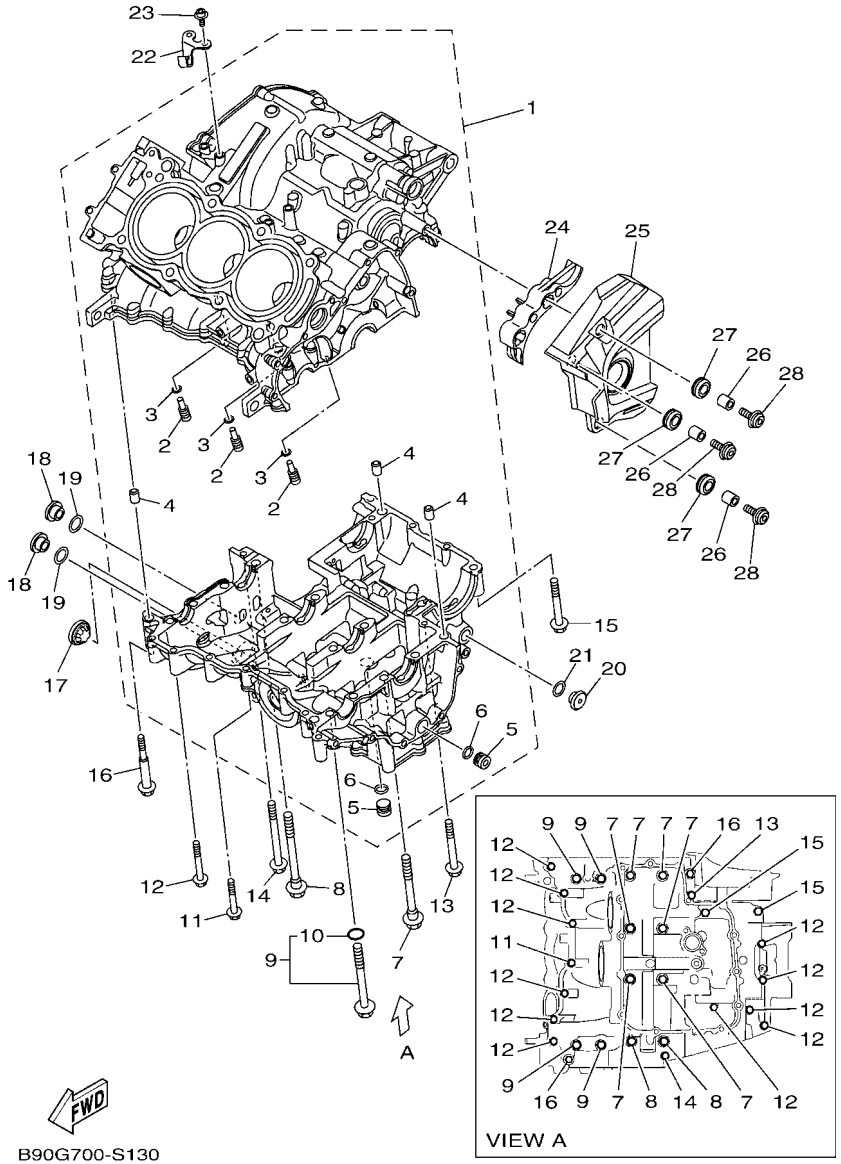

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90111–06130	BOLT, HEX.SOCKET BUTTON	3	3				

FIG. 14 CRANKCASE COVER 1

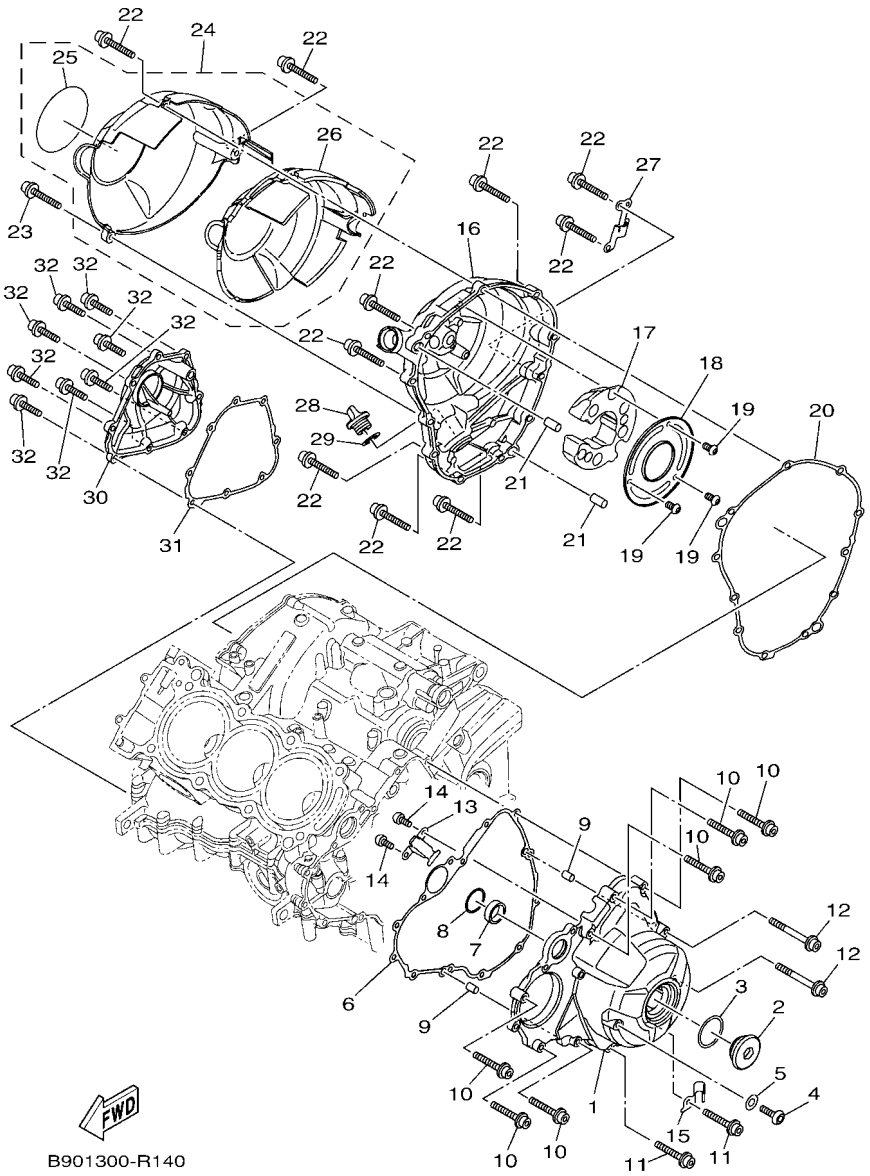

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–15411–00	COVER, CRANKCASE 1	1	1				
2	90340–36003	PLUG, STRAIGHT SCREW	1	1				
3	93210–357A3	O-RING	1	1				
4	92017–08012	BOLT, BUTTON HEAD	1	1				
5	90430–08143	GASKET	1	1				
6	1RC–15451–00	GASKET, CRANKCASE COVER 1	1	1				
7	1RC–12564–00	PIPE, WATER	1	1				
8	93210–28543	O-RING	1	1				
9	99530–08012	PIN, DOWEL	2	2				
10	90110–06388	BOLT, HEXAGON SOCKET HEAD	6	6				
11	90110–06389	BOLT, HEXAGON SOCKET HEAD	2	2				
12	90110–06394	BOLT, HEXAGON SOCKET HEAD	2	2				
13	1RC–15484–00	CLAMP 2	1	1				
14	90110–06168	BOLT, HEXAGON SOCKET HEAD	2	2				
15	1RC–15199–00	BRACKET	1	1				
16	1RC–15421–10	COVER, CRANKCASE 2	1	1				
17	B90–15316–00	DAMPER 1	1	1				
18	B90–15492–00	COVER	1	1				
19	90149–06158	SCREW	3	3				
20	1RC–15461–00	GASKET, CRANKCASE COVER 2	1	1				
21	93610–20189	PIN, DOWEL	2	2				
22	90110–06388	BOLT, HEXAGON SOCKET HEAD	10	10				
23	90110–06321	BOLT, HEXAGON SOCKET HEAD	1	1				
24	B90–15490–00	COVER ASSY	1	1				
25	B90–15494–00	.SEAL, PROTECTOR	1	1				
26	B90–15326–00	.DAMPER 2	1	1				
27	1RC–15191–00	PLATE	1	1				

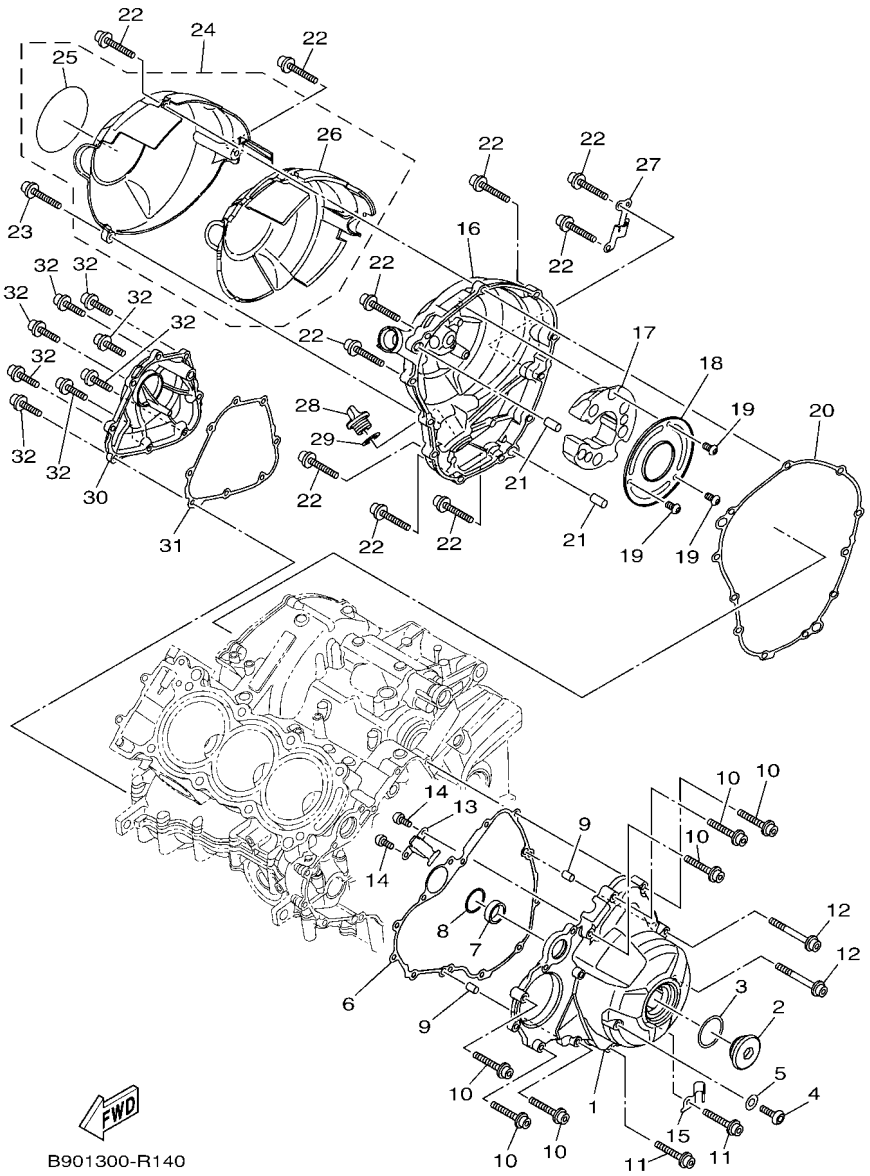

FIG. 14 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	5GJ–15363–10	PLUG, OIL	1	1				
29	93210–19123	O-RING	1	1				
30	1RC–15416–10	COVER, OIL PUMP	1	1				
31	1RC–15456–00	GASKET, OIL PUMP COVER 1	1	1				
32	90110–06396	BOLT, HEXAGON SOCKET HEAD	8	8				

FIG. 15 STARTER

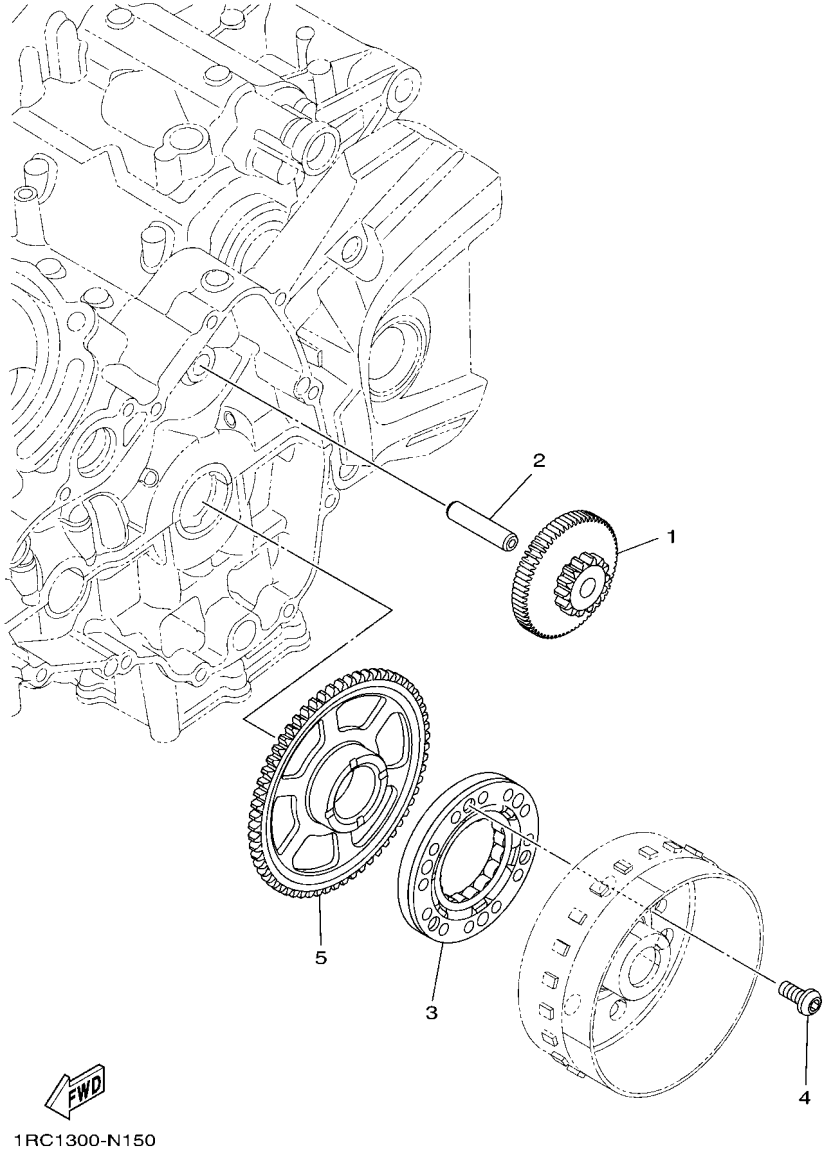

1RC1300-N150

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–15512–00	GEAR, IDLER 1	1	1				
2	5EB–15521–00	SHAFT 1	1	1				
3	1RC–15590–00	STARTER ONE-WAY ASSY	1	1				
4	90149–08030	SCREW	3	3				
5	1RC–15515–00	GEAR 3	1	1				

FIG. 16 CLUTCH

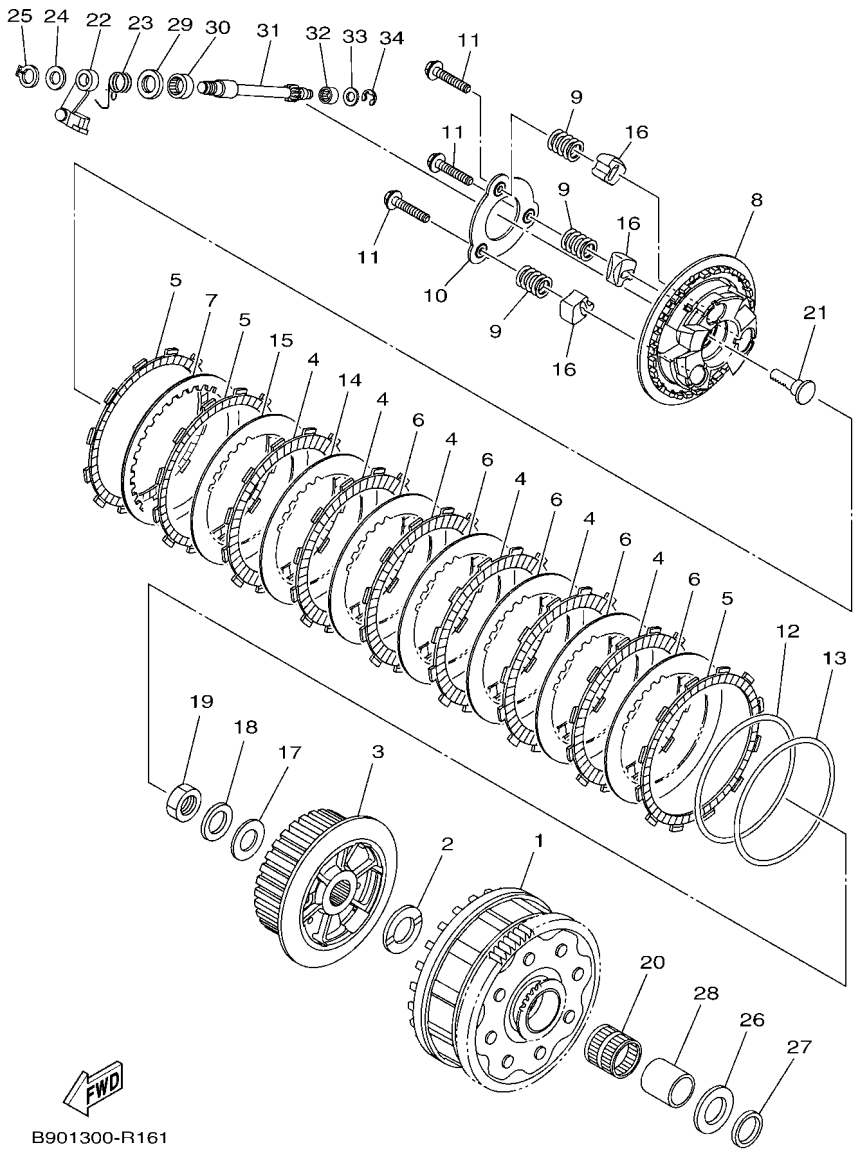

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–16150–00	PRIMARY DRIVEN GEAR COMP.	1	1				
2	5VY–16154–00	PLATE, THRUST 1	1	1				
3	B90–16371–00	BOSS, CLUTCH	1	1				
4	5TA–16321–00	PLATE, FRICTION	6	6				
5	B90–16331–00	PLATE, FRICTION 2	3	3				
6	5VY–16325–00	PLATE, CLUTCH 2	5	5				(T2.0)
7	1TD–16324–00	PLATE, CLUTCH 1	1	1				
8	B90–16350–00	PRESSURE PLATE ASSY	1	1				
9	B90–16173–00	SPRING, COMPRESSION	3	3				
10	B90–16352–00	PLATE, PRESSURE 2	1	1				
11	2CR–16337–00	SCREW, SPRING	3	3				
12	1TD–16383–00	SPRING.,CUSHION	1	1				
13	1TD–16384–00	PLATE, SEAT	1	1				
14	4B1–16325–00	PLATE, CLUTCH 2	1	1				UR (T2.3)
	4B1–16324–00	PLATE, CLUTCH 1	1	1				UR (T1.6)
	5VY–16325–00	PLATE, CLUTCH 2	1	1				UR (T2.0)
15	4B1–16325–00	PLATE, CLUTCH 2	1	1				UR (T2.3)
	4B1–16324–00	PLATE, CLUTCH 1	1	1				UR (T1.6)
	5VY–16325–00	PLATE, CLUTCH 2	1	1				UR (T2.0)
16	1TD–16178–00	ABSORBER 3	3	3				
17	90201–20030	WASHER, PLATE	1	1				
18	90208–20001	WASHER, CONICAL SPRING	1	1				
19	90179–20011	NUT	1	1				
20	93310–33277	BEARING	1	1				
21	4XV–16356–01	ROD, PUSH 1	1	1				
22	1RC–16340–00	PUSH LEVER ASSY	1	1				
23	90508–18051	SPRING, TORSION	1	1				

FIG. 16 CLUTCH

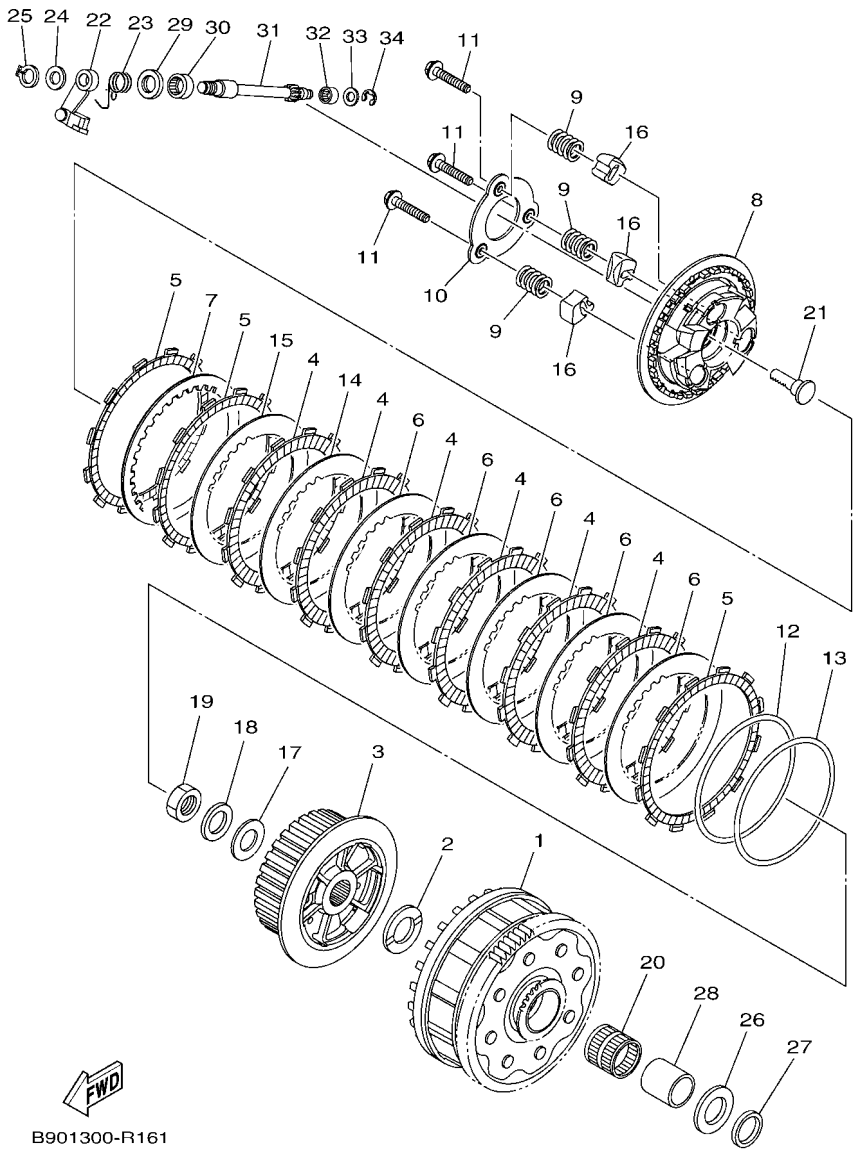

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
24	90201–10029	WASHER, PLATE	1	1				
25	99009–10400	CIRCLIP	1	1				
26	5VY–16164–00	PLATE, THRUST 2	1	1				
27	2C0–16164–00	PLATE, THRUST 2	1	1				
28	1RC–16181–00	SPACER 1	1	1				
29	93102–15212	OIL SEAL	1	1				
30	93315–21570	BEARING	1	1				
31	5VY–16382–10	AXLE, PUSH LEVER	1	1				
32	93317–11096	BEARING	1	1				
33	92907–08600	WASHER, PLATE	1	1				
34	99001–07600	CIRCLIP	1	1				

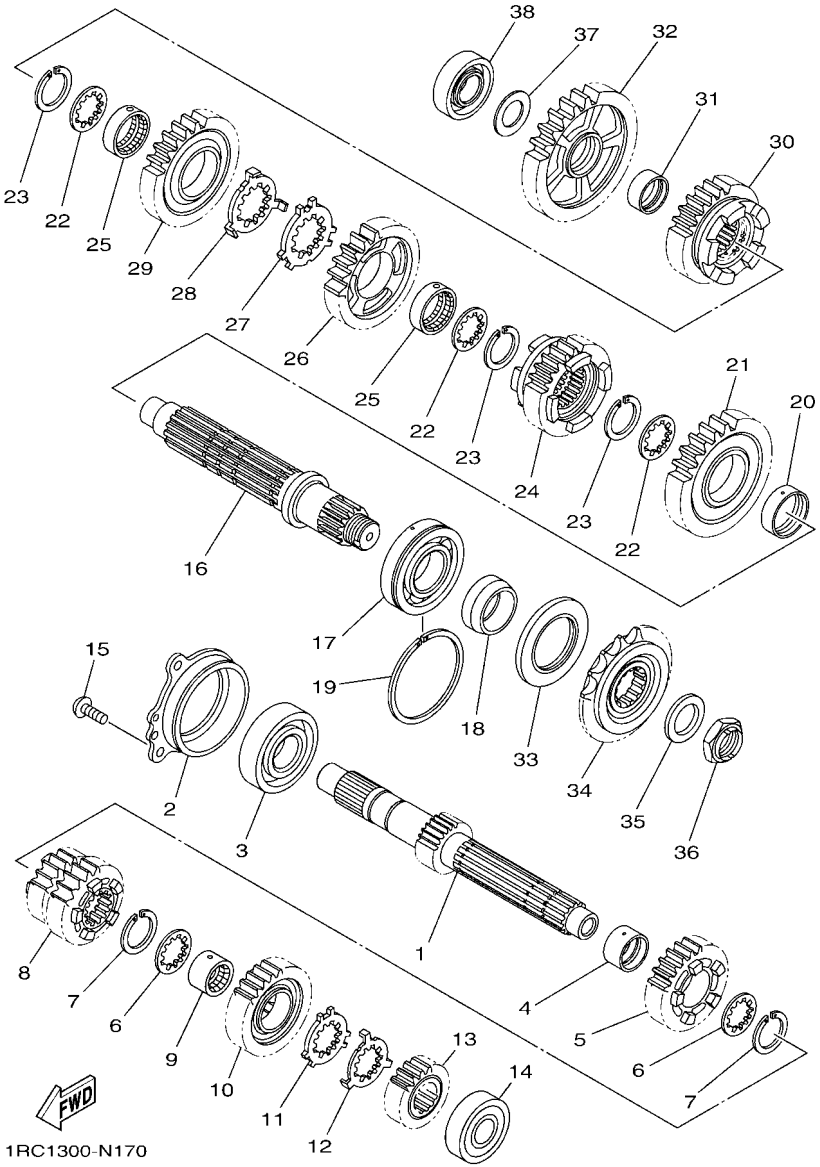

FIG. 17 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–17411–00	AXLE, MAIN (15T)	1	1				
2	1RC–15163–00	HOUSING, BEARING 1	1	1				
3	93306–30534	BEARING	1	1				
4	90387–25030	COLLAR	1	1				
5	1RC–17151–00	GEAR, 5TH PINION (21T)	1	1				
6	90209–21332	WASHER	2	2				
7	93440–25186	CIRCLIP	2	2				
8	1RC–17131–00	GEAR, 3RD PINION (21T/21T)	1	1				
9	90387–21003	COLLAR	1	1				
10	1RC–17161–00	GEAR, 6TH PINION (27T)	1	1				
11	90209–22352	WASHER	1	1				
12	90209–21351	WASHER	1	1				
13	1RC–17121–00	GEAR, 2ND PINION (19T)	1	1				
14	93306–20464	BEARING	1	1				
15	90149–06082	SCREW	3	3				
16	1RC–17421–00	AXLE, DRIVE	1	1				
17	93306–20663	BEARING	1	1				
18	90387–30012	COLLAR	1	1				
19	93440–64199	CIRCLIP	1	1				
20	90387–31003	COLLAR	1	1				
21	2PP–17221–00	GEAR, 2ND WHEEL (38T)	1	1				
22	90209–28008	WASHER	3	3				
23	93440–31187	CIRCLIP	3	3				
24	2PP–17261–00	GEAR, 6TH WHEEL (28T)	1	1				
25	90387–28004	COLLAR	2	2				
26	1RC–17241–00	GEAR, 4TH WHEEL (29T)	1	1				
27	90214–29002	WASHER, CLAW	1	1				

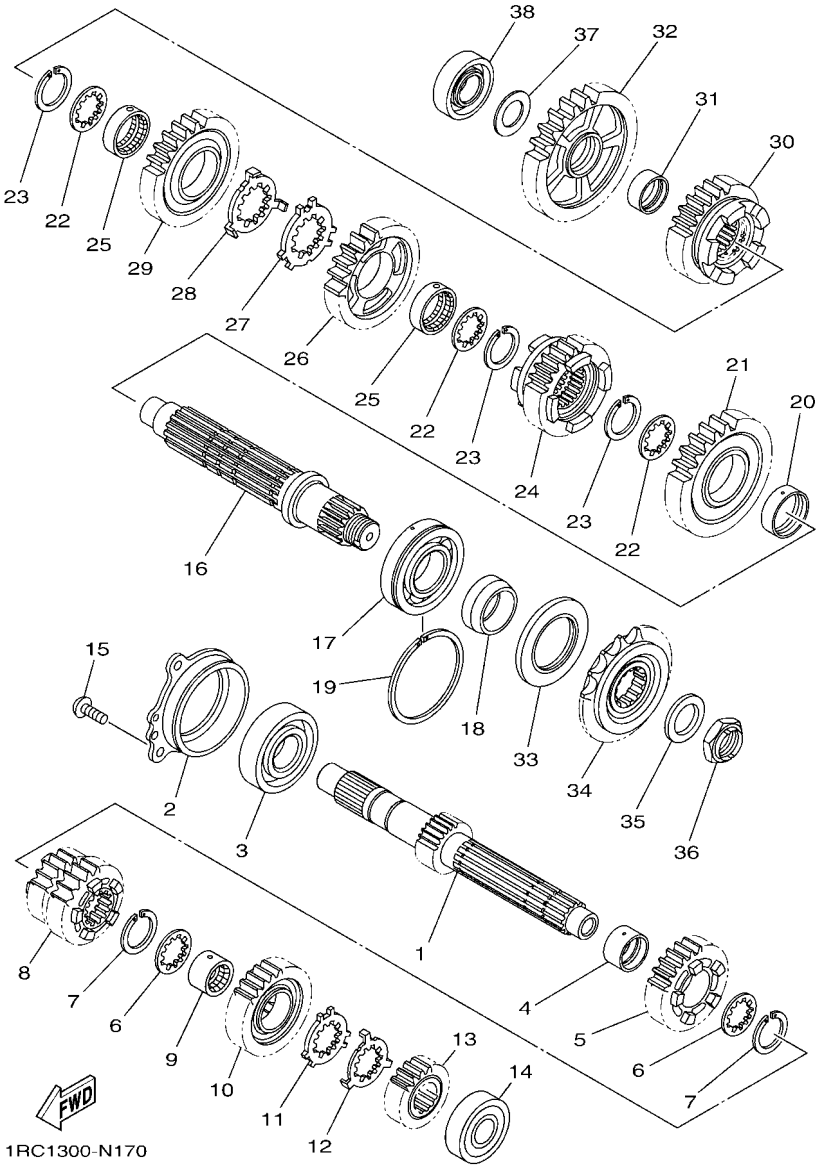

FIG. 17 TRANSMISSION

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90214–28002	WASHER, CLAW	1	1				
29	1RC–17231–00	GEAR, 3RD WHEEL (34T)	1	1				
30	1RC–17251–10	GEAR, 5TH WHEEL (25T)	1	1				
31	90387–25008	COLLAR	1	1				
32	1RC–17211–00	GEAR, 1ST WHEEL (40T)	1	1				
33	93102–40030	OIL SEAL	1	1				
34	5PS–17460–00	SPROCKET, DRIVE (16T)	1	1				
35	90208–22002	WASHER, CONICAL SPRING	1	1				
36	90179–22018	NUT	1	1				
37	90201–20008	WASHER, PLATE	1	1				
38	93306–20464	BEARING	1	1				

FIG. 18 SHIFT CAM & FORK

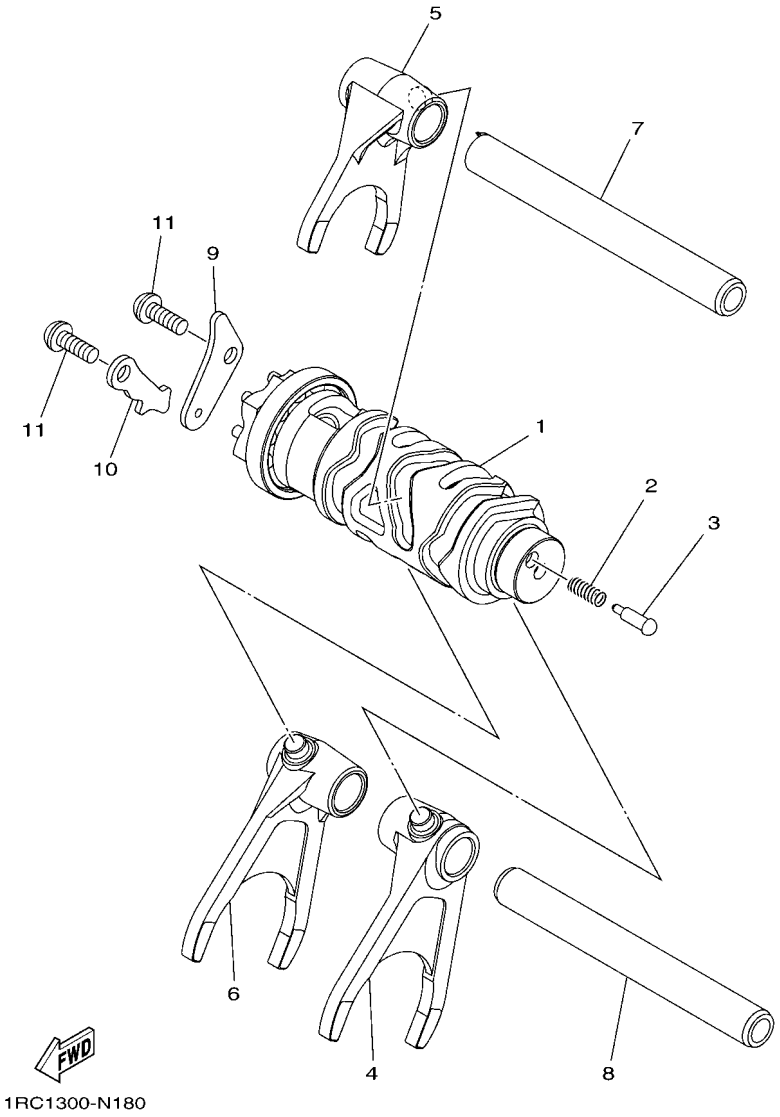

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–18540–00	SHIFT CAM ASSY	1	1				
2	90501–06022	SPRING, COMPRESSION	1	1				
3	3D7–18542–00	POINT, NEUTRAL	1	1				
4	1RC–18511–00	FORK, SHIFT 1	1	1				
5	1RC–18512–00	FORK, SHIFT 2	1	1				
6	1RC–18513–00	FORK, SHIFT 3	1	1				
7	1RC–18531–00	BAR, SHIFT FORK GUIDE 1	1	1				
8	20S–18535–00	BAR, SHIFT FORK GUIDE 2	1	1				
9	2C0–18536–00	STOPPER, SHIFT BAR	1	1				
10	1RC–18562–00	PLATE, STOPPER 2	1	1				
11	90149–06158	SCREW	2	2				

FIG. 19 SHIFT SHAFT

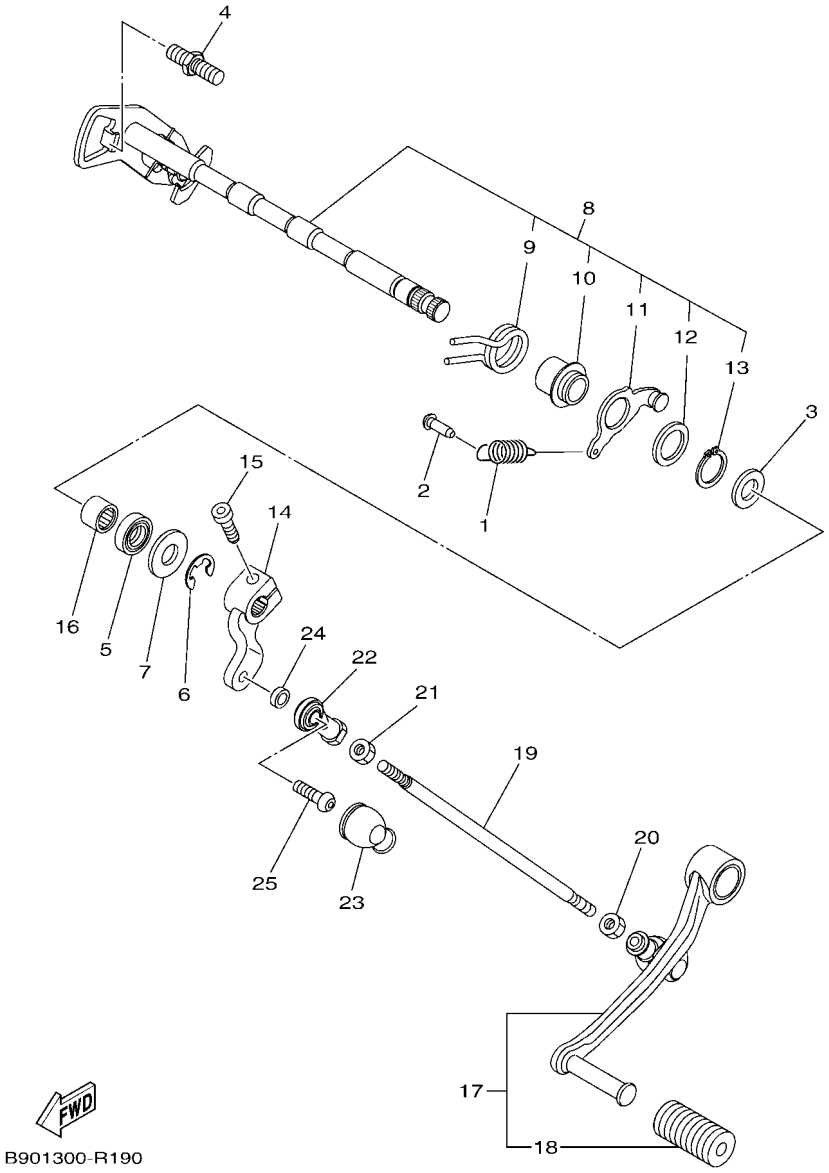

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	90506–18021	SPRING, TENSION	1	1				
2	132–16346–00	HOOK, SPRING	1	1				
3	90201–127E1	WASHER, PLATE	1	1				
4	1D7–18127–00	STOPPER, SCREW	1	1				
5	93102–12106	OIL SEAL (SD 12-22-5 HS)	1	1				
6	99002–10600	CIRCLIP	1	1				
7	90201–12575	WASHER, PLATE	1	1				
8	1RC–18101–01	SHIFT SHAFT ASSY	1	1				
9	90508–32141	.SPRING, TORSION	1	1				
10	2C0–18175–00	.SPACER	1	1				
11	1RC–18140–00	.STOPPER LEVER ASSY	1	1				
12	90201–177G4	.WASHER, PLATE	1	1				
13	99009–17400	.CIRCLIP	1	1				
14	1RC–18112–00	ARM, SHIFT	1	1				
15	91312–06020	BOLT	1	1				
16	93317–11295	BEARING	1	1				
17	1RC–18110–00	SHIFT PEDAL ASSY	1	1				
18	5EB–18113–00	.COVER, SHIFT PEDAL	1	1				
19	3VD–18115–00	ROD, SHIFT	1	1				
20	90170–06228	NUT (COUNTER CLOCKWISE)	1	1				
21	95304–06700	NUT	1	1				
22	5VX–18116–00	JOINT, ROD 1	1	1				
23	5VX–18154–00	COVER, DUST	1	1				
24	90387–06322	COLLAR	1	1				
25	90111–06098	BOLT,HEX. SOCKET BUTTON	1	1				

FIG. 20 FRAME

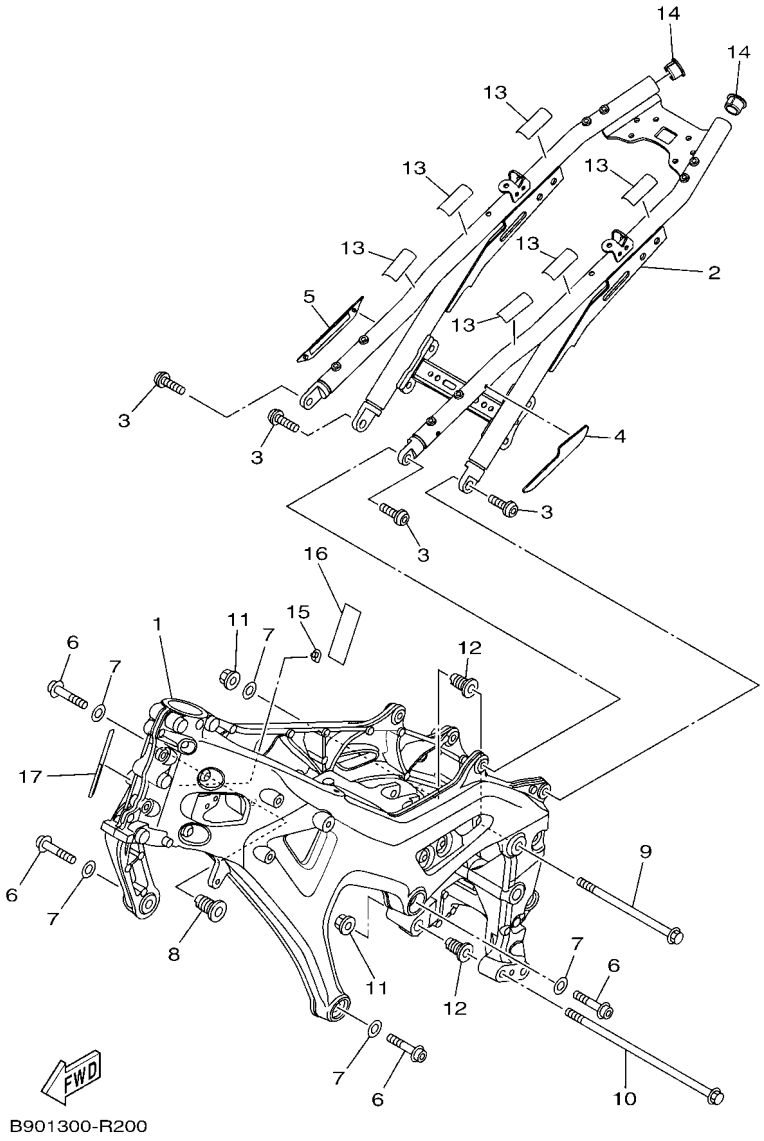

B901300-R200

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–21110–40	FRAME COMP.	1	1				
2	B90–21190–00	REAR FRAME COMP.	1	1				
3	90149–10059	SCREW	4	4				
4	1RC–2117X–00	COVER 9	1	1				
5	1RC–2117Y–00	COVER 10	1	1				
6	90110–10043	BOLT, HEXAGON SOCKET HEAD	4	4				
7	90201–10075	WASHER, PLATE	5	5				
8	1RC–21495–00	BOLT, ENGINE ADJUSTING	1	1				
9	90105–10391	BOLT, FLANGE	1	1				
10	90105–10437	BOLT, FLANGE	1	1				
11	90179–10024	NUT	2	2				
12	4C8–21495–00	BOLT, ENGINE ADJUSTING	2	2				
13	5VN–21268–00	SEAL	6	6				
14	90338–23172	PLUG	2	2				
15	5VX–21289–00	PLUG, BLIND	1	1				
16	34D–82176–00	DAMPER	1	1				
17	1RC–2117G–00	PROTECTOR	1	1				

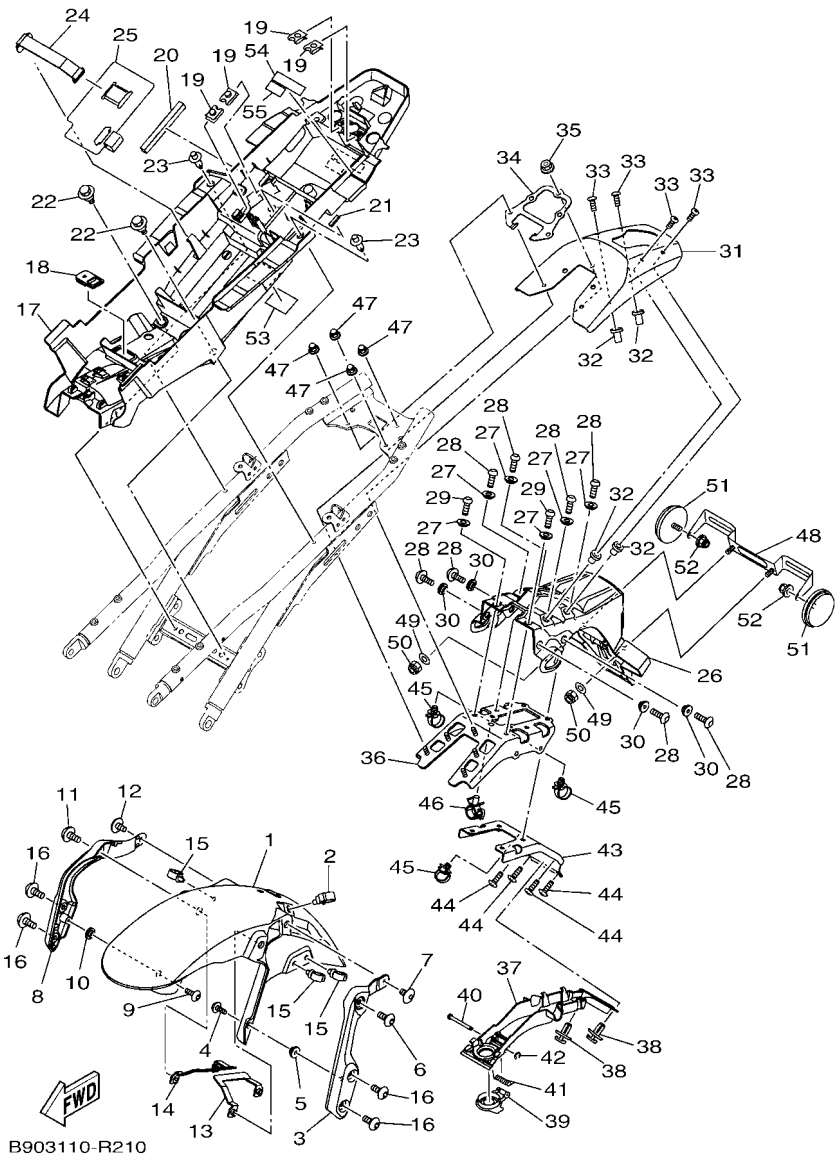

FIG. 21 FENDER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–21511–00–P1	FENDER, FRONT	1	1				MBL2 FOR NBM4
2	90464–16012	CLAMP	1	1				
3	B90–23361–00	ARM 1	1	1				
4	92017–05014	BOLT, BUTTON HEAD	1	1				
5	90387–05021	COLLAR	1	1				
6	90111–06127	BOLT,HEX. SOCKET BUTTON	1	1				
7	90110–06102	BOLT, HEXAGON SOCKET HEAD	1	1				
8	B90–23371–00	ARM 2	1	1				
9	92017–05014	BOLT, BUTTON HEAD	1	1				
10	90387–05021	COLLAR	1	1				
11	90111–06127	BOLT,HEX. SOCKET BUTTON	1	1				
12	90110–06102	BOLT, HEXAGON SOCKET HEAD	1	1				
13	B90–21513–00	STAY, FENDER 1	1	1				
14	B90–21514–00	STAY, FENDER 2	1	1				
15	90464–18002	CLAMP	3	3				
16	90111–06127	BOLT,HEX. SOCKET BUTTON	4	4				
17	B90–8212B–00	BOX, BATTERY 1	1	1				
18	2DR–26199–00	PLUG, BLIND	1	1				
19	90183–06069	NUT, SPRING	4	4				
20	32D–84553–00	DAMPER	1	1				
21	4B5–21717–00	DAMPER	1	1				
22	90109–06202	BOLT	2	2				
23	90269–07007	RIVET	2	2				
24	1RC–82137–00	BAND, BATTERY	1	1				
25	B90–21691–00	FLAP	1	1				
26	B90–21629–00	GUARD, MUD	1	1				
27	90387–06040	COLLAR	6	6				

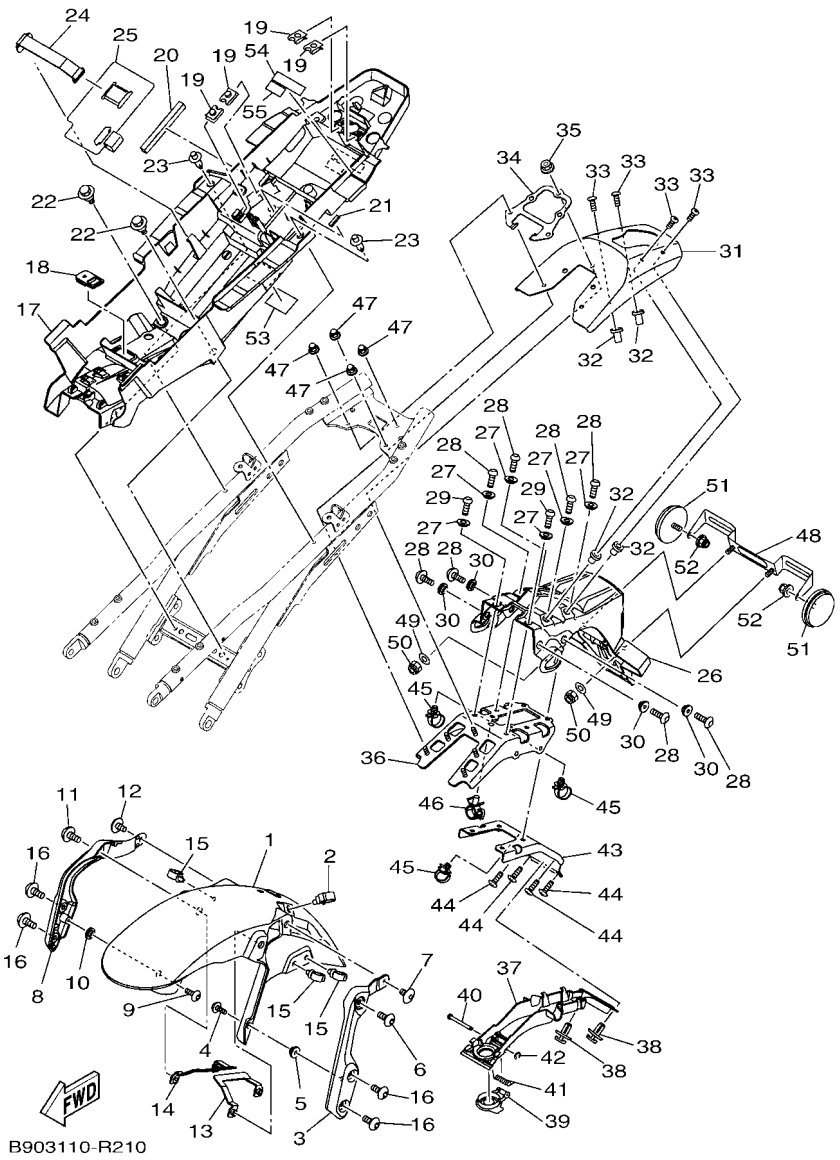

FIG. 21 FENDER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	92017–06016	BOLT, BUTTON HEAD	8	8				
29	90111–06104	BOLT,HEX. SOCKET BUTTON	2	2				
30	90387–06242	COLLAR	4	4				
31	B90–2164G–00–0X	STAY 2	1	1				MAT CLEAR
32	90179–05523	NUT	4	4				
33	2CR–28333–00	BOLT	4	4				
34	B90–21998–00	SPACER	1	1				
35	95707–06500	NUT, FLANGE	1	1				
36	B90–2164F–00	STAY 1	1	1				
37	B90–2163E–00	COVER, REAR FENDER 2	1	1				
38	90269–07076	RIVET	2	2				
39	1RC–2465B–00	CAP, ROTOR	1	1				
40	90249–03002	PIN	1	1				
41	90508–09007	SPRING, TORSION	1	1				
42	93430–02001	CIRCLIP	1	1				
43	B90–21682–00	STAY, PLATE	1	1				
44	90160–05012	SCREW, ROUND TAPPING	4	4				
45	90464–30011	CLAMP	3	3				
46	90464–14013	CLAMP	1	1				
47	90176–06016	NUT, CAP	4	4				
48	1RC–84751–10	BRACKET, LICENSE	1	1				
49	92902–06600	WASHER, PLATE	2	2				
50	95607–06100	NUT, U	2	2				
51	449–85131–02	REFLECTOR, REAR 1	2	2				
52	95707–05500	NUT, FLANGE	2	2				
53	14B–21668–00	LABEL, TIRE	1	1				
54	3JJ–28446–A1	LABEL, CAUTION	1	1				

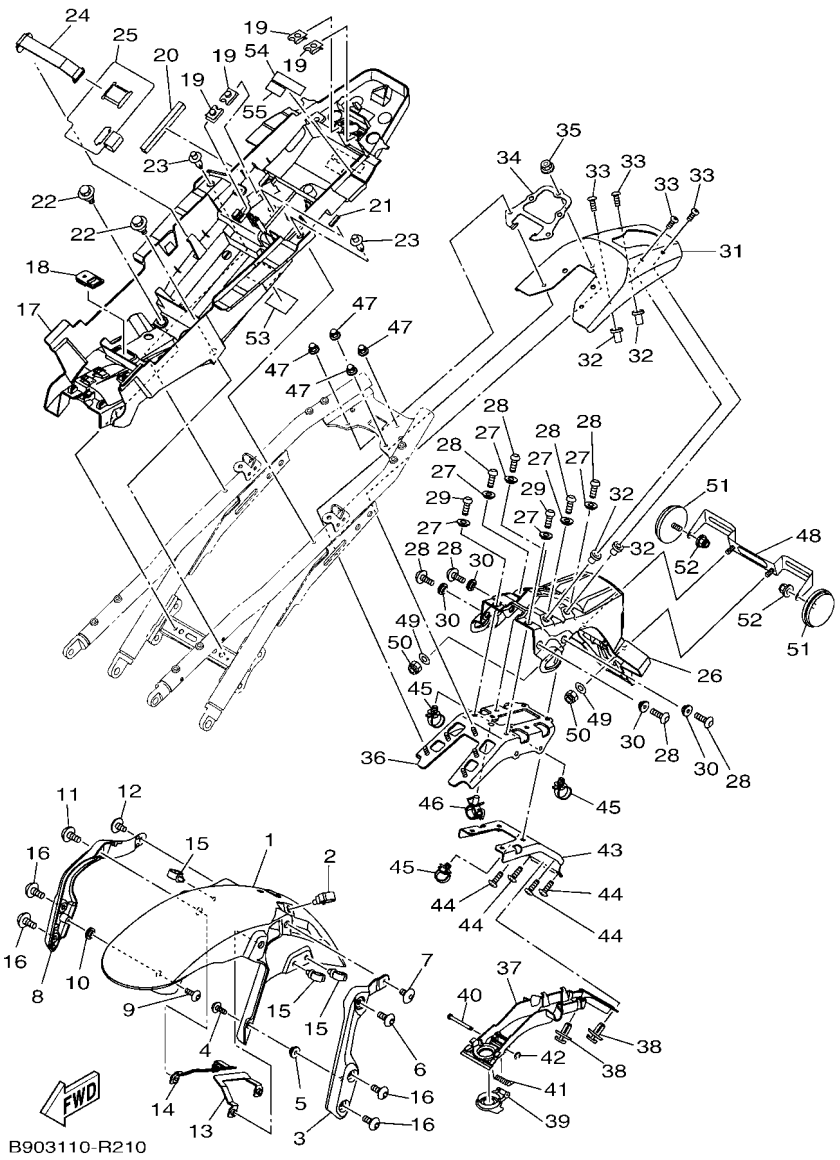

FIG. 21 FENDER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
55	3TB–24877–A0	LABEL, CAUTION	1	1				

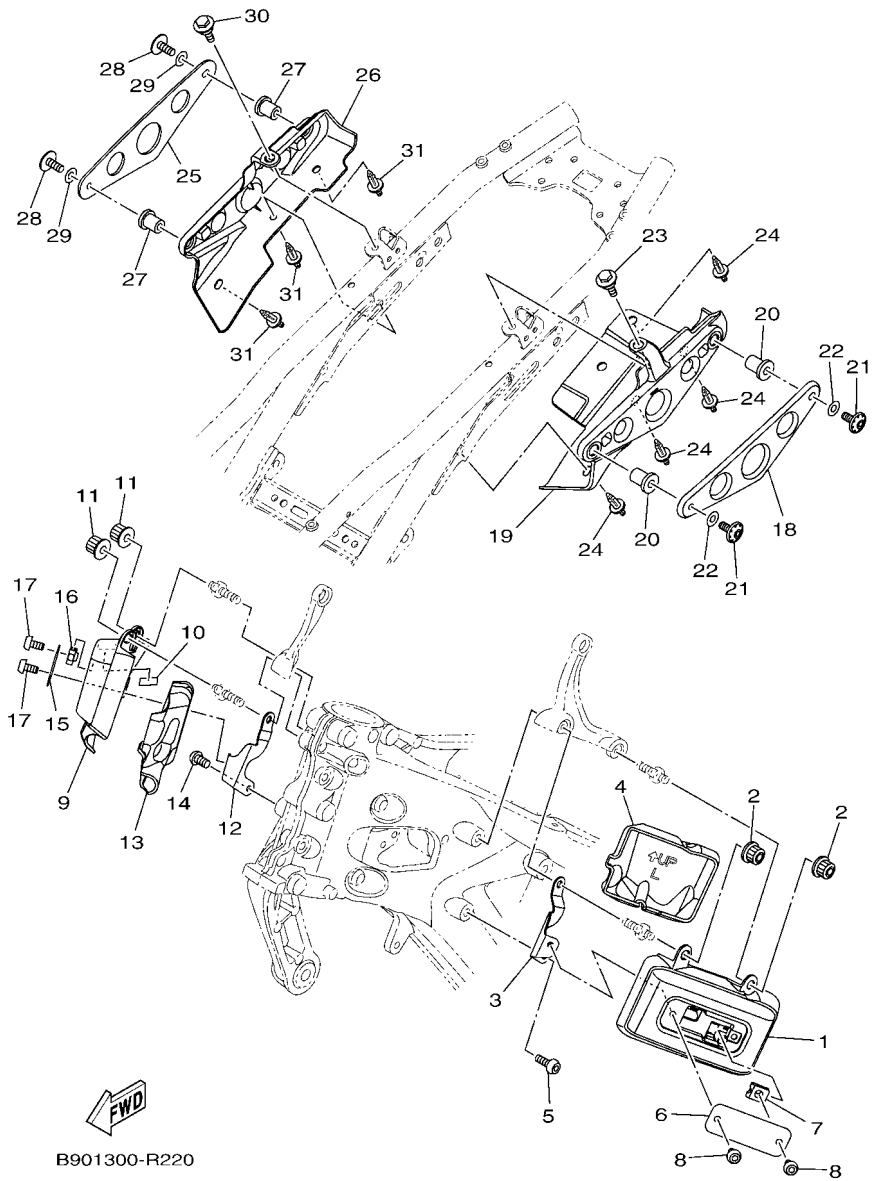

FIG. 22 SIDE COVER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–2172E–00–P0	STAY, SIDE COVER 1	1	1				MBL2 FOR NBM4
2	90179–06074	NUT	2	2				
3	B90–2172K–00	BRACKET 1	1	1				
4	B90–2198F–00	COVER 1	1	1				
5	92017–06012	BOLT, BUTTON HEAD	1	1				
6	B90–2176E–00	PLATE	1	1				
7	90183–05076	NUT, SPRING	1	1				
8	90111–05048	BOLT,HEX. SOCKET BUTTON	2	2				
9	B90–2174E–00–P0	STAY, SIDE COVER 2	1	1				MBL2 FOR NBM4
10	14B–22873–00	SEAL 1	1	1				
11	90179–06074	NUT	2	2				
12	B90–2172L–00	BRACKET 2	1	1				
13	B90–2198G–00	COVER 2	1	1				
14	92017–06012	BOLT, BUTTON HEAD	1	1				
15	B90–2176E–00	PLATE	1	1				
16	90183–05076	NUT, SPRING	1	1				
17	90111–05048	BOLT,HEX. SOCKET BUTTON	2	2				
18	B90–21711–00	COVER, SIDE 1	1	1				
19	B90–21731–00	COVER, SIDE 3	1	1				
20	90179–06520	NUT	2	2				
21	90109–06313	BOLT	2	2				
22	90202–06007	WASHER, PLATE	2	2				
23	90109–06245	BOLT	1	1				
24	90269–07007	RIVET	4	4				
25	B90–21711–00	COVER, SIDE 1	1	1				
26	B90–21741–00	COVER, SIDE 4	1	1				
27	90179–06520	NUT	2	2				

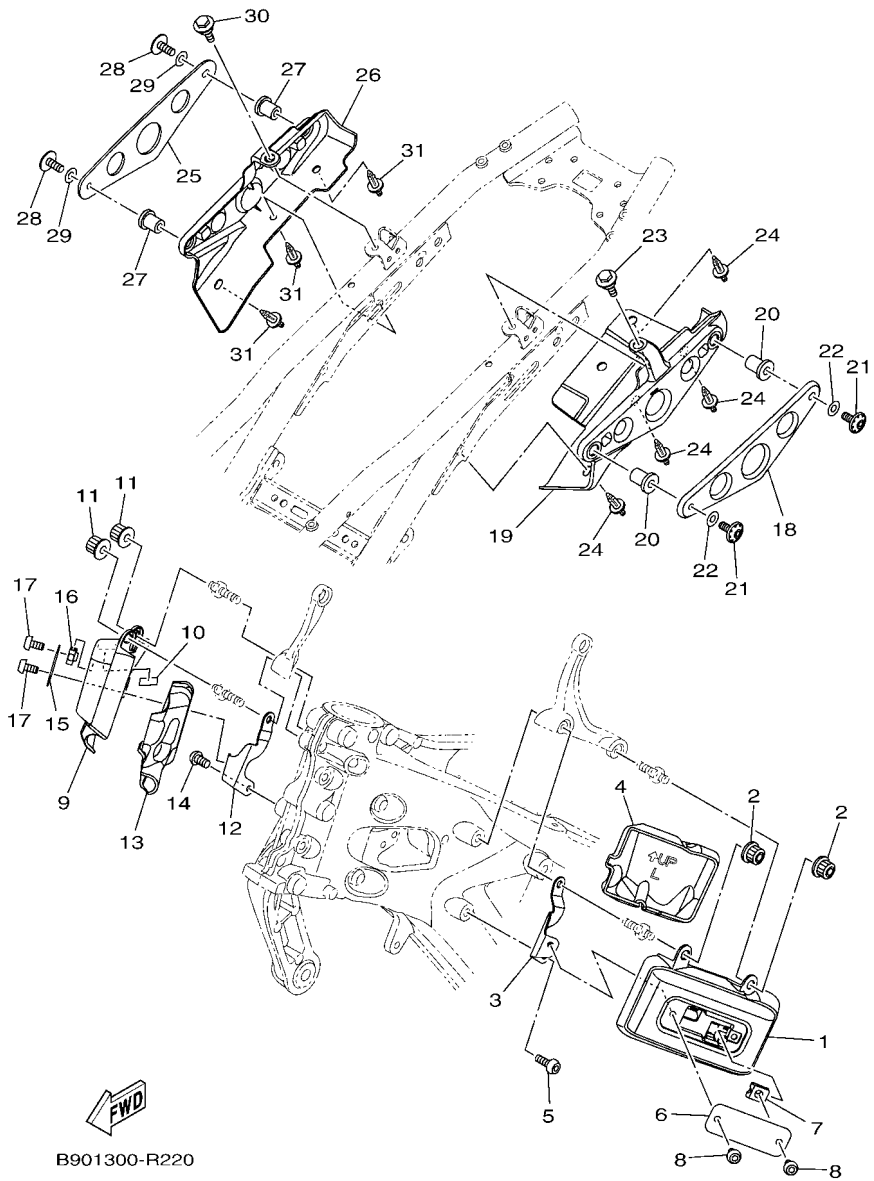

FIG. 22 SIDE COVER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90109–06313	BOLT	2	2				
29	90202–06007	WASHER, PLATE	2	2				
30	90109–06245	BOLT	1	1				
31	90269–07007	RIVET	3	3				

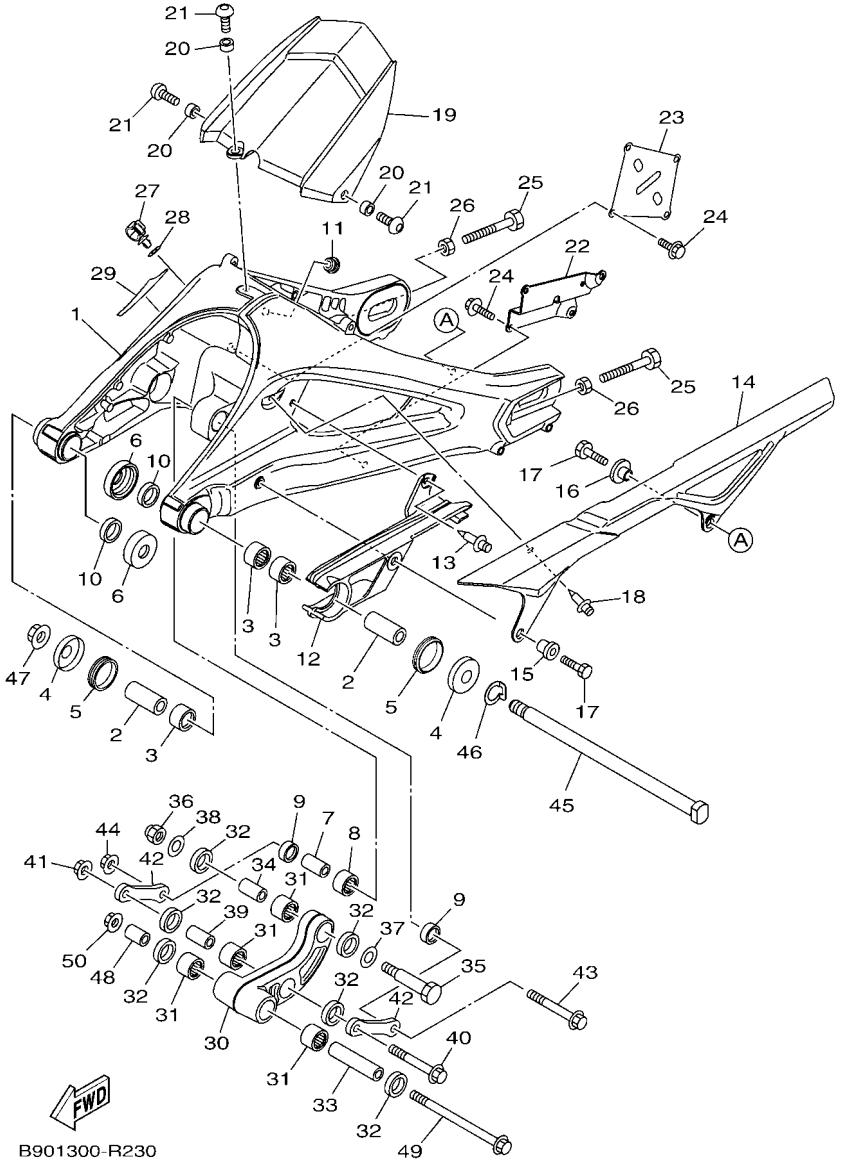

FIG. 23 REAR ARM

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–22110–01	REAR ARM COMP.	1	1				
2	90380–16134	BUSH, SOLID	2	2				
3	93317–22262	BEARING	3	3				
4	30X–2219X–00	COVER	2	2				
5	93108–35004	OIL SEAL (35-41-8)	2	2				
6	20S–22128–00	COVER, THRUST 1	2	2				
7	90387–102R4	COLLAR	1	1				
8	93315–31758	BEARING	1	1				
9	93109–17071	OIL SEAL	2	2				
10	93106–22002	OIL SEAL	2	2				
11	90480–12012	GROMMET	1	1				
12	1RC–22151–00	SEAL, GUARD	1	1				
13	90269–07007	RIVET	1	1				
14	1RC–22311–00	CASE, CHAIN	1	1				
15	90387–062X0	COLLAR	1	1				
16	90387–06066	COLLAR	1	1				
17	97002–06016	BOLT, HEXAGON	2	2				
18	90269–07007	RIVET	1	1				
19	1RC–21650–00	REAR FENDER COMP.	1	1				
20	90387–06022	COLLAR	3	3				
21	90111–06161	BOLT,HEX. SOCKET BUTTON	3	3				
22	1RC–2221A–00	BRACKET 1	1	1				
23	1RC–2221B–00	BRACKET 2	1	1				
24	90105–06126	BOLT, FLANGE	8	8				
25	90101–08013	BOLT	2	2				
26	95302–08600	NUT, HEXAGON	2	2				
27	90464–18002	CLAMP	1	1				

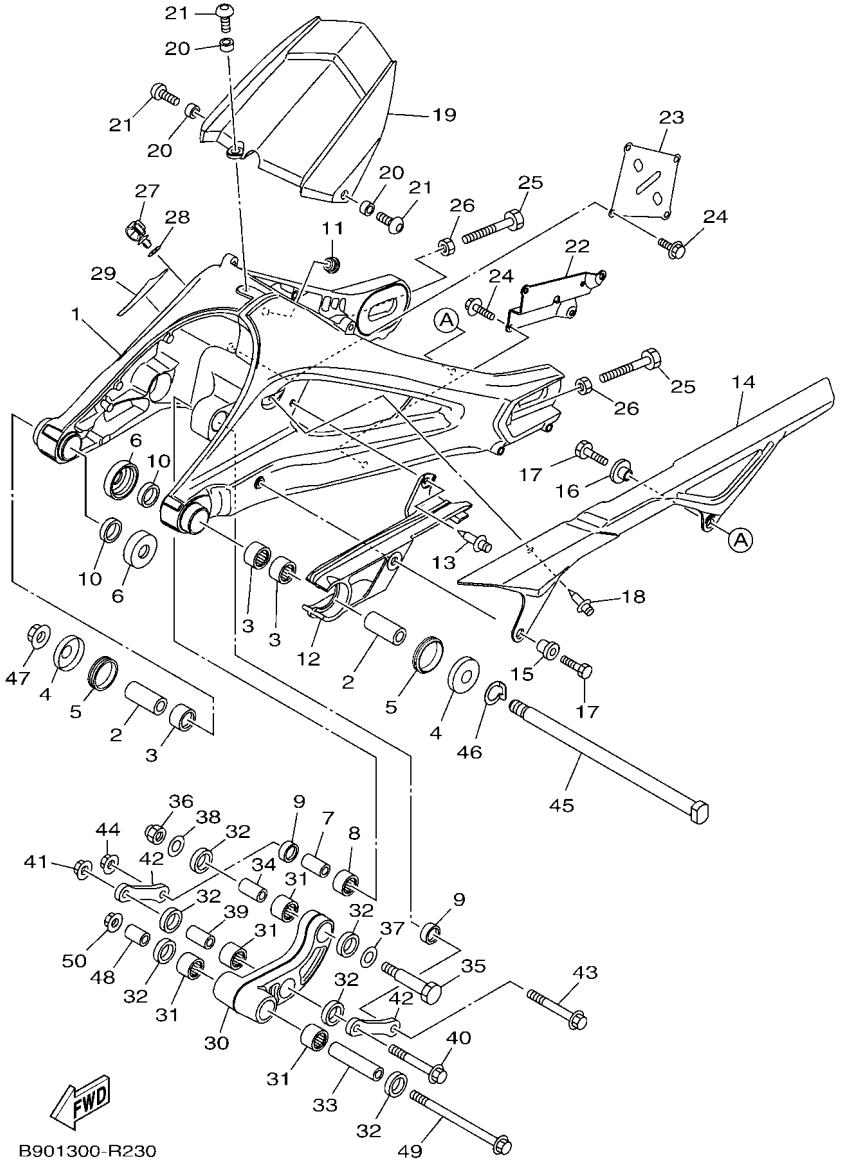

FIG. 23 REAR ARM

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90202–07164	WASHER, PLATE	1	1				
29	1RC–22358–00	SEAL 1	1	1				
30	1RC–2217A–00	ARM, RELAY	1	1				
31	93315–31758	BEARING	4	4				
32	93109–17071	OIL SEAL	6	6				
33	3GB–23448–00	SPACER	1	1				
34	90387–127W0	COLLAR	1	1				
35	90109–10027	BOLT	1	1				
36	95612–10100	NUT, U	1	1				
37	90201–13015	WASHER, PLATE	1	1				
38	90201–10035	WASHER, PLATE	1	1				
39	90387–102R4	COLLAR	1	1				
40	90105–10210	BOLT, FLANGE	1	1				
41	95602–10200	NUT, S/L FLANGE	1	1				
42	1RC–2217M–00	ARM 1	2	2				
43	90105–10210	BOLT, FLANGE	1	1				
44	95602–10200	NUT, S/L FLANGE	1	1				
45	46X–22141–00	SHAFT, PIVOT	1	1				
46	1RC–22159–00	WASHER, SPRING LOWER	1	1				
47	95602–14200	NUT, SELF-LOCKING	1	1				
48	90387–10106	COLLAR	1	1				
49	90105–10174	BOLT, FLANGE	1	1				
50	95602–10200	NUT, S/L FLANGE	1	1				

FIG. 24 REAR SUSPENSION

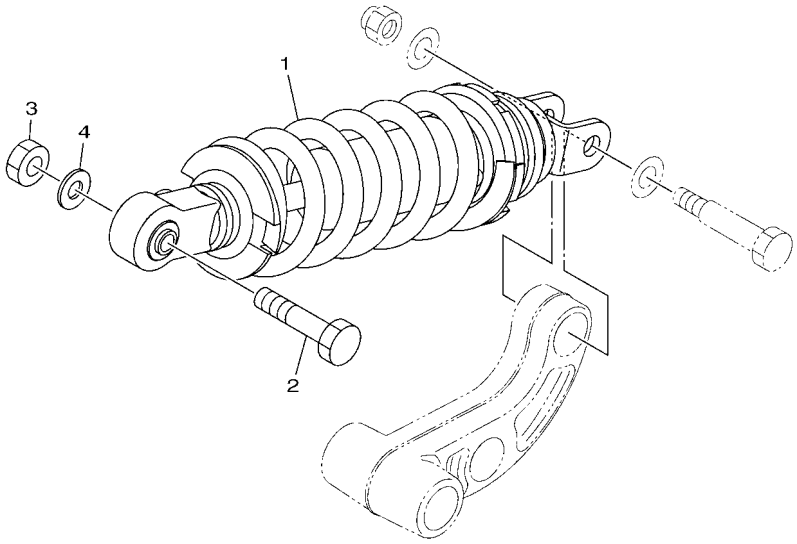

B901300-R240

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–22210–20	SHOCK ABSORBER ASSY, REAR	1	1				
2	90101–10042	BOLT	1	1				
3	95602–10100	NUT, U	1	1				
4	90201–101J1	WASHER, PLATE	1	1				

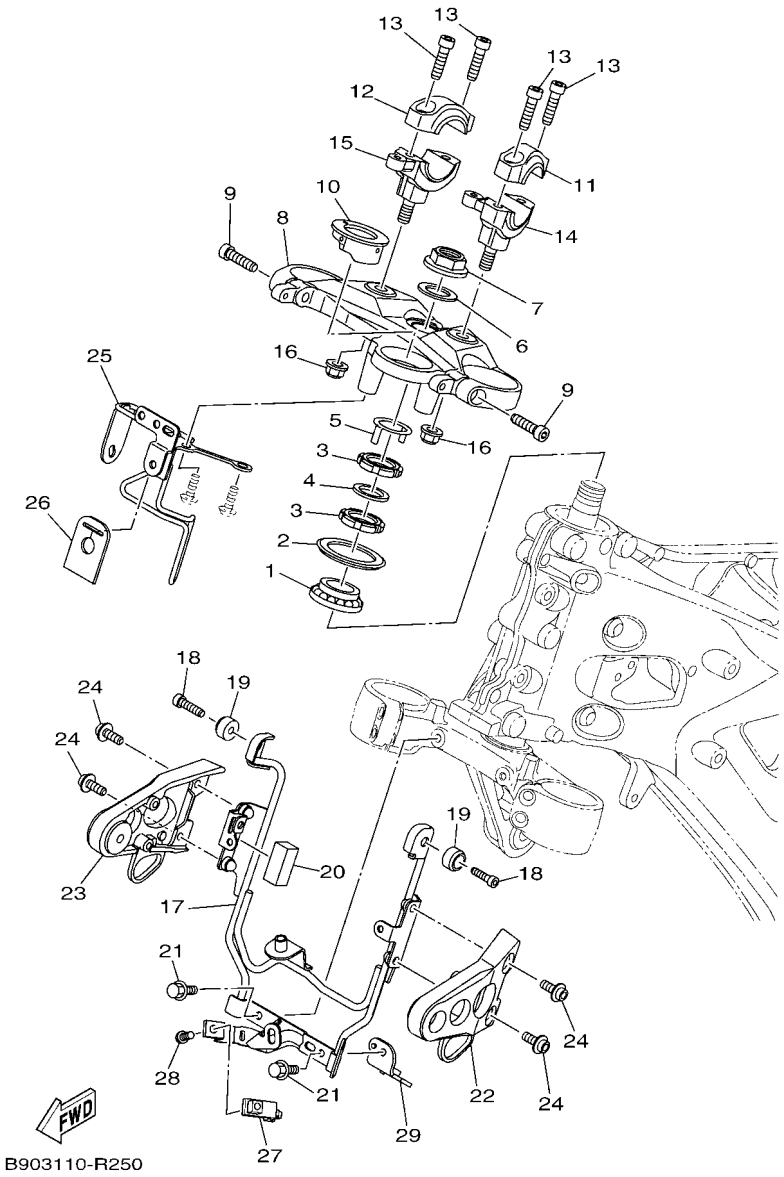

FIG. 25 STEERING

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	93399–99931	BEARING	1	1				
2	5VX–23415–00	COVER, BALL RACE 1	1	1				
3	90179–25004	NUT	2	2				
4	90202–26142	WASHER, PLATE	1	1				
5	26H–23418–01	WASHER, SPECIAL	1	1				
6	90201–22018	WASHER, PLATE	1	1				
7	1RC–23393–00	NUT, SPECIAL	1	1				
8	1RC–23435–30	CROWN, HANDLE	1	1				
9	91314–08030	BOLT, HEXAGON SOCKET HEAD	2	2				
10	B90–82552–00	CAP, SWITCH	1	1				
11	1RC–23441–11	HOLDER, HANDLE UPPER	1	1				
12	1RC–2344A–11	HOLDER, HANDLE UPPER 1	1	1				
13	91314–08030	BOLT, HEXAGON SOCKET HEAD	4	4				
14	1RC–24847–11	HOLDER 1	1	1				
15	1RC–24848–11	HOLDER 2	1	1				
16	95602–10200	NUT, S/L FLANGE	2	2				
17	B90–23174–10	STAY, HEADLIGHT	1	1				
18	91314–06018	BOLT, HEXAGON SOCKET HEAD	2	2				
19	B90–23113–00	COLLAR	2	2				
20	3P6–21649–00	DAMPER	1	1				
21	95807–06016	BOLT, FLANGE	2	2				
22	2PN–23121–00	COVER, UPPER 1	1	1				
23	2PN–23131–00	COVER, UPPER 2	1	1				
24	90109–06081	BOLT	4	4				
25	B90–23389–00	GUIDE, CABLE	1	1				
26	B90–23195–00	RUBBER	1	1				
27	B90–25876–00	HOLDER, BRAKE HOSE 2	1	1				

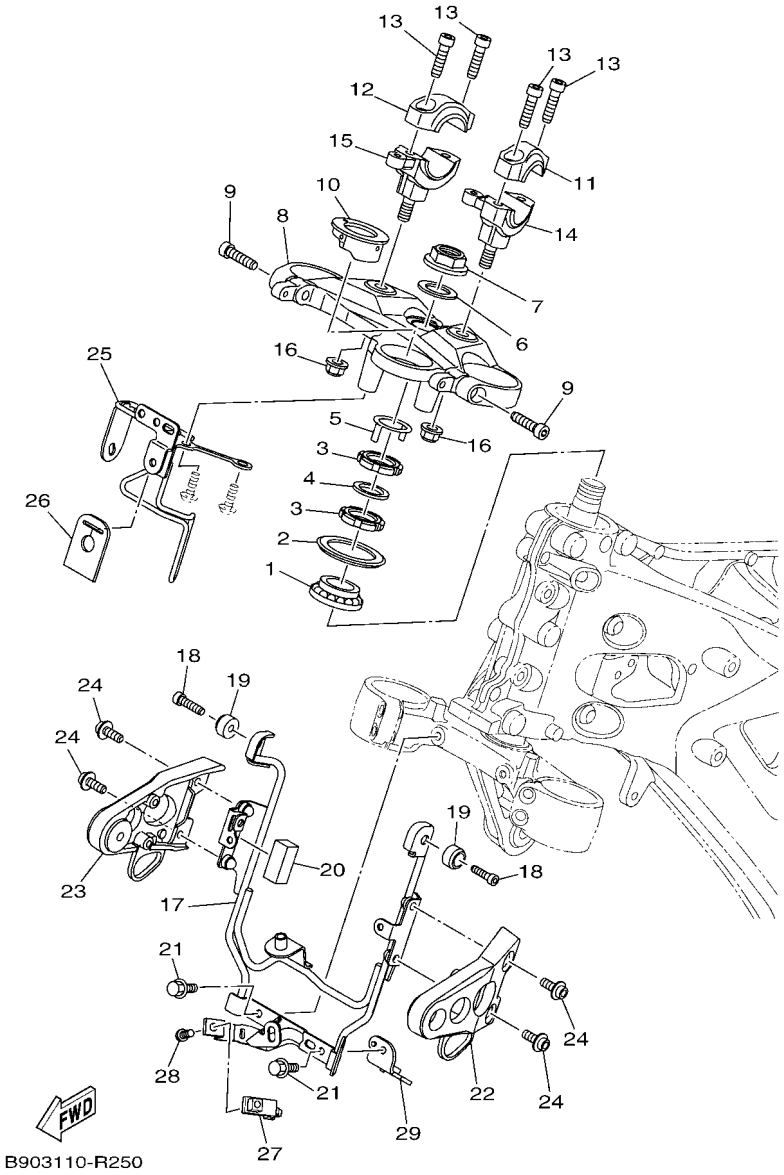

FIG. 25 STEERING

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90149–06233	SCREW	1	1				
29	1RC–23377–00	BRACKET, HORN	1	1				

FIG. 26 FRONT FORK

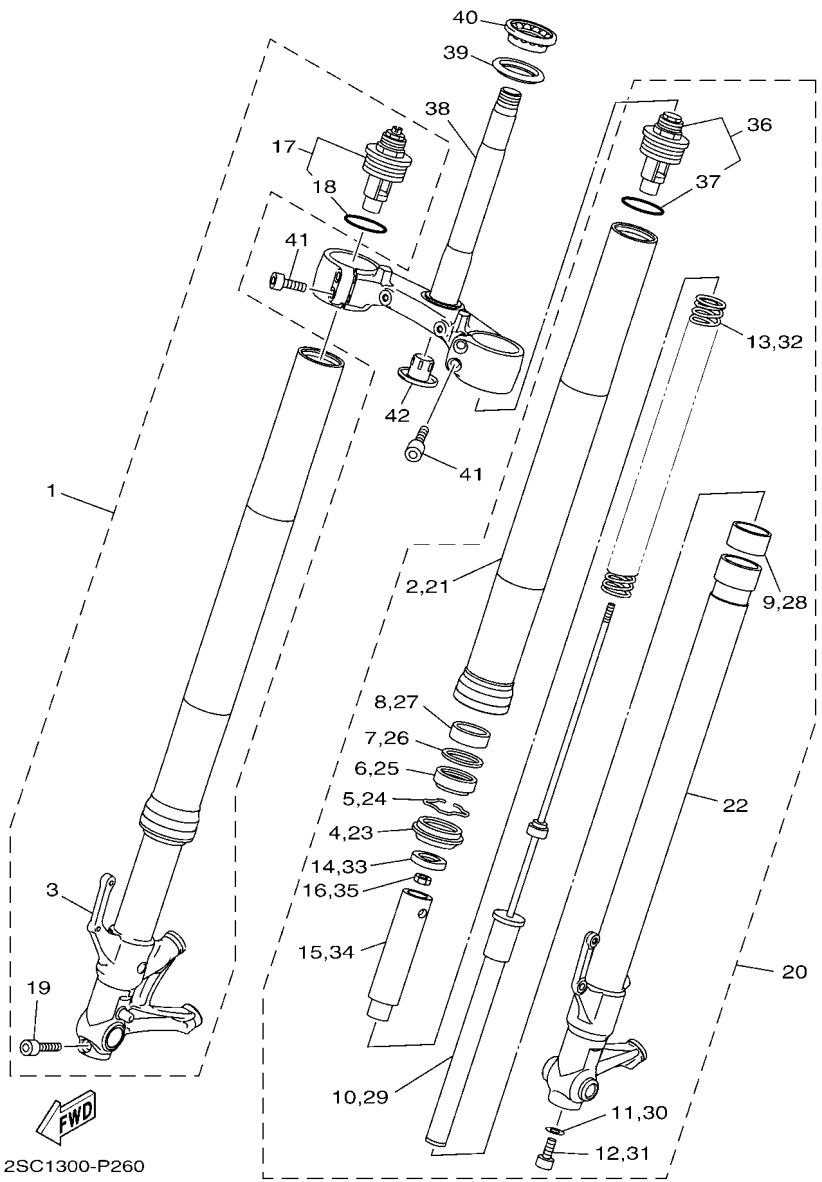

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–23103–00	FRONT FORK ASSY (R.H)	1	1				
2	1RC–23126–40	.TUBE, OUTER (L.H)	1	1				
3	1RC–23120–01	.INNER TUBE COMP.2	1	1				
4	4EB–23144–00	.SEAL, DUST	1	1				
5	26H–23156–00	.RING, SNAP	1	1				
6	4EB–23145–01	.OIL SEAL	1	1				
7	36Y–23146–10	.WASHER, OIL SEAL	1	1				
8	1RC–23125–00	.METAL, SLIDE 1	1	1				
9	4FM–23171–40	.METAL, SLIDE	1	1				
10	2PP–23170–10	.CYLINDER COMP., FRONT FORK	1	1				
11	509–23158–L0	.GASKET	1	1				(KYB)
12	278–23181–50	.BOLT, HEXAGON SOCKET HEAD	1	1				
13	2PP–23141–00	.SPRING, FRONT FORK	1	1				
14	5VY–12277–00	.WASHER	1	1				
15	1RC–23118–00	.SPACER	1	1				
16	3LC–23357–00	.NUT	1	1				
17	B90–23111–10	.BOLT, CAP	1	1				
18	3XJ–23147–L0	..O-RING	1	1				
19	91314–08035	.BOLT, HEXAGON SOCKET HEAD	1	1				
20	B90–23102–00	FRONT FORK ASSY (L.H)	1	1				
21	1RC–23126–40	.TUBE, OUTER (L.H)	1	1				
22	1RC–23110–01	.INNER TUBE COMP.1	1	1				
23	4EB–23144–00	.SEAL, DUST	1	1				
24	26H–23156–00	.RING, SNAP	1	1				
25	4EB–23145–01	.OIL SEAL	1	1				
26	36Y–23146–10	.WASHER, OIL SEAL	1	1				
27	1RC–23125–00	.METAL, SLIDE 1	1	1				

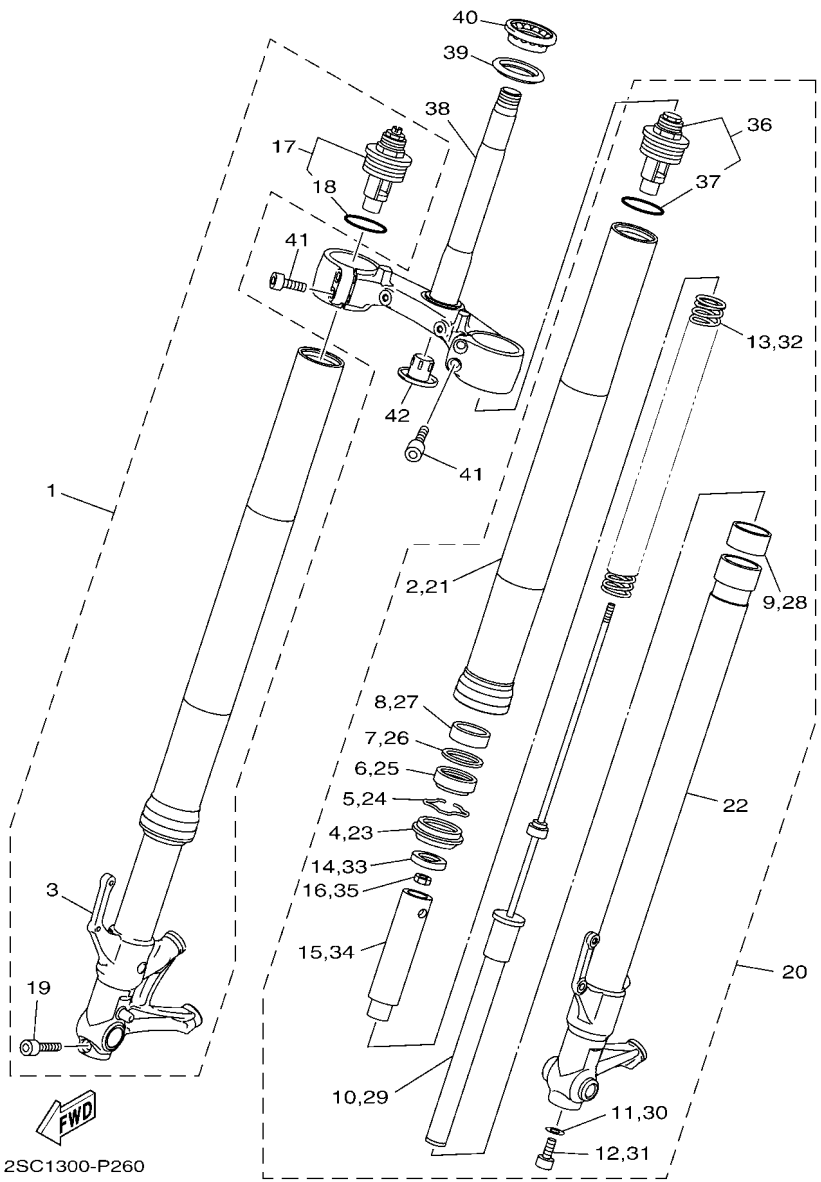

FIG. 26 FRONT FORK

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	4FM–23171–40	.METAL, SLIDE	1	1				
29	2PP–23170–00	.CYLINDER COMP., FRONT FORK	1	1				
30	509–23158–L0	.GASKET	1	1				(KYB)
31	278–23181–50	.BOLT, HEXAGON SOCKET HEAD	1	1				
32	2PP–23141–00	.SPRING, FRONT FORK	1	1				
33	5VY–12277–00	.WASHER	1	1				
34	1RC–23118–00	.SPACER	1	1				
35	3LC–23357–00	.NUT	1	1				
36	B90–23111–00	.BOLT, CAP	1	1				
37	3XJ–23147–L0	..O-RING	1	1				
38	1RC–23340–11	UNDER BRACKET COMP.	1	1				
39	3FV–23462–00	SEAL, STEERING	1	1				
40	93399–99932	BEARING	1	1				
41	91314–08030	BOLT, HEXAGON SOCKET HEAD	4	4				
42	4KM–23123–01	COVER, UNDER 1	1	1				

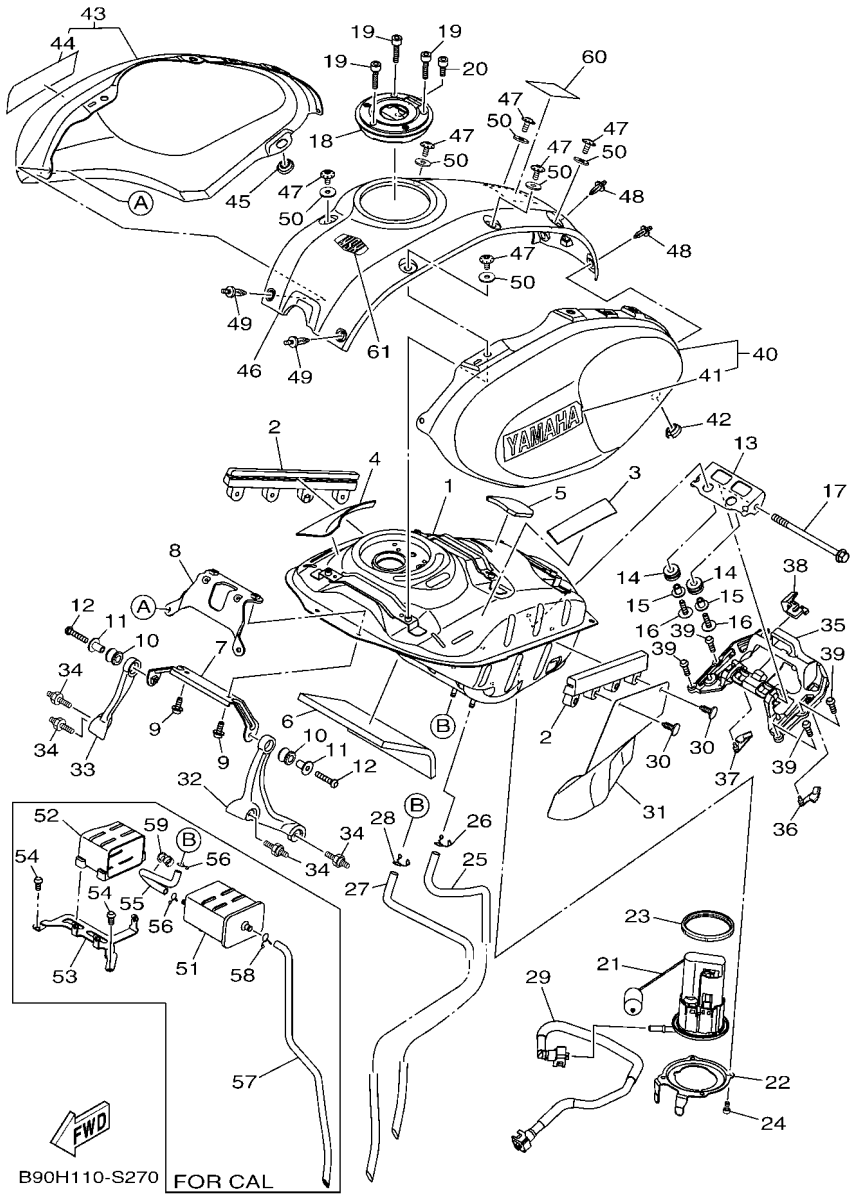

FIG. 27 FUEL TANK

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–24110–00	FUEL TANK COMP.	1	1				
2	B90–24121–00	SEAT, KNEE GRIP 1	2	2				
3	90520–02013	DAMPER, PLATE	1	1				
4	B90–2414K–00	DAMPER, PLATE 3	1	1				
5	B90–2414N–00	DAMPER, PLATE 4	1	1				
6	90520–10029	DAMPER, PLATE	1	1				
7	B90–2412Y–00	BRACKET, TANK FITTING	1	1				
8	B90–24145–00	DAMPER, SIDE COVER	1	1				
9	90110–06245	BOLT, HEXAGON SOCKET HEAD	2	2				
10	90480–18008	GROMMET	2	2				
11	90387–06266	COLLAR	2	2				
12	92012–06030	BOLT, BUTTON HEAD	2	2				
13	B90–24191–00	BRACKET, FUEL TANK 1	1	1				
14	90480–16003	GROMMET	2	2				
15	90387–06287	COLLAR	2	2				
16	90111–06084	BOLT,HEX. SOCKET BUTTON	2	2				
17	95827–08120	BOLT, FLANGE	1	1				
18	1WS–24602–00	CAP ASSY	1	1				
19	90110–05112	BOLT, HEXAGON SOCKET HEAD	3	3				
20	91312–05010	BOLT	1	1				
21	1RC–13907–00	FUEL PUMP COMP.	1	1				
22	B90–24491–00	BRACKET, FUEL PUMP	1	1				
23	1RC–24486–00	O-RING	1	1				
24	91312–05010	BOLT	4	4				
25	1RC–24315–00	PIPE 5	1	1				
26	90467–09006	CLIP	1	1				
27	1RC–24316–00	PIPE 6	1					FOR U49

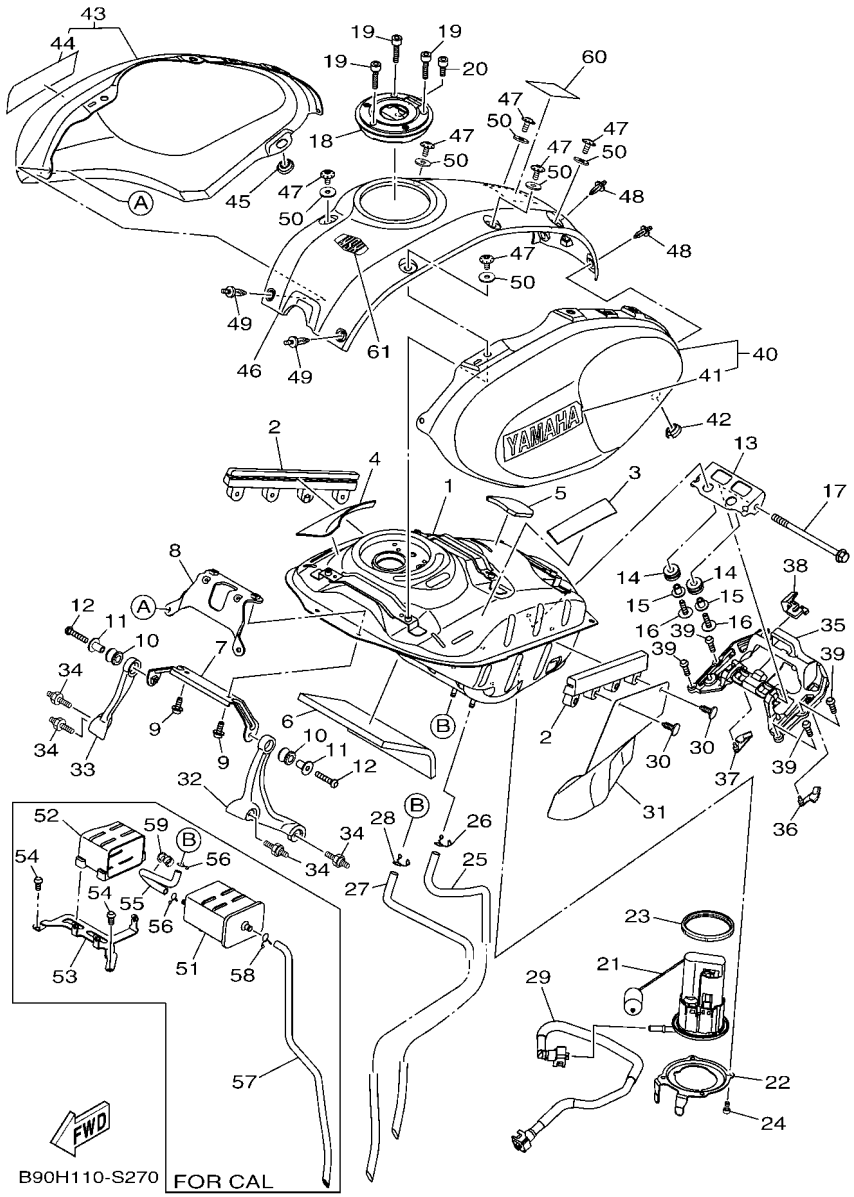

FIG. 27 FUEL TANK

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90467–09006	CLIP	1					FOR U49
29	B90–13971–00	PIPE, FUEL 1	1	1				
30	90269–05055	RIVET	2	2				
31	B90–24217–00	COVER	1	1				
32	B90–2411F–00	PLATE, FITTING	1	1				
33	B90–2411L–00	HOOK TANK FITTING	1	1				
34	90109–06309	BOLT	4	4				
35	B90–2413Y–00	BRACKET, TANK FITTING	1	1				
36	B90–24665–00	DAMPER	1	1				
37	B90–2466M–00	DAMPER	1	1				
38	B90–24742–00	GROMMET	1	1				
39	92017–06020	BOLT, BUTTON HEAD	4	4				
40	B90–Y24HA–20–0X	COVER, TANK SIDE 1 ASSY	1	1				FOR NBM4
41	99221–00140	.EMBLEM, YAMAHA	1	1				
42	90480–01558	GROMMET	1	1				
43	B90–Y24JA–20–0X	COVER, TANK SIDE 2 ASSY	1	1				FOR NBM4
44	99221–00140	.EMBLEM, YAMAHA	1	1				
45	90480–01558	GROMMET	1	1				
46	B90–241B1–00–P1	COVER, TANK	1	1				MBL2 FOR NBM4
47	90109–06311	BOLT	6	6				
48	90269–06008	RIVET	2	2				
49	90269–07001	RIVET	2	2				
50	90201–06M94	WASHER, PLATE	6	6				
51	2CR–24170–00	CANISTER ASSY		1				FOR CAL
52	B90–24183–00	DAMPER, LOCATING 3		1				FOR CAL
53	B90–2419F–00	BRACKET, CANISTOR		1				FOR CAL
54	92012–06012	BOLT, BUTTON HEAD		2				FOR CAL

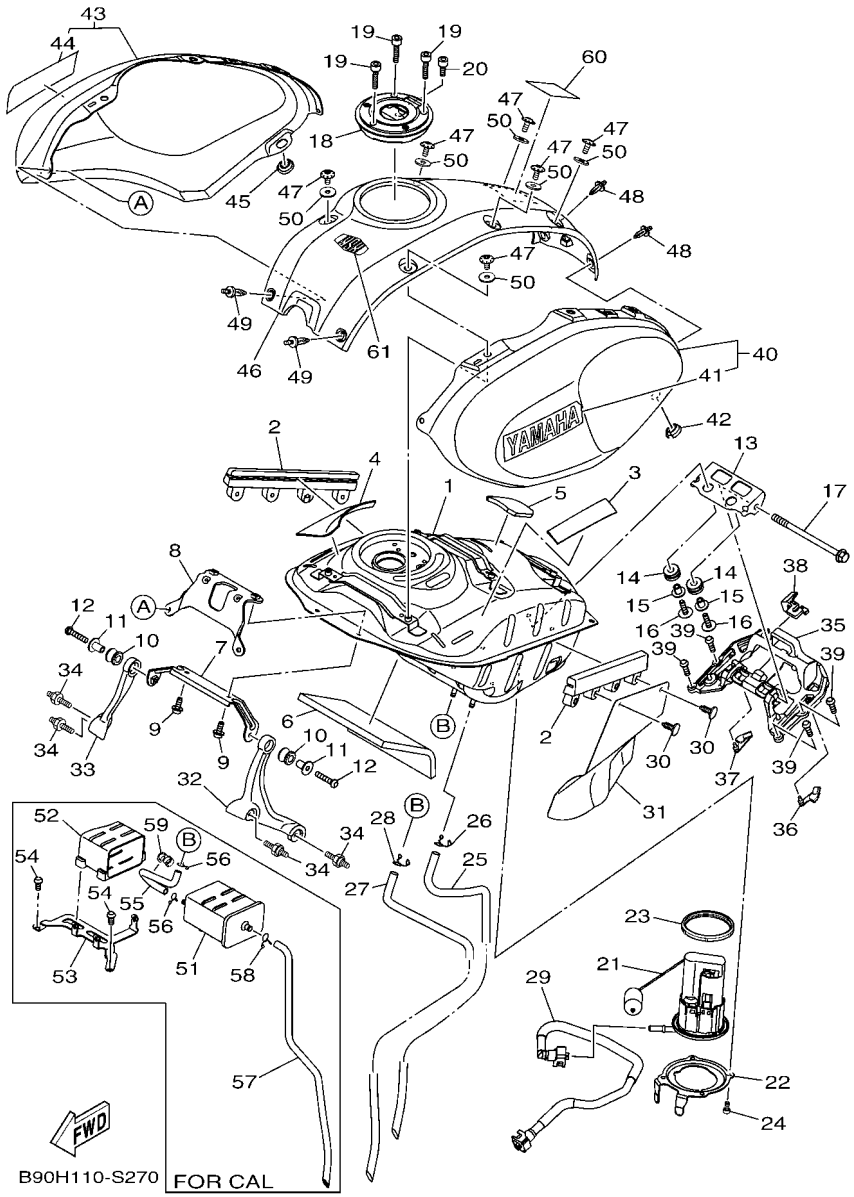

FIG. 27 FUEL TANK

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
55	B90–24313–10	PIPE 3		1				FOR CAL
56	90467–09006	CLIP		2				FOR CAL
57	B90–24321–00	PIPE 10		1				FOR CAL
58	90467–10041	CLIP		1				FOR CAL
59	90464–09M31	CLAMP		1				FOR CAL
60	29P–2816R–00	LABEL, WARNING GENERAL INFO.	1	1				
61	B90–2416B–01	EMBLEM	1	1				

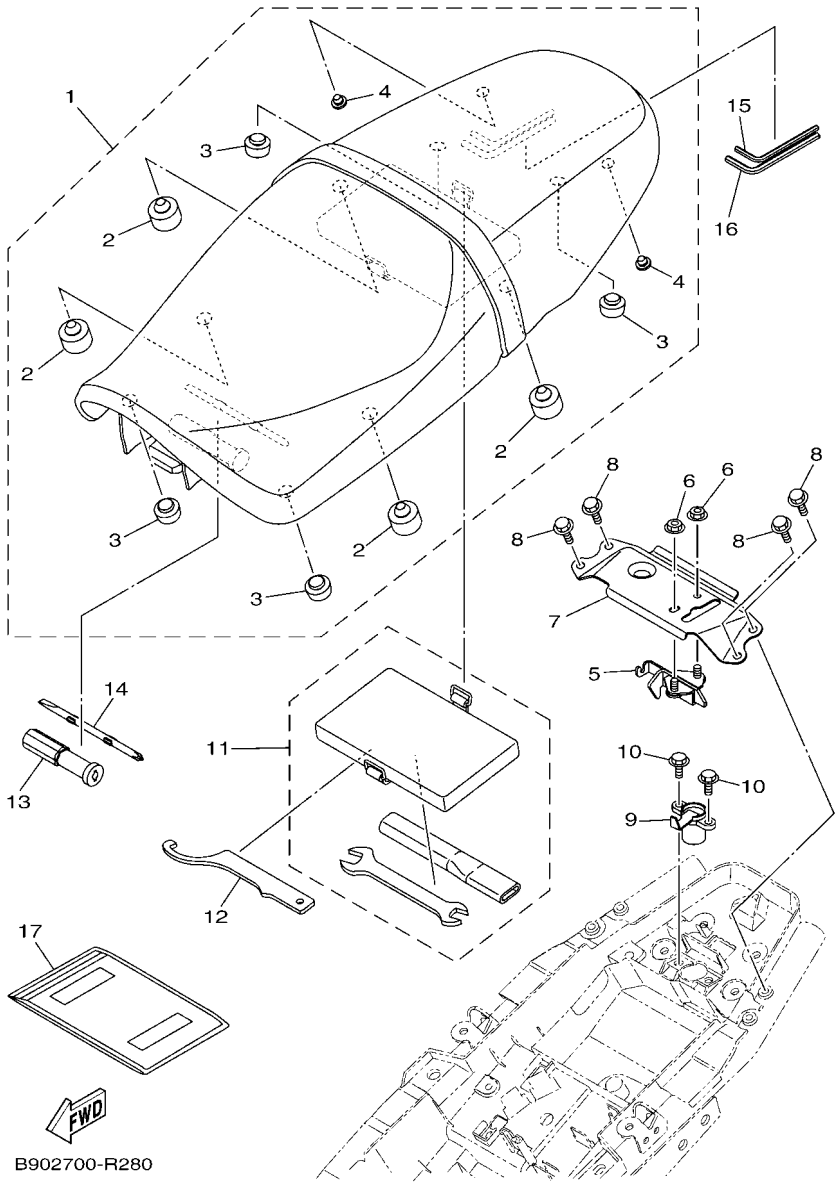

FIG. 28 SEAT

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–24730–10	DOUBLE SEAT ASSY	1	1				
2	4GL–27114–00	.STOPPER, MAIN STAND	4	4				
3	5UY–27114–00	.STOPPER, MAIN STAND	4	4				
4	90338–07157	.PLUG	2	2				
5	B90–24780–00	SEAT LOCK ASSY	1	1				
6	95702–06500	NUT, FLANGE	2	2				
7	1RC–2478X–00	BRACKET, SEAT LOCK	1	1				
8	95022–06016	BOLT, FLANGE	4	4				
9	1RC–W2470–00	ROTOR SET	1	1				
10	95022–06014	BOLT, FLANGE	2	2				
11	1RC–28100–00	TOOL KIT	1	1				
12	1RC–28135–00	SPANNER, SPECIAL	1	1				
13	2H7–28151–00	GRIP, DRIVER	1	1				
14	2GV–28152–00	DRIVER	1	1				
15	23P–28164–00	WRENCH, HEXAGON 8	1	1				
16	14B–28164–00	WRENCH, HEXAGON 8	1	1				
17	4KG–28186–10	POUCH	1	1				

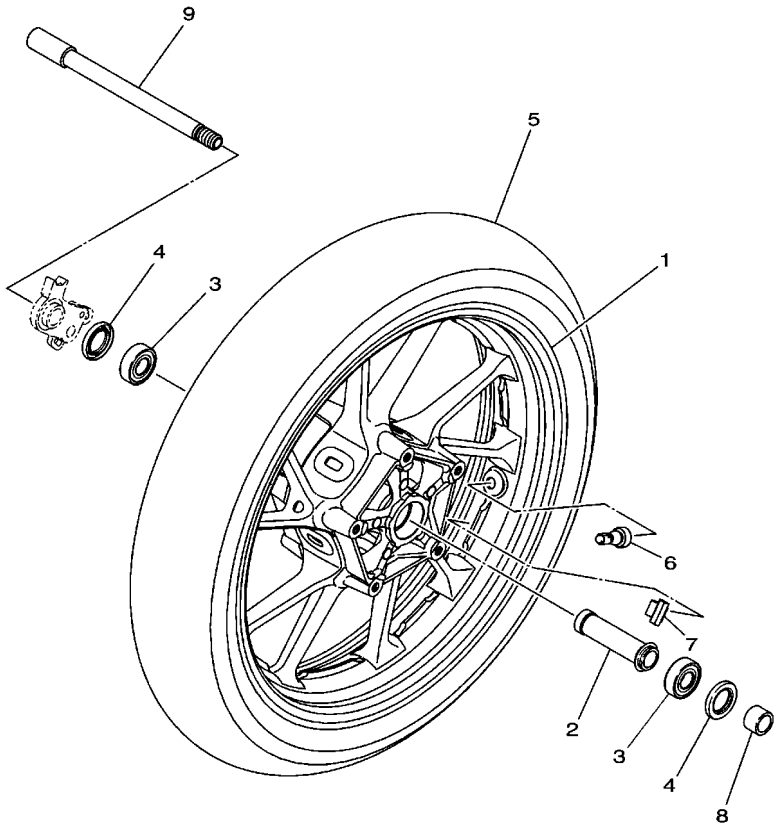

1RCN300-P291

FIG. 29 FRONT WHEEL

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	2DR–25168–00–98	CAST WHEEL, FRONT	1	1				LGB FOR NBM4
2	2PP–25117–00	SPACER, BEARING	1	1				
3	93306–20352	BEARING	2	2				
4	93102–25017	OIL SEAL	2	2				
5	94112–17127	TIRE (120/70ZR17M/C 58W S20F)	1	1				BRIDGESTONE
6	93900–00030	VALVE, RIM (TR412)	1	1				TAIHEIYO
7	5MT–25398–00	BALANCER, WHEEL (10G)	1	1				UR
	5MT–25398–10	BALANCER, WHEEL (20G)	1	1				UR
	5MT–25398–20	BALANCER, WHEEL (30G)	1	1				UR
8	90387–17017	COLLAR	1	1				
9	1RC–25181–00	AXLE, WHEEL	1	1				

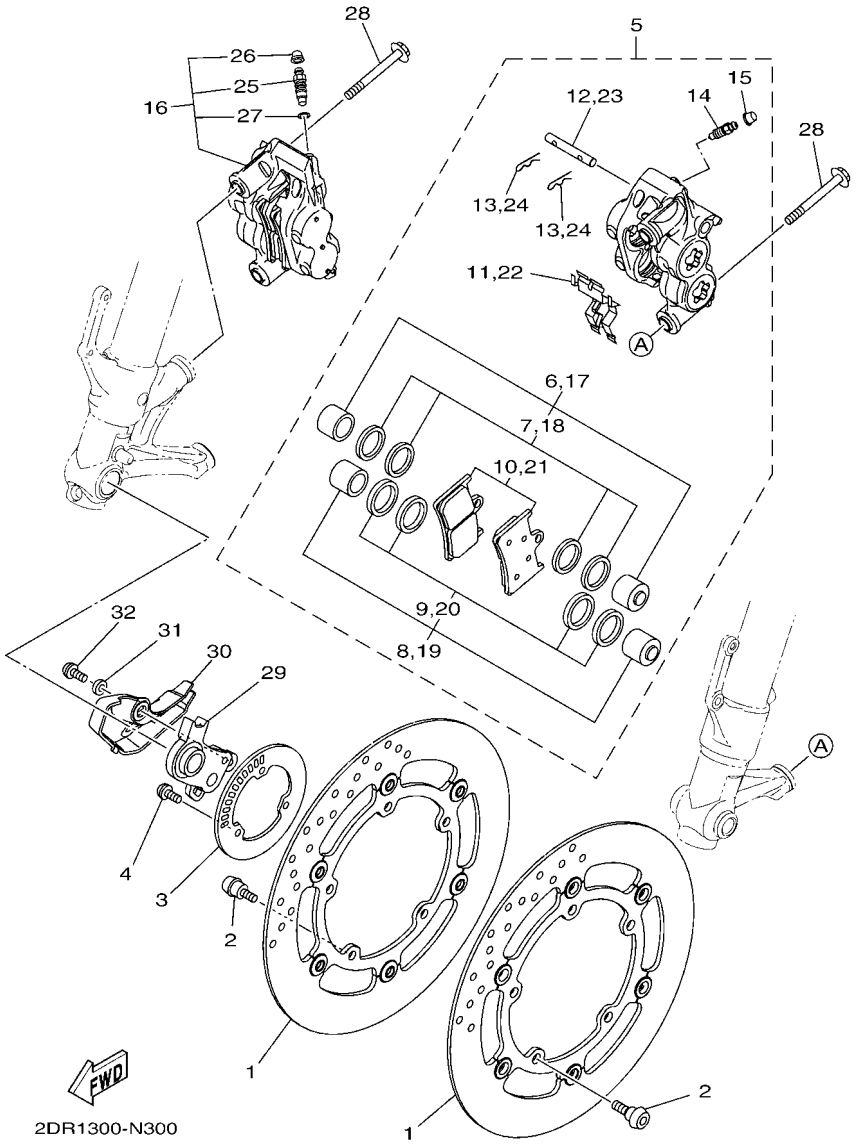

FIG. 30 FRONT BRAKE CALIPER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–2581T–00	DISK BRAKE ASSY	2	2				
2	90109–064G6	BOLT	10	10				
3	2DR–2517G–00	ROTOR, SENSOR	1	1				
4	90149–05029	SCREW	3	3				
5	1RC–2580T–00	CALIPER ASSY (LEFT)	1	1				
6	4SV–25802–10	.PISTON ASSY, CALIPER	1	1				
7	3GM–25803–10	..CALIPER SEAL KIT	1	1				
8	4SV–25802–00	.PISTON ASSY, CALIPER	1	1				
9	3MA–25803–10	..CALIPER SEAL KIT	1	1				
10	5SL–25805–00	.BRAKE PAD KIT	1	1				
11	13S–25919–00	.SUPPORT, PAD	1	1				
12	4SV–25924–00	.PIN, PAD	1	1				
13	3GM–25925–00	.CLIP	2	2				
14	1J3–25824–00	.SCREW, BLEED	1	1				
15	306–25825–01	.CAP	1	1				
16	2DR–2580U–00	CALIPER ASSY (RIGHT)	1	1				
17	4SV–25802–10	.PISTON ASSY, CALIPER	1	1				
18	3GM–25803–10	..CALIPER SEAL KIT	1	1				
19	4SV–25802–00	.PISTON ASSY, CALIPER	1	1				
20	3MA–25803–10	..CALIPER SEAL KIT	1	1				
21	5SL–25805–00	.BRAKE PAD KIT	1	1				
22	13S–25919–00	.SUPPORT, PAD	1	1				
23	4SV–25924–00	.PIN, PAD	1	1				
24	3GM–25925–00	.CLIP	2	2				
25	5VS–25824–00	.SCREW, BLEED	1	1				
26	306–25825–01	.CAP	1	1				
27	5VS–25975–00	.RUBBER, BUSHING	1	1				

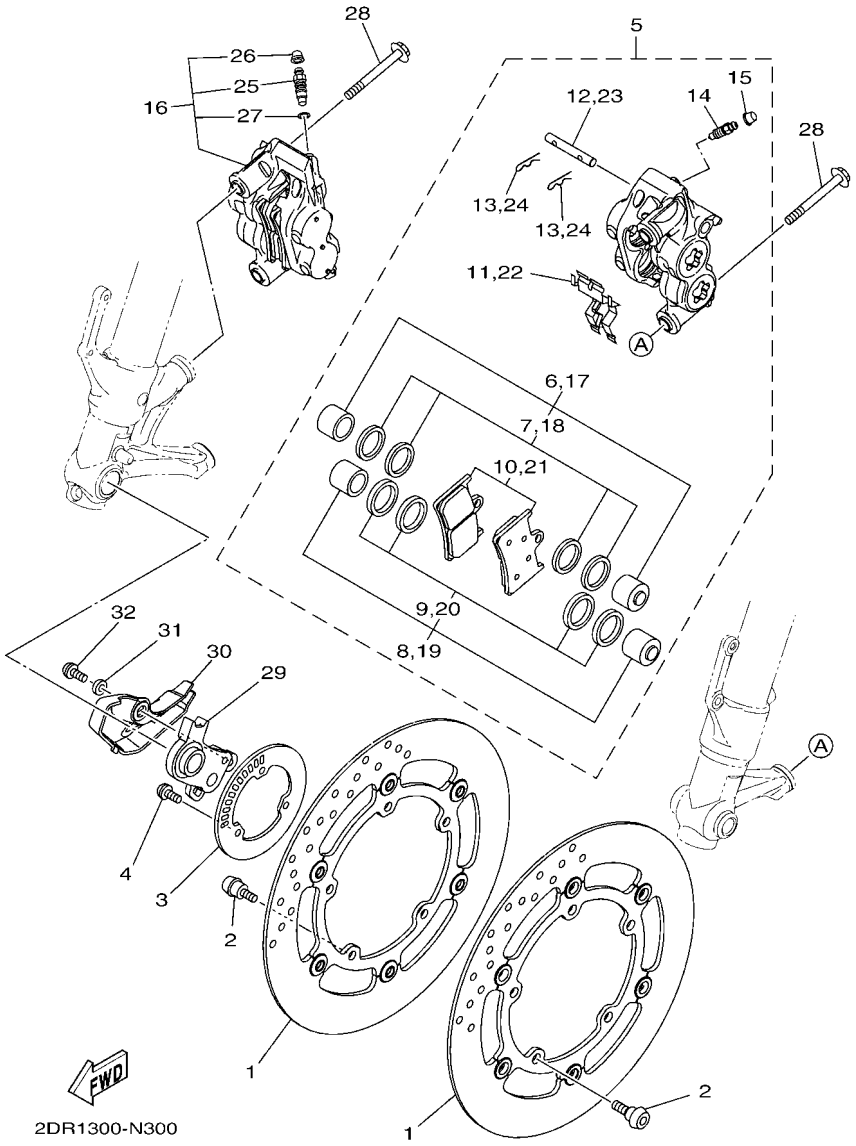

FIG. 30 FRONT BRAKE CALIPER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90105–10440	BOLT, FLANGE	4	4				
29	2DR–2517A–00	HOUSING, SENSOR FRONT	1	1				
30	2DR–27491–00	PROTECTOR	1	1				
31	90387–06372	COLLAR	1	1				
32	90111–06127	BOLT,HEX. SOCKET BUTTON	1	1				

FIG. 31 REAR WHEEL

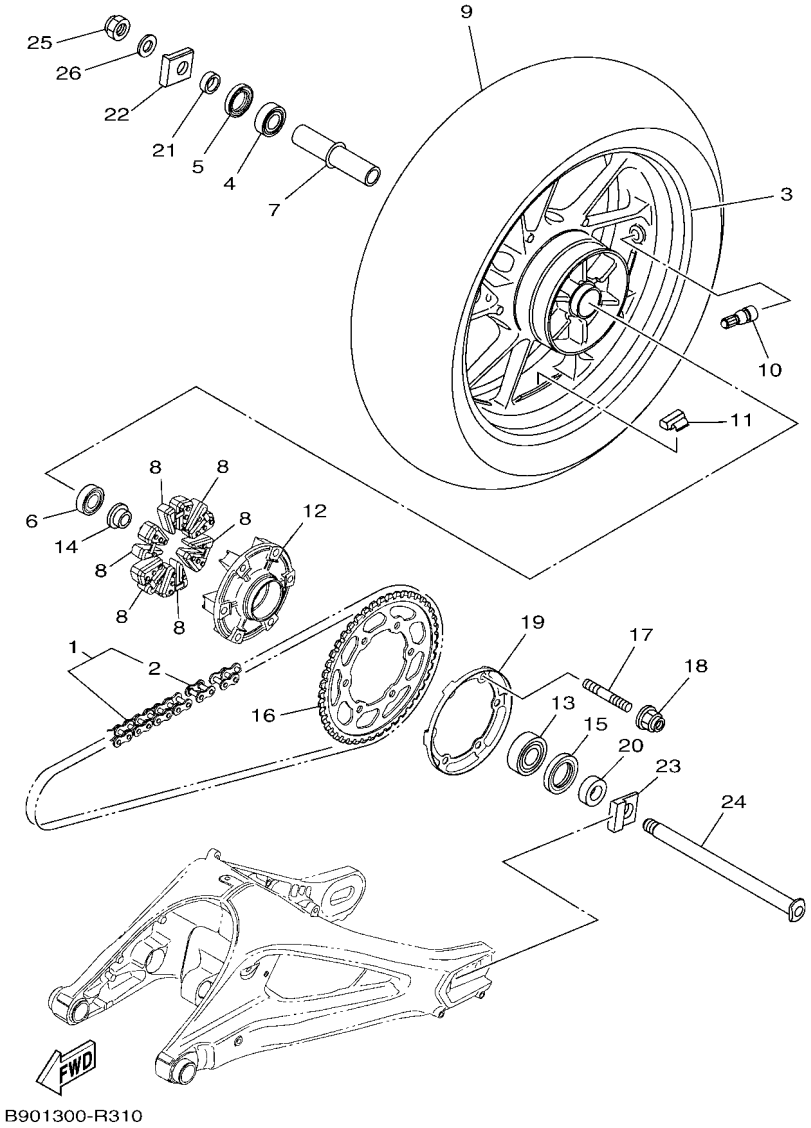

B901300-R310

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	94582–31110	CHAIN (DID 525V10-110LL)	1	1				
2	94682–31031	.JOINT, CHAIN (DID 525V10-ZJ)	1	1				
3	2DR–25338–00–98	CAST WHEEL, REAR	1	1				LGB FOR NBM4
4	93306–20480	BEARING	1	1				
5	93102–28022	OIL SEAL	1	1				
6	93306–00416	BEARING	1	1				
7	2PP–25317–00	SPACER, BEARING	1	1				
8	1RC–25364–00	DAMPER	6	6				
9	94118–17078	TIRE (180/55ZR17M/C 73W S20R)	1	1				BRIDGESTONE
10	93900–00030	VALVE, RIM (TR412)	1	1				TAIHEIYO
11	5MT–25398–00	BALANCER, WHEEL (10G)	1	1				UR
	5MT–25398–10	BALANCER, WHEEL (20G)	1	1				UR
	5MT–25398–20	BALANCER, WHEEL (30G)	1	1				UR
12	5JJ–25366–00	CLUTCH, HUB	1	1				
13	93306–205B5	BEARING	1	1				
14	1RC–25383–00	COLLAR, WHEEL	1	1				
15	93106–40013	OIL SEAL	1	1				
16	1RC–25445–00	SPROCKET, DRIVEN (45T)	1	1				
17	90116–10048	BOLT, STUD	6	6				
18	95602–10200	NUT, S/L FLANGE	6	6				
19	1RC–2537W–00	BRACKET 1	1	1				
20	90387–20036	COLLAR	1	1				
21	90387–20035	COLLAR	1	1				
22	3SP–25388–00	PULLER, CHAIN 1	1	1				
23	1RC–25389–00	PULLER, CHAIN 2	1	1				
24	1RC–25381–00	AXLE, WHEEL	1	1				
25	90185–18009	NUT, SELF-LOCKING	1	1				

FIG. 31 REAR WHEEL

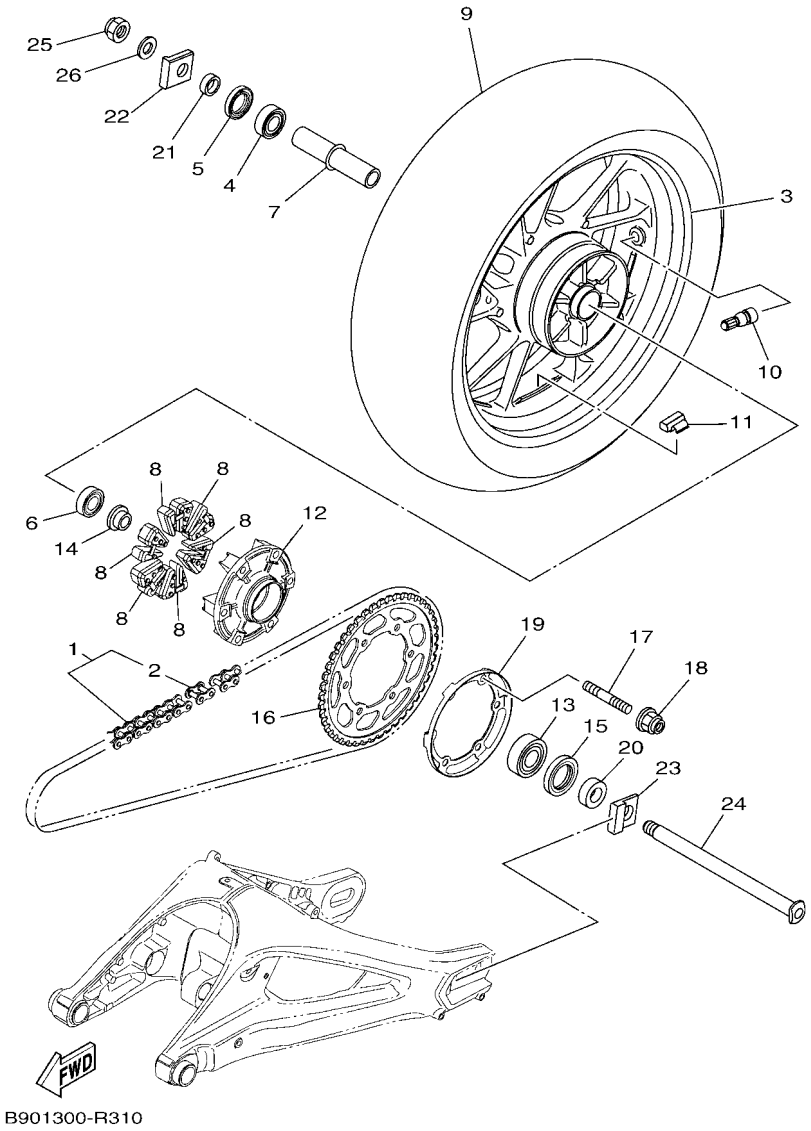

B901300-R310

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
26	90201–18021	WASHER, PLATE	1	1				

FIG. 32 REAR BRAKE CALIPER

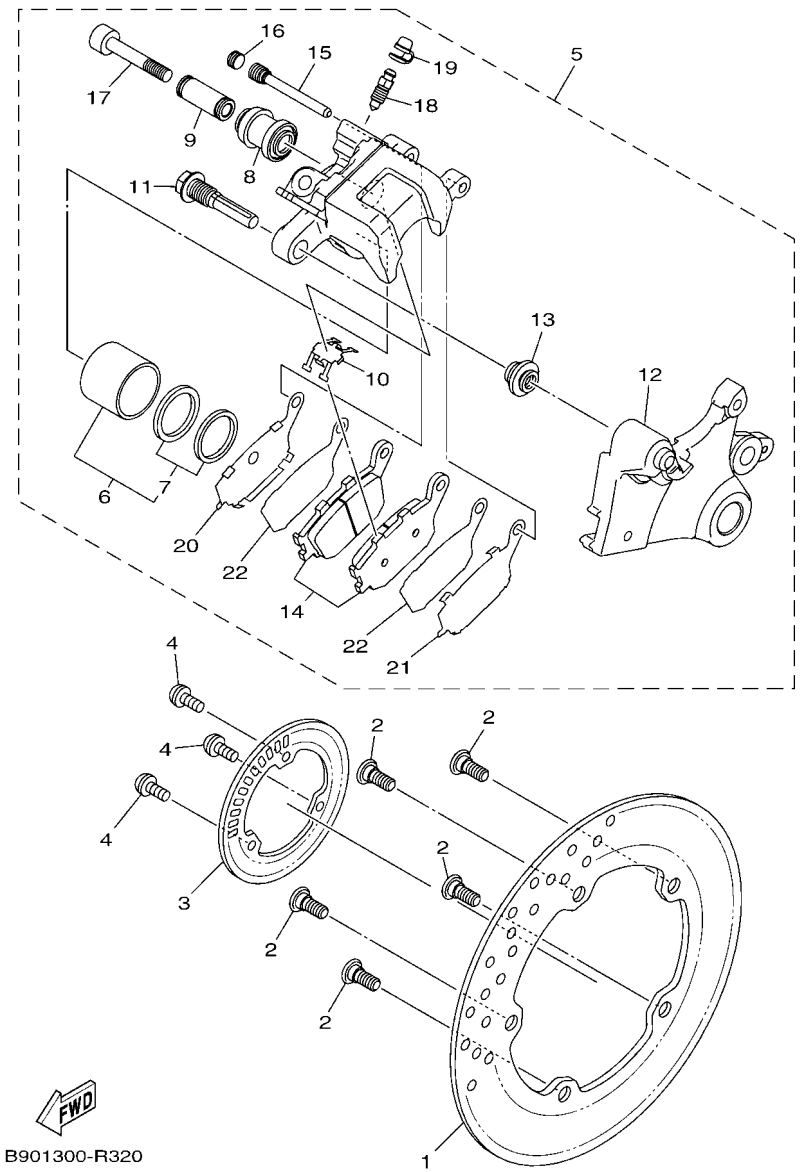

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–2582W–00	DISK, REAR BRAKE 2	1	1				
2	90109–08045	BOLT	5	5				
3	2DR–2517G–00	ROTOR, SENSOR	1	1				
4	90149–05029	SCREW	3	3				
5	2DR–2580W–00	CALIPER ASSY, REAR 2	1	1				
6	5SL–25802–00	.PISTON ASSY, CALIPER	1	1				
7	5SL–25803–00	..CALIPER SEAL KIT	1	1				
8	5SL–25917–00	.BOOT, CALIPER	1	1				
9	5SL–25838–00	.SLEEVE, CALIPER	1	1				
10	5SL–25919–00	.SUPPORT, PAD	1	1				
11	5SL–25914–00	.PIN, SLIDE	1	1				
12	2DR–25921–50	.BRACKET, SUPPORT	1	1				
13	3JD–25917–00	.BOOT, CALIPER	1	1				
14	5VX–25806–00	.BRAKE PAD KIT 2	1	1				
15	8CR–25924–00	.PIN, PAD	1	1				
16	5DH–25916–00	.PLUG	1	1				
17	1RC–25926–00	.BOLT	1	1				
18	8CR–25824–00	.SCREW, BLEED	1	1				
19	1UY–25825–51	.CAP	1	1				
20	5SL–25827–00	.SHIM, CALIPER	1	1				
21	5SL–25827–10	.SHIM, CALIPER	1	1				
22	5SL–25828–01	.SHIM, CALIPER	2	2				

FIG. 33 STEERING HANDLE & CABLE

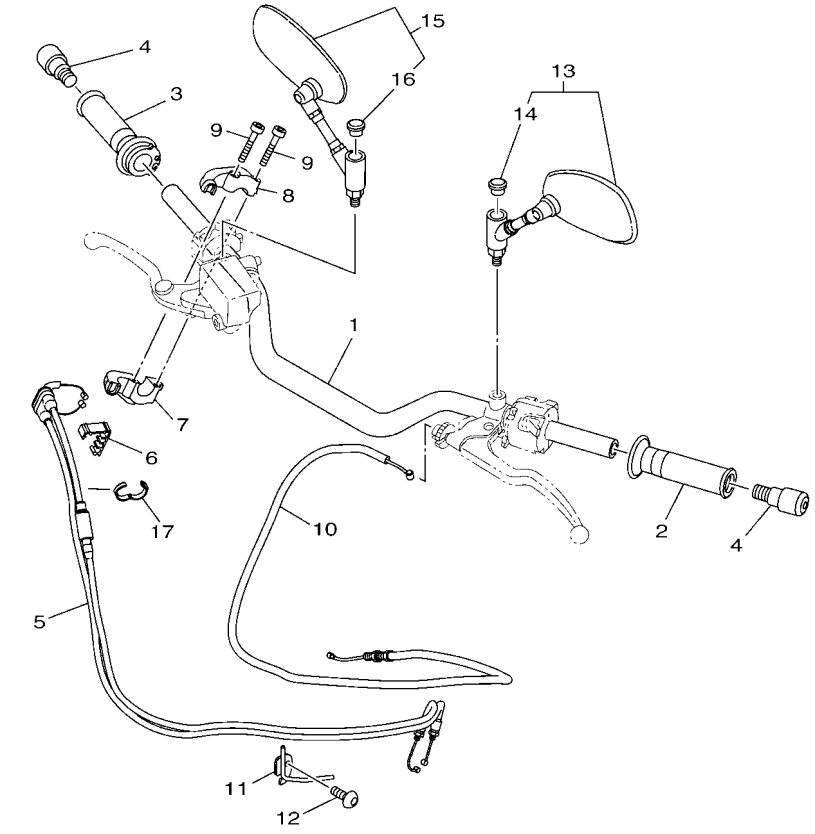

B903110-R330

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–26111–10	HANDLEBAR	1	1				
2	4YR–26241–02	GRIP (LEFT)	1	1				
3	4YR–26240–02	GRIP ASSY	1	1				
4	5GJ–26246–00	END, GRIP	2	2				
5	1RC–26302–00	THROTTLE CABLE ASSY	1	1				
6	39P–2627E–00	CLAMP, WIRE	1	1				
7	4KG–26281–00	CAP GRIP	1	1				
8	3XW–26282–01	CAP GRIP	1	1				
9	91317–05035	BOLT,HEX.SOCKET HEAD	2	2				
10	1RC–26335–01	CABLE, CLUTCH	1	1				
11	B90–23857–00	HOLDER	1	1				
12	92017–06010	BOLT, BUTTON HEAD	1	1				
13	1B3–26280–20	REAR VIEW MIRROR ASSY (LEFT)	1	1				
14	5PS–26133–20	.CAP	1	1				
15	1B3–26290–20	REAR VIEW MIRROR ASSY (RIGHT)	1	1				
16	5PS–26133–20	.CAP	1	1				
17	90464–16001	CLAMP	1	1				

FIG. 34 FRONT MASTER CYLINDER

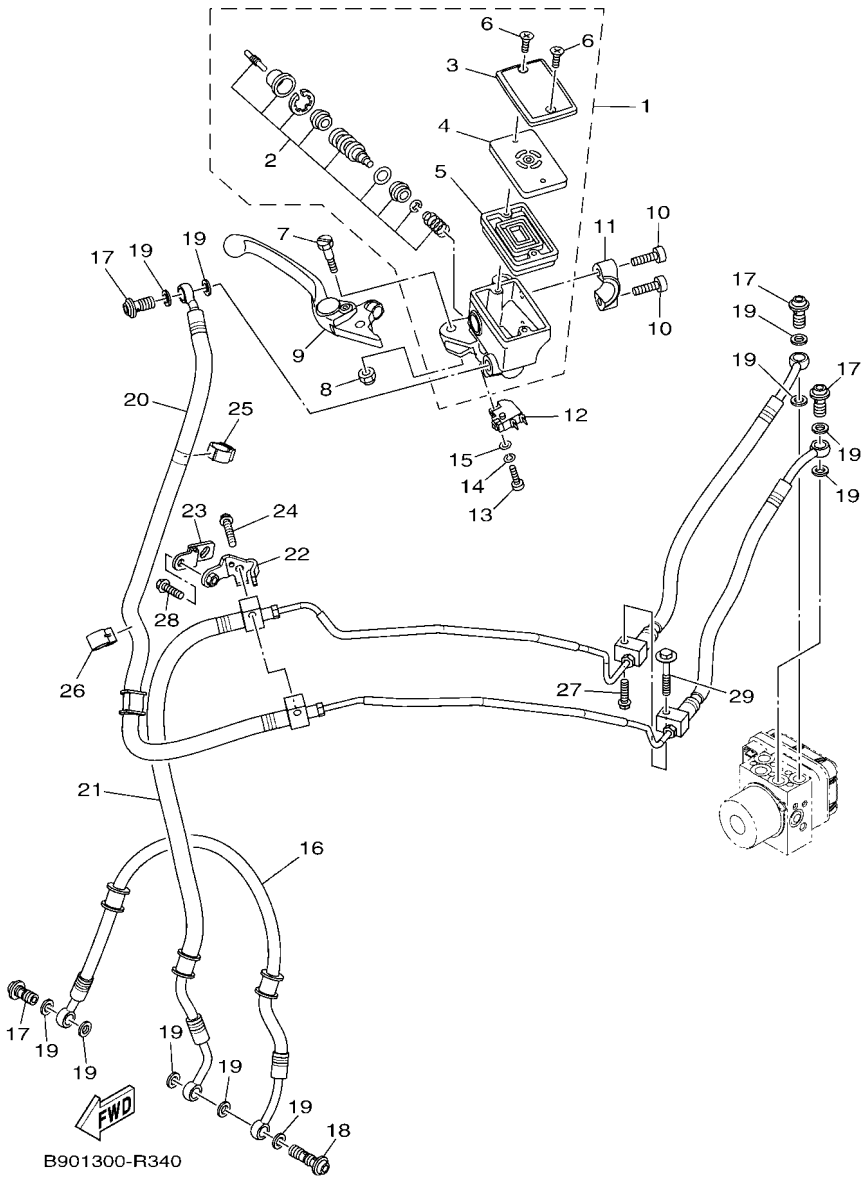

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	2DR–2580A–00	MASTER CYLINDER SUB ASSY 2	1	1				
2	1MC–25807–00	.CYLINDER KIT, MASTER	1	1				
3	5VS–25852–00	.CAP, RESERVOIR	1	1				
4	5VS–25855–00	.BUSH,DIAPHRAGM	1	1				
5	20S–25854–00	.DIAPHRAGM, RESERVOIR	1	1				
6	5VS–2589H–00	.SCREW	2	2				
7	5VS–2589F–00	BOLT, LEVER	1	1				
8	95617–06100	NUT, S/L	1	1				
9	B90–83922–00	LEVER 2	1	1				
10	5VS–26332–00	BOLT	2	2				
11	5VS–25867–00	BRACKET, MASTER CYLINDER	1	1				
12	1HP–83980–01	FRONT STOP SWITCH ASSY	1	1				
13	98502–04012	SCREW, PAN HEAD	1	1				
14	92902–04100	WASHER, SPRING	1	1				
15	92902–04600	WASHER, PLATE	1	1				
16	2DR–25872–00	HOSE, BRAKE 1	1	1				
17	90401–10172	BOLT, UNION	4	4				
18	90401–10042	BOLT, UNION	1	1				
19	90430–10005	GASKET	11	11				
20	2DR–2584A–00	BRAKE HOSE ASSY	1	1				
21	2DR–2584B–00	HOSE, BRAKE	1	1				
22	2DR–85132–00	BRACKET, REFLECTOR 1	1	1				
23	B90–2612E–00	BRACKET	1	1				
24	90105–06192	BOLT, FLANGE	1	1				
25	90464–16003	CLAMP	1	1				
26	90464–10233	CLAMP	1	1				
27	90105–06148	BOLT, FLANGE	1	1				

FIG. 34 FRONT MASTER CYLINDER

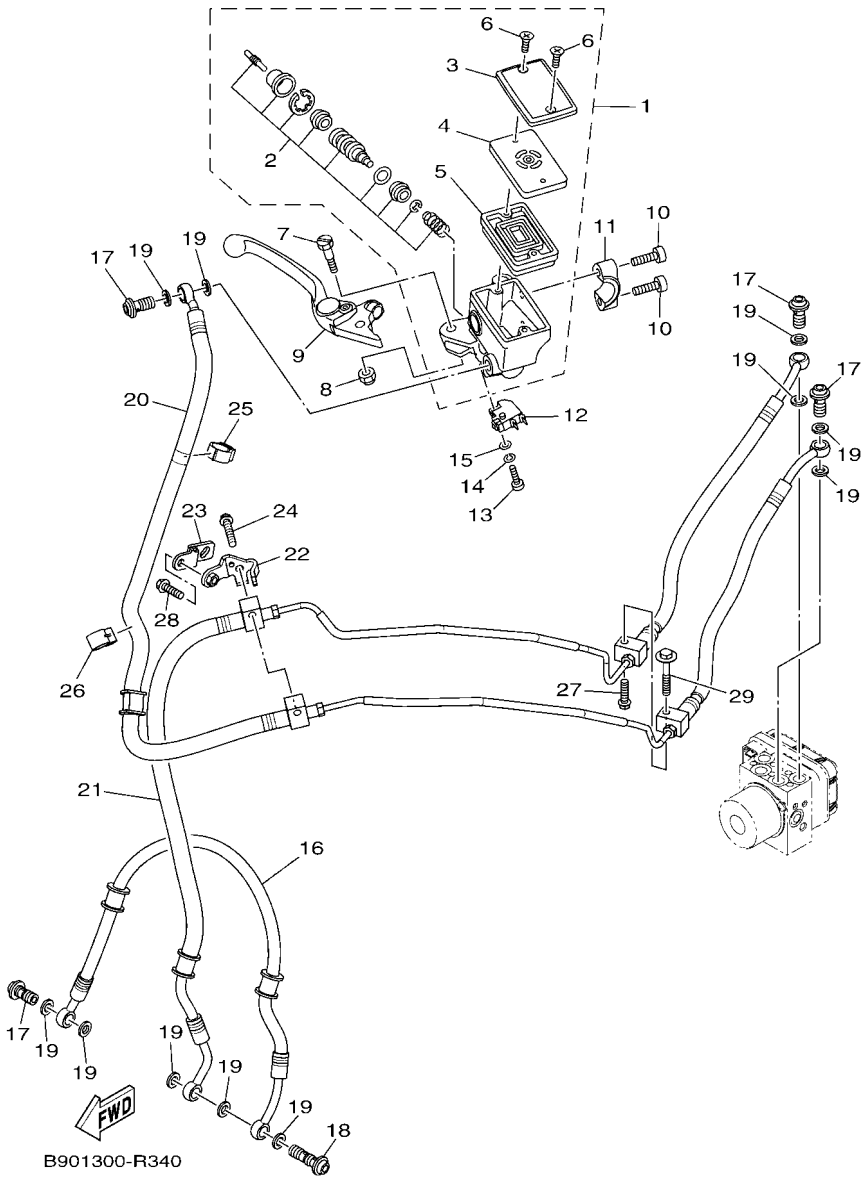

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90105–06557	BOLT, FLANGE	1	1				
29	90119–06M55	BOLT, WITH WASHER	1	1				

FIG. 35 STAND & FOOTREST

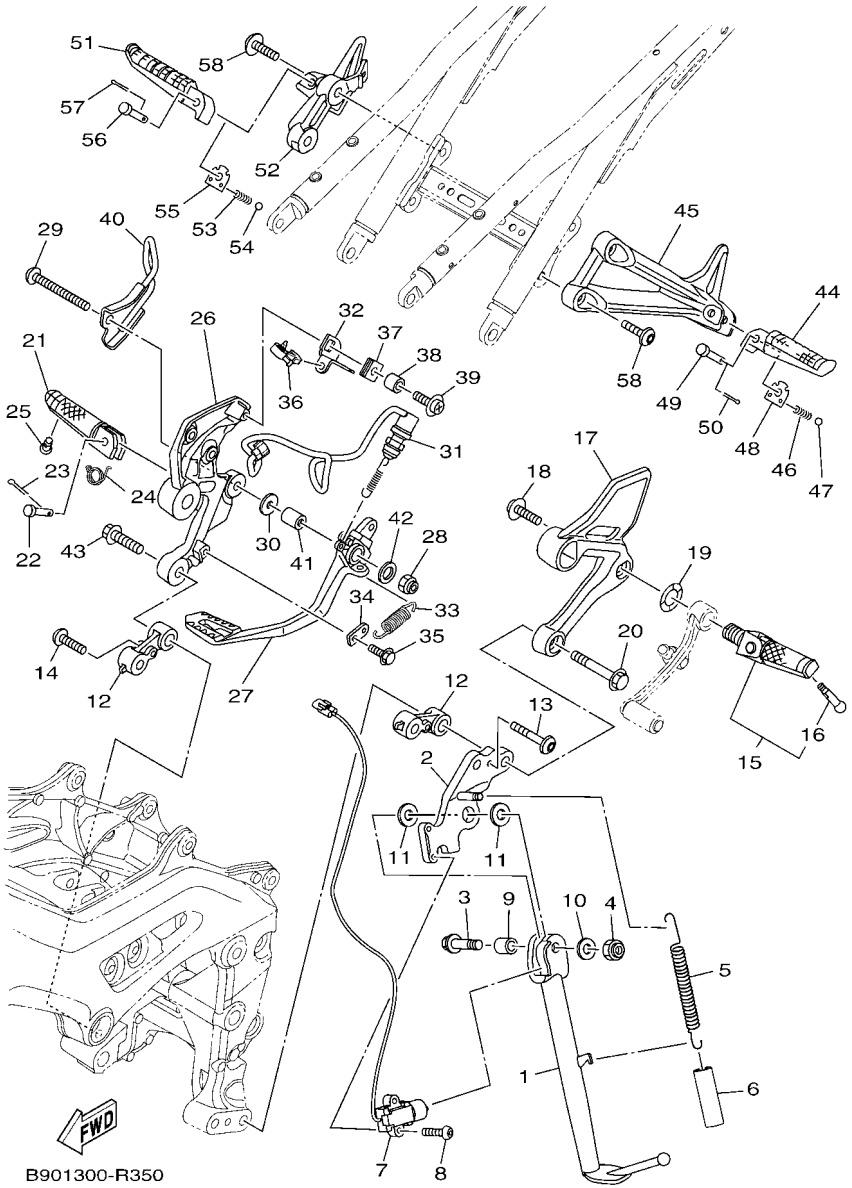

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–27311–00	STAND, SIDE	1	1				
2	1RC–27321–00	BRACKET, SIDE STAND	1	1				
3	90105–10188	BOLT, FLANGE	1	1				
4	95612–10100	NUT, U	1	1				
5	90506–20032	SPRING, TENSION	1	1				
6	90445–197J2	HOSE (L60)	1	1				
7	1RC–82566–50	SWITCH, SIDE STAND	1	1				
8	90111–05036	BOLT,HEX. SOCKET BUTTON	2	2				
9	90387–10050	COLLAR	1	1				
10	90201–10035	WASHER, PLATE	1	1				
11	90201–17018	WASHER, PLATE	2	2				
12	1RC–274A3–00	BRACKET, ADAPTER 1	2	2				
13	92012–06040	BOLT, BUTTON HEAD	1	1				
14	92012–06030	BOLT, BUTTON HEAD	1	1				
15	1RC–27410–00	FRONT FOOTREST ASSY (LEFT)	1	1				
16	90109–08231	.BOLT	1	1				
17	1RC–27442–00	BRACKET 2	1	1				
18	90111–10039	BOLT,HEX. SOCKET BUTTON	1	1				
19	90206–17084	WASHER, WAVE	1	1				
20	90105–10435	BOLT, FLANGE	1	1				
21	3XV–27461–02	FOOTREST	1	1				
22	91701–08040	PIN	1	1				
23	91402–25015	PIN, COTTER	1	1				
24	90508–20572	SPRING, TORSION	1	1				
25	90109–08231	BOLT	1	1				
26	1RC–27443–00	BRACKET 3	1	1				
27	1RC–27200–00	PEDAL, BRAKE	1	1				

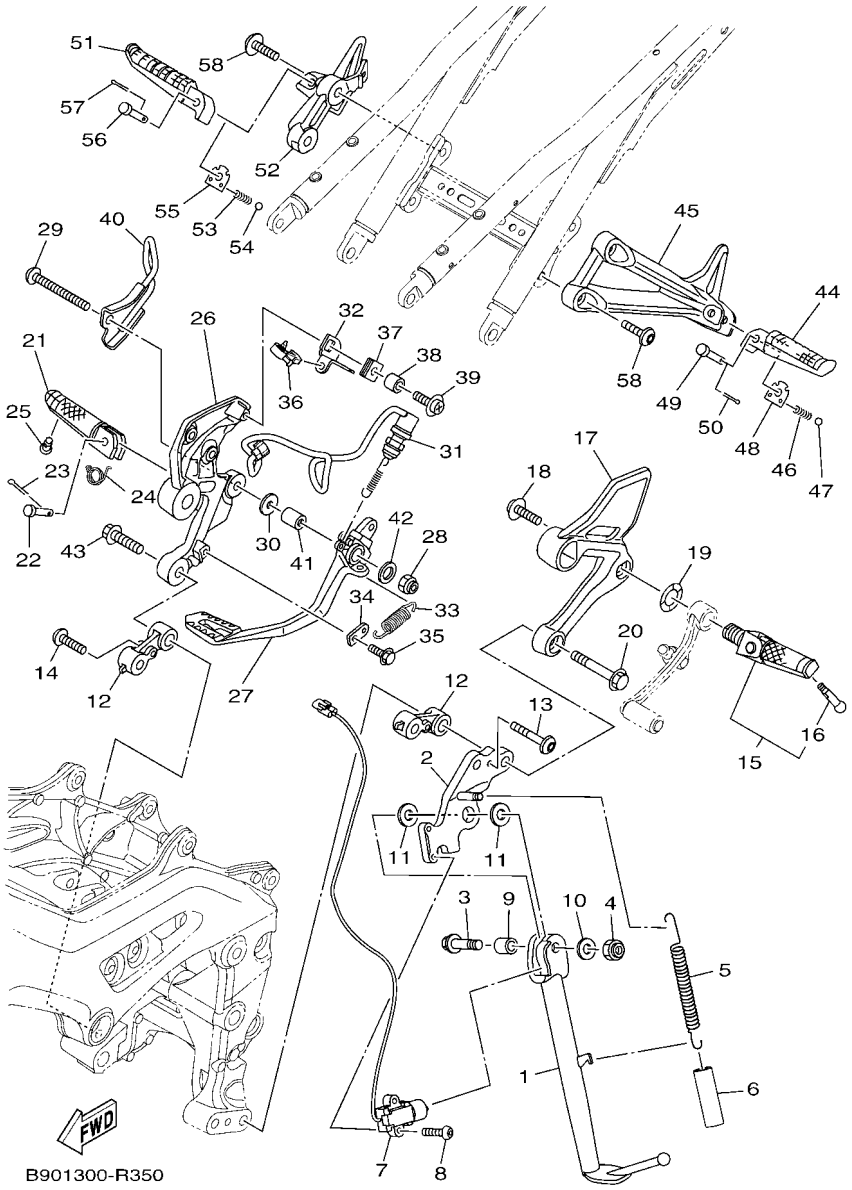

FIG. 35 STAND & FOOTREST

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90185–08089	NUT, SELF-LOCKING	1	1				
29	90111–08028	BOLT,HEX. SOCKET BUTTON	1	1				
30	90201–08103	WASHER, PLATE	1	1				
31	B90–82530–00	STOP SWITCH ASSY	1	1				
32	1RC–2144G–00	STAY, STOP SWITCH	1	1				
33	90506–23008	SPRING, TENSION	1	1				
34	1RC–27432–00	BRACKET 1	1	1				
35	95802–06010	BOLT, FLANGE	1	1				
36	90464–15157	CLAMP	1	1				
37	90480–12607	GROMMET	1	1				
38	90387–06M16	COLLAR	1	1				
39	90159–06150	SCREW, WITH WASHER	1	1				
40	1RC–27267–00	GUIDE, WIRE	1	1				
41	90387–08102	COLLAR	1	1				
42	90201–08048	WASHER, PLATE	1	1				
43	90105–10246	BOLT, FLANGE	1	1				
44	3VR–27431–02	FOOTREST, REAR 1	1	1				
45	1RC–2741L–01	BRACKET 4	1	1				
46	90501–12743	SPRING, COMPRESSION	1	1				
47	93501–04011	BALL	1	1				
48	5VX–27437–00	WASHER, SPECIAL	1	1				
49	91702–08040	PIN, CLEVIS	1	1				
50	91401–25015	PIN, COTTER	1	1				
51	3VR–27441–02	FOOTREST, REAR 2	1	1				
52	1RC–2742L–01	BRACKET 5	1	1				
53	90501–12743	SPRING, COMPRESSION	1	1				
54	93501–04011	BALL	1	1				

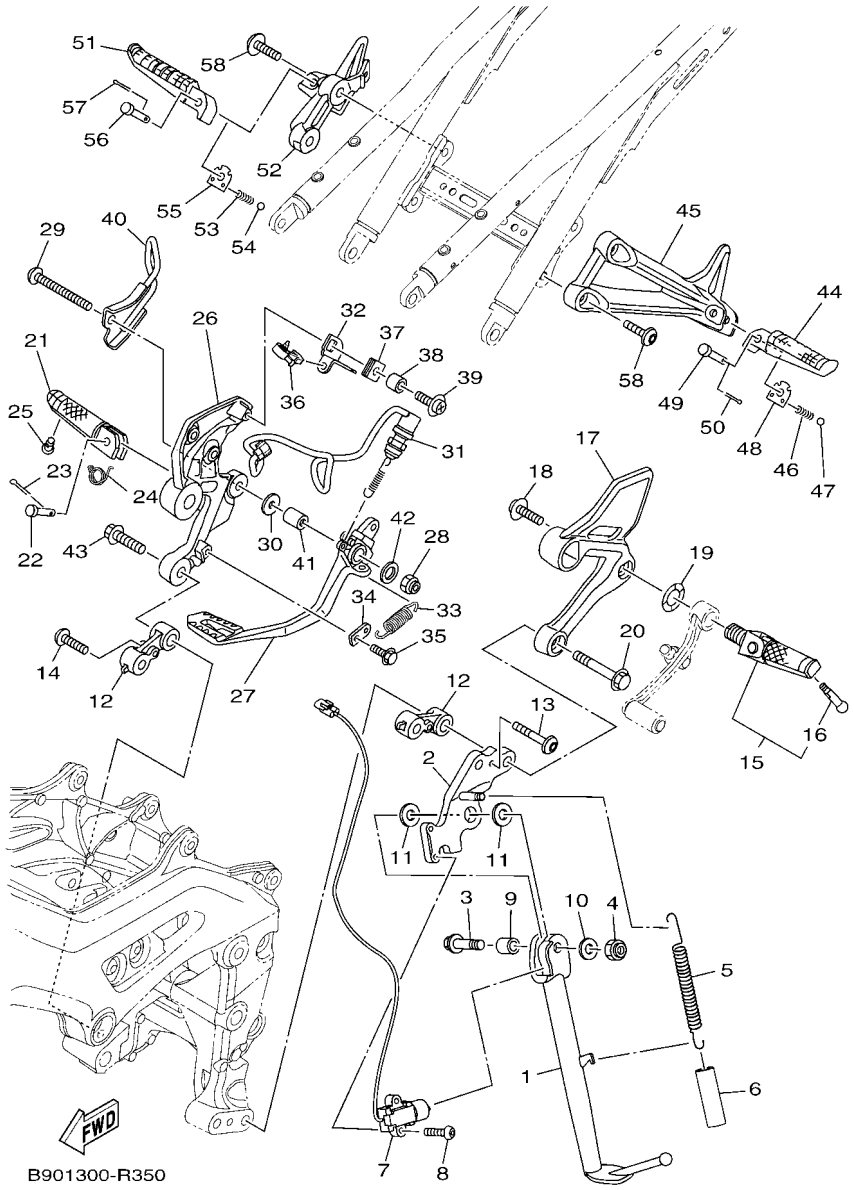

FIG. 35 STAND & FOOTREST

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
55	5VX–27437–00	WASHER, SPECIAL	1	1				
56	91702–08040	PIN, CLEVIS	1	1				
57	91401–25015	PIN, COTTER	1	1				
58	90149–08230	SCREW	4	4				

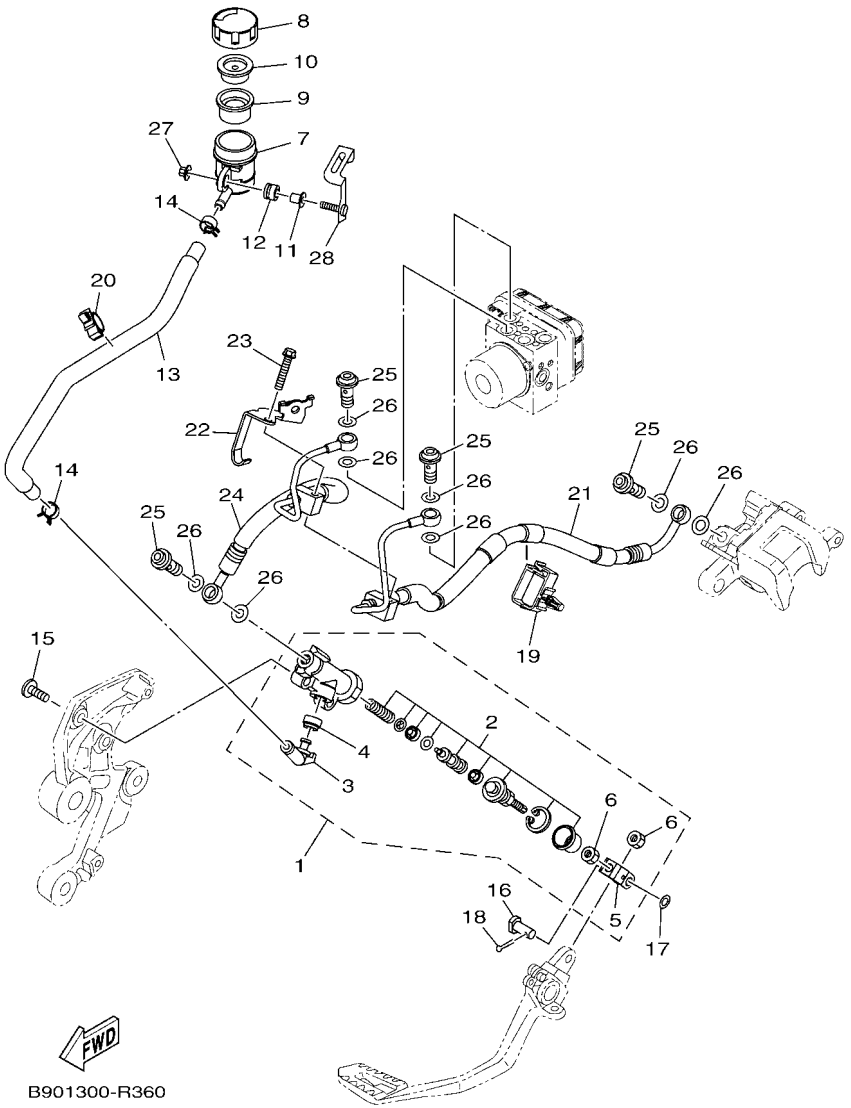

FIG. 36 REAR MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	56P–2583V–00	RR. MASTER CYLINDER ASSY.	1	1				
2	56P–25808–50	.CYLINDER KIT, MASTER	1	1				
3	2D1–2582A–00	.JOINT	1	1				
4	4BP–2585F–01	.O-RING	1	1				
5	4BP–27222–02	.JOINT	1	1				
6	90170–08010	.NUT	2	2				
7	14B–25894–00	TANK, RESERVOIR	1	1				
8	2C0–25852–00	CAP, RESERVOIR	1	1				
9	2VN–25854–00	DIAPHRAGM, RESERVOIR	1	1				
10	2VN–25855–00	BUSH,DIAPHRAGM	1	1				
11	90387–05028	COLLAR	1	1				
12	2C0–26326–00	GROMMET	1	1				
13	1RC–25895–00	HOSE, RESERVOIR	1	1				
14	90467–120A3	CLIP	2	2				
15	90111–08038	BOLT,HEX. SOCKET BUTTON	2	2				
16	90240–08005	PIN, CLEVIS	1	1				
17	90201–08066	WASHER, PLATE	1	1				
18	91401–20012	PIN, COTTER	1	1				
19	90464–20023	CLAMP	1	1				
20	90464–18007	CLAMP	1	1				
21	2DR–2581K–00	HOSE, BRAKE 5	1	1				
22	2DR–85142–00	BRACKET, REFLECTOR 2	1	1				
23	90105–06192	BOLT, FLANGE	1	1				
24	2DR–2581J–00	HOSE, BRAKE 4	1	1				
25	90401–10172	BOLT, UNION	4	4				
26	90430–10005	GASKET	8	8				
27	95707–05500	NUT, FLANGE	1	1				

FIG. 36 REAR MASTER CYLINDER

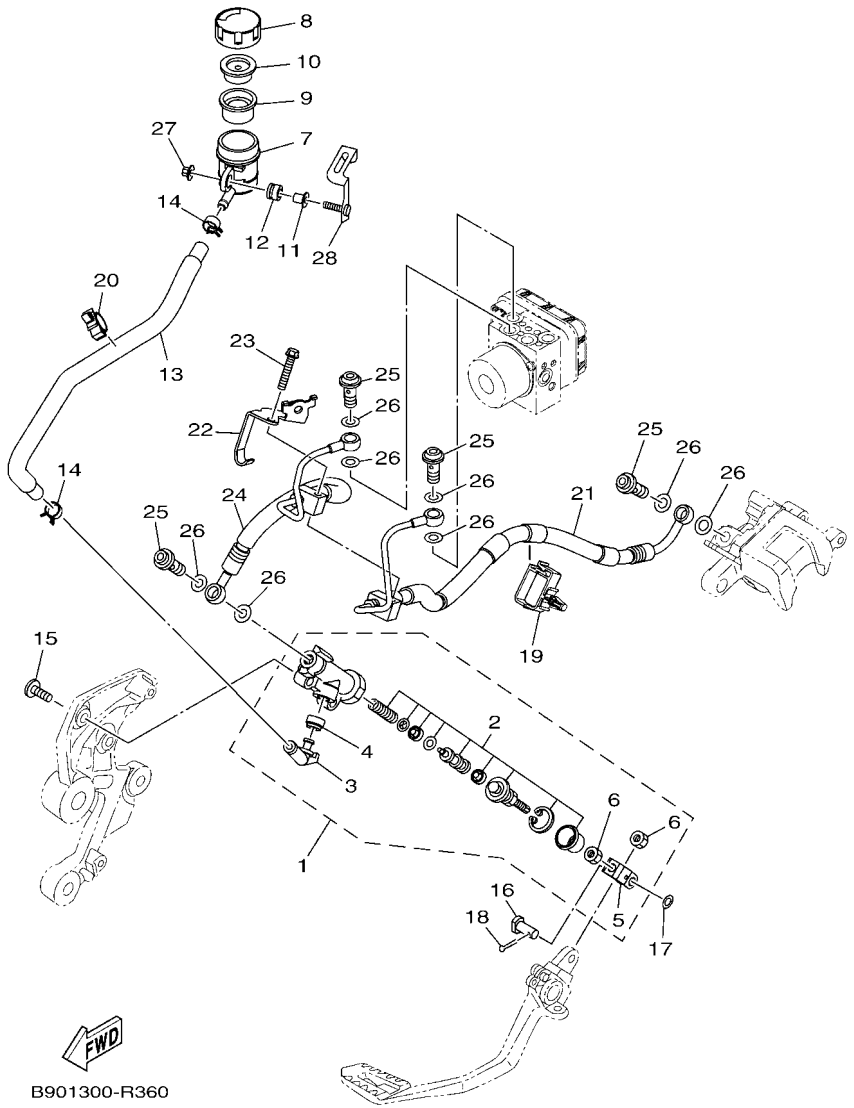

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	1RC–2582E–00	HOLDER, RESERVE TANK	1	1				

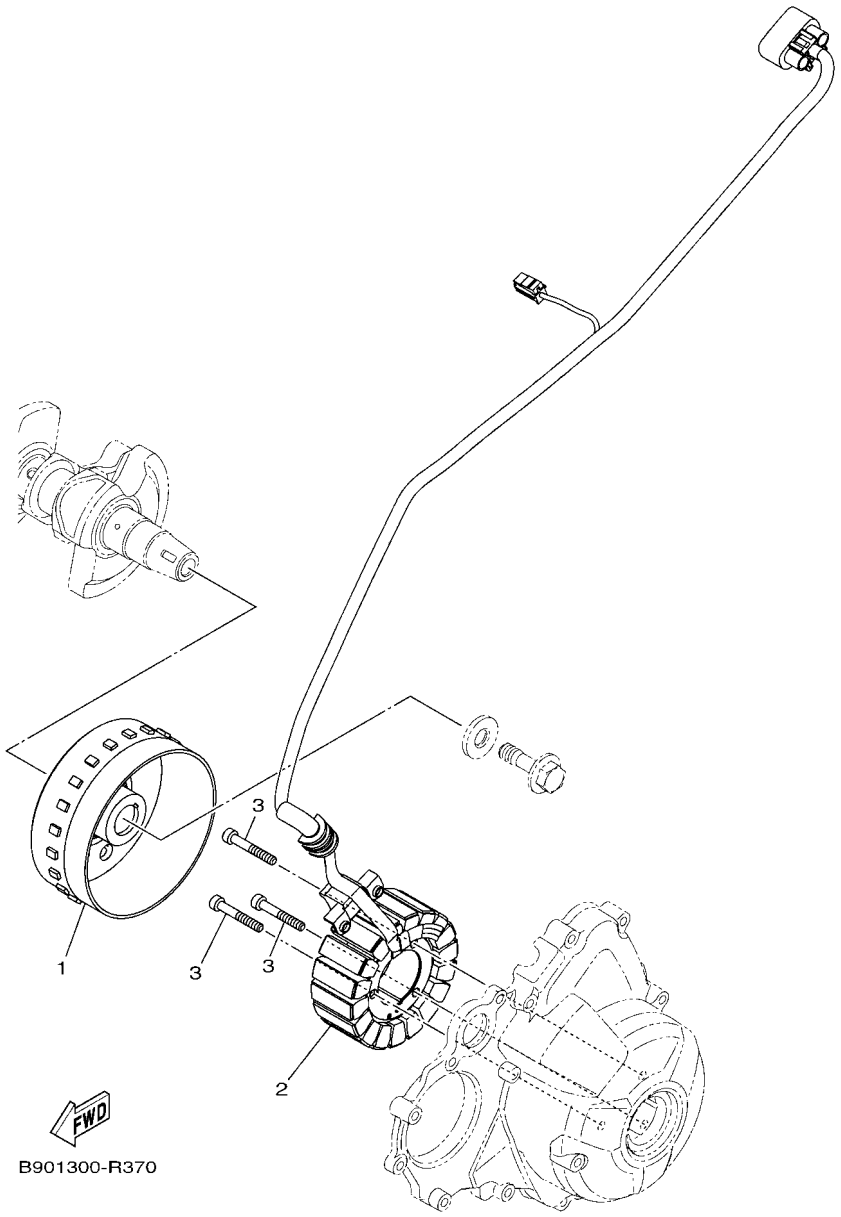

FIG. 37 GENERATOR

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–81450–00	ROTOR ASSY	1	1				
2	1RC–81410–00	STATOR ASSY	1	1				
3	90110–06223	BOLT, HEXAGON SOCKET HEAD	3	3				

FIG. 38 STARTING MOTOR

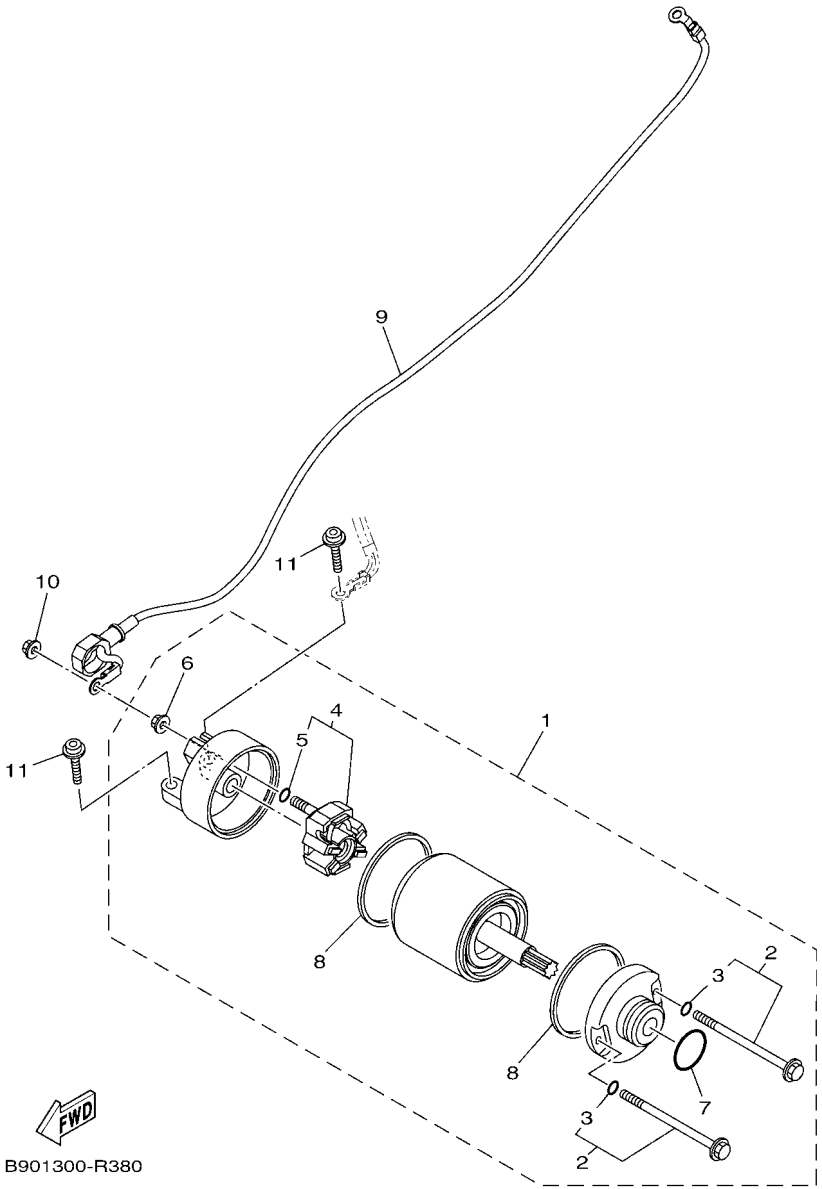

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1RC–81890–00	MOTOR ASSY	1	1				
2	28P–81826–00	.BOLT	2	2				
3	3TB–81847–00	..O-RING	1	1				
4	4B5–81840–00	.BRUSH HOLDER ASSY	1	1				
5	3TB–81847–00	..O-RING	1	1				
6	4XV–8182A–00	.NUT	1	1				
7	1FK–81847–00	.O-RING	1	1				
8	11H–81844–00	.GASKET	2	2				
9	1RC–81815–00	CORD, STARTER MOTOR	1	1				
10	4XV–8182A–00	NUT	1	1				
11	90110–06388	BOLT, HEXAGON SOCKET HEAD	2	2				

FIG. 39 FLASHER LIGHT

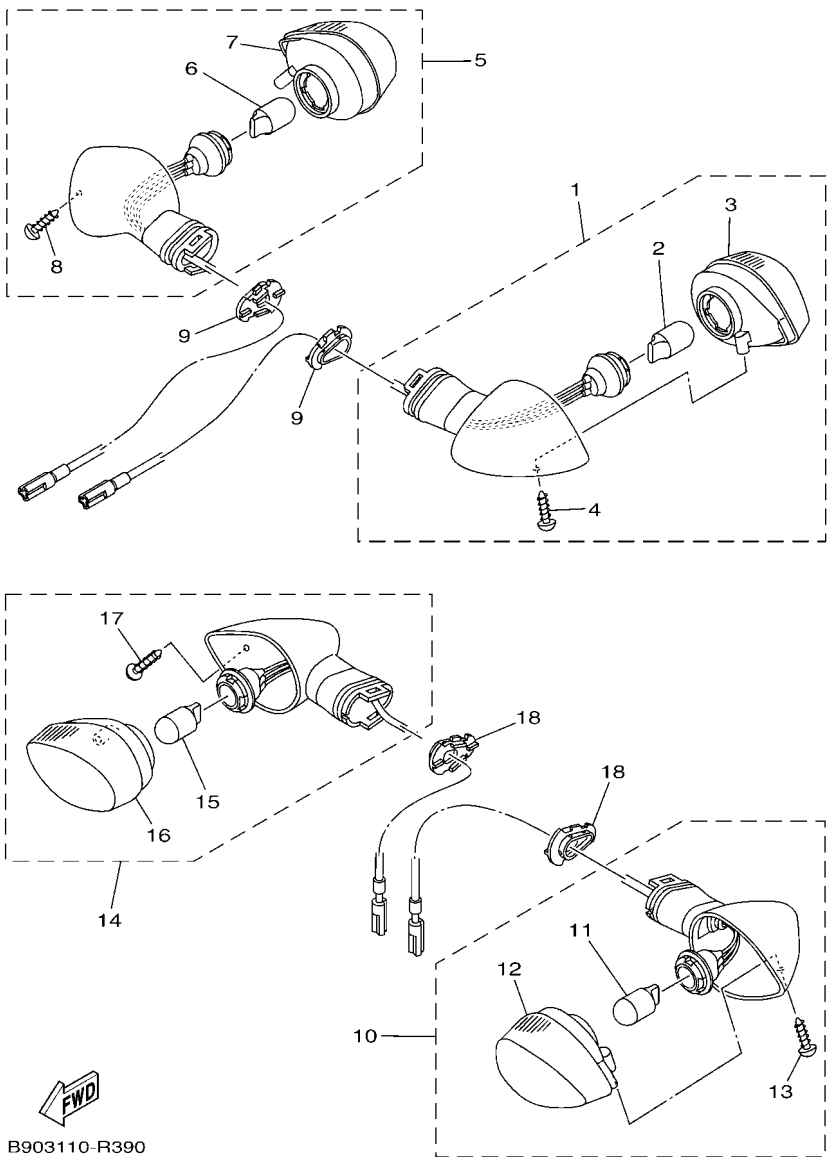

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	5PW–83330–10	REAR FLASHER LIGHT ASSY 1	1	1				
2	5PW–83331–00	.BULB (12V-21/5W T20)	1	1				
3	5PW–8334A–10	.LENS COMP 2	1	1				
4	97706–04012	.SCREW, TAPPING	1	1				
5	5PW–83340–10	REAR FLASHER LIGHT ASSY 2	1	1				
6	5PW–83331–00	.BULB (12V-21/5W T20)	1	1				
7	5PW–8333A–10	.LENS COMP 1	1	1				
8	97706–04012	.SCREW, TAPPING	1	1				
9	32C–83318–00	STAY, FLASHER 1	2	2				
10	32C–83310–01	FRONT FLASHER LIGHT ASSY 1	1	1				
11	5GJ–83331–00	.BULB, FLASHER(12V-21/5W T20)	1	1				
12	5PW–8333A–10	.LENS COMP 1	1	1				
13	97707–40012	.SCREW, TAPPING	1	1				
14	32C–83320–01	FRONT FLASHER LIGHT ASSY 2	1	1				
15	5GJ–83331–00	.BULB, FLASHER(12V-21/5W T20)	1	1				
16	5PW–8334A–10	.LENS COMP 2	1	1				
17	97707–40012	.SCREW, TAPPING	1	1				
18	32C–83318–00	STAY, FLASHER 1	2	2				

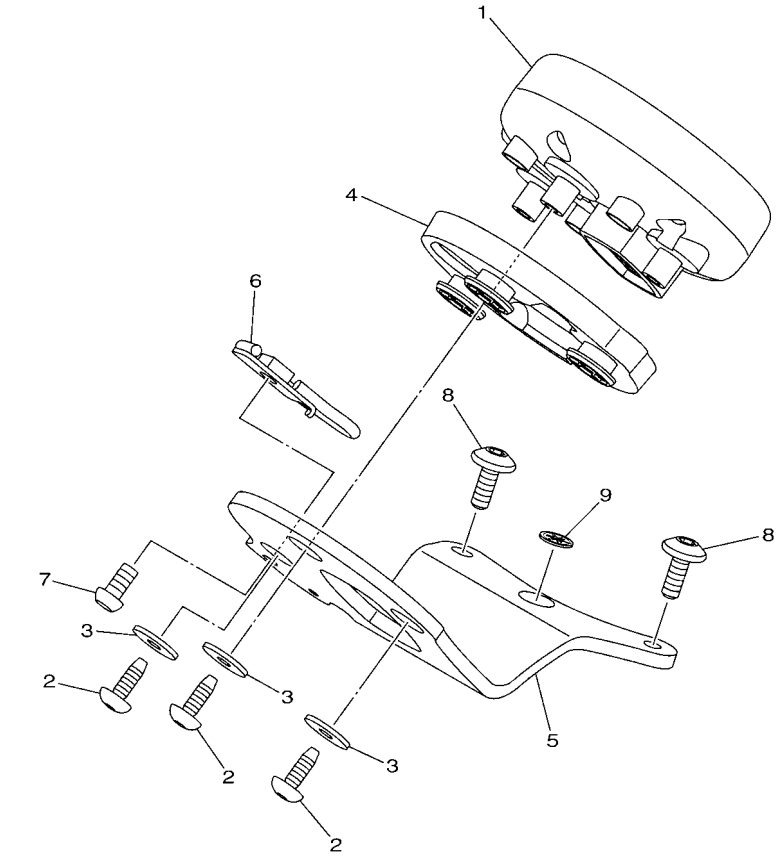

B901300-R400

FIG. 40 METER

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–83500–20	METER ASSY	1	1				
2	90160–05017	SCREW, ROUND TAPPING	3	3				
3	90201–05036	WASHER, PLATE	3	3				
4	B90–83513–00	DAMPER	1	1				
5	B90–8355X–00	BRACKET, METER 1	1	1				
6	B90–83599–00	GUIDE, WIRE	1	1				
7	92017–06012	BOLT, BUTTON HEAD	1	1				
8	90111–06038	BOLT,HEX. SOCKET BUTTON	2	2				
9	14B–2836B–00	TUNING FORK MARK	1	1				

FIG. 41 HEADLIGHT

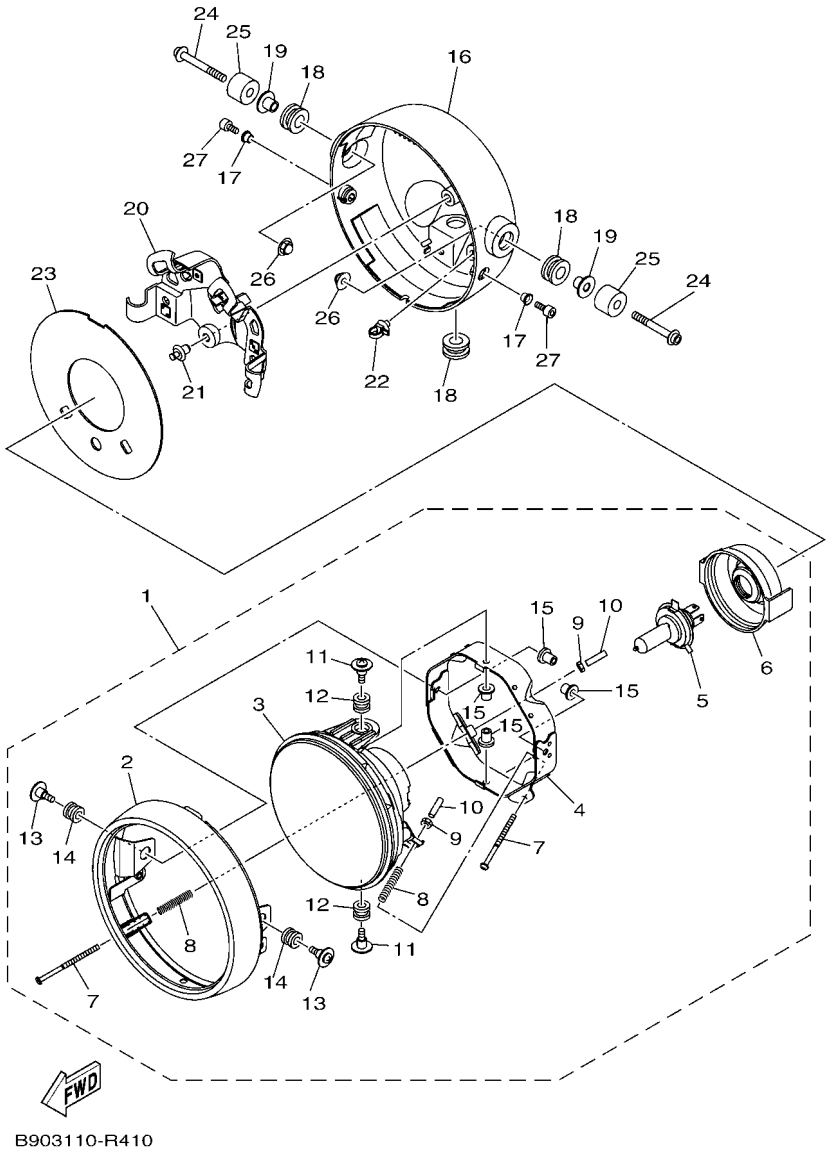

B903110-R410

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B34–84310–20	HEADLIGHT UNIT ASSY	1	1				
2	B34–84315–00	.RIM, HEADLIGHT	1	1				
3	5PX–84320–00	.LENS ASSY	1	1				
4	5PX–84318–00	.STAY, HEADLIGHT 1	1	1				
5	8G9–84314–00	.BULB (12V-60/55W)	1	1				(H4)HALOGEN
6	5PX–84397–00	.COVER, SOCKET	1	1				
7	5PX–84331–00	.SCREW, RIM ADJUSTING	2	2				
8	5PX–84332–00	.SPRING, SCREW	2	2				
9	5PX–84334–00	.NUT, ADJUSTING	2	2				
10	5PX–84385–00	.CAP,1	2	2				
11	5PX–84325–00	.SCREW, RIM FITTING	2	2				
12	5PX–84354–00	.GROMMET	2	2				
13	5PX–84125–00	.SCREW, RIM FITTING	2	2				
14	5PX–84352–00	.GROMMET	2	2				
15	5PX–84317–00	.NUT	4	4				
16	B90–84311–00–P1	BODY, HEADLIGHT	1	1				FOR NBM4
17	4DN–84145–00	COLLAR, BODY FITTING	2	2				
18	90480–16014	GROMMET	3	3				
19	90387–067K8	COLLAR	2	2				
20	B90–8431U–00	HOLDER	1	1				
21	90269–07077	RIVET	1	1				
22	90464–12089	CLAMP	1	1				
23	2PN–84396–00	COVER	1	1				
24	90110–06402	BOLT, HEXAGON SOCKET HEAD	2	2				
25	90387–06315	COLLAR	2	2				
26	90176–06008	NUT, CROWN	2	2				
27	91317–05014	BOLT,HEX.SOCKET HEAD	2	2				

FIG. 42 TAILLIGHT

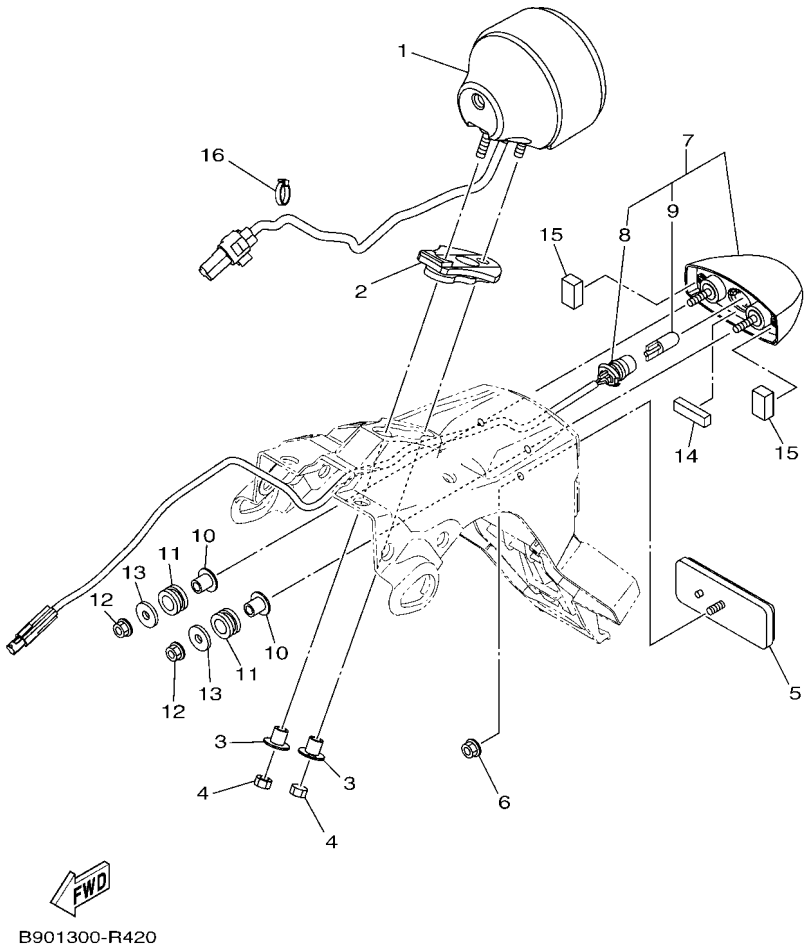

B901300-R420

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–84700–00	TAILLIGHT ASSY	1	1				
2	B90–84736–00	DAMPER, TAIL 1	1	1				
3	90387–06161	COLLAR	2	2				
4	95302–06600	NUT, HEXAGON	2	2				
5	3Y6–85130–02	REAR REFLECTOR ASSY	1	1				
6	95602–05200	NUT, SELF-LOCKING	1	1				
7	1WS–84740–00	LICENCE LIGHT ASSY	1	1				
8	1WS–84547–00	.CORD, LICENCE LIGHT	1	1				
9	1TP–84347–00	.BULB (12V-5W)	1	1				
10	90387–05042	COLLAR	2	2				
11	90480–11009	GROMMET	2	2				
12	95602–05200	NUT, SELF-LOCKING	2	2				
13	90201–054K4	WASHER, PLATE	2	2				
14	1FK–84527–00	DAMPER	1	1				
15	4D9–28415–00	DAMPER 1	2	2				
16	90465–12356	CLAMP	1	1				

FIG. 43 HANDLE SWITCH & LEVER

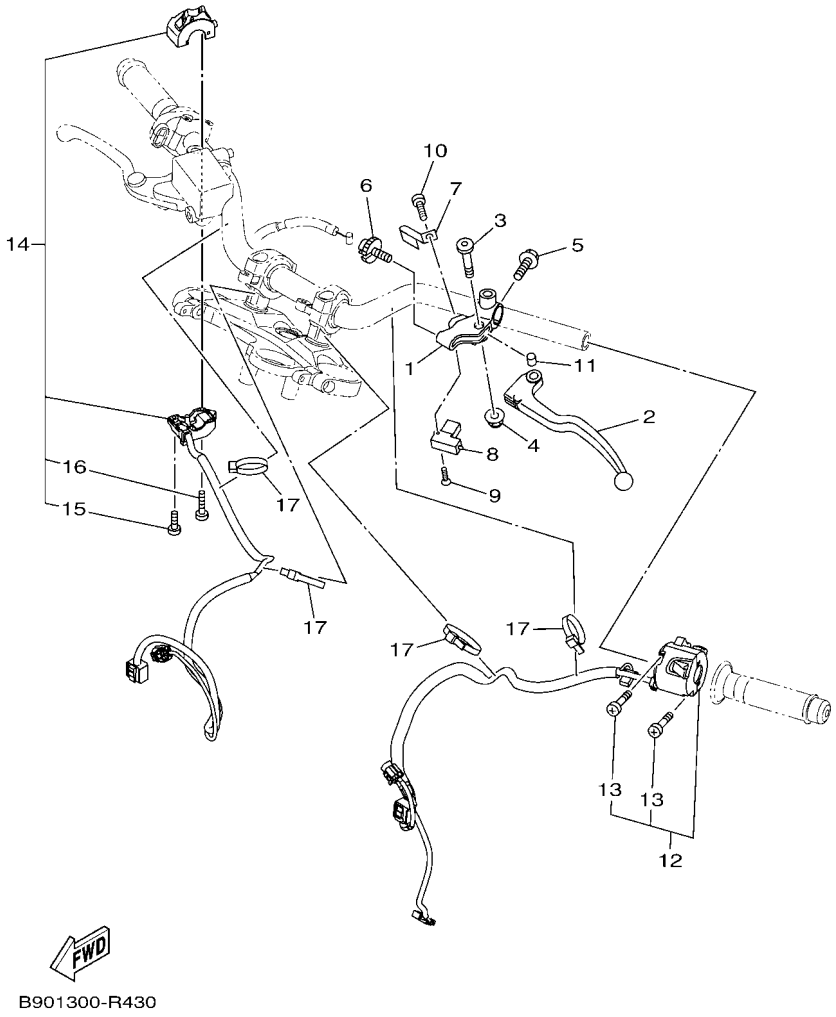

B901300-R430

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	1B3–82911–00	HOLDER, LEVER 1	1	1				
2	B90–83912–00	LEVER 1	1	1				
3	2C0–83945–00	BOLT, LEVER	1	1				
4	95607–06200	NUT, SELF U-FLANGE	1	1				
5	95027–06020	BOLT, FLANGE	1	1				
6	5LV–83951–00	BOLT, CABLE ADJUSTING	1	1				
7	4XV–83929–00	PLATE, SPRING	1	1				
8	3YX–82917–01	SWITCH	1	1				
9	98704–03020	SCREW, FLAT HEAD	1	1				
10	98507–04010	SCREW, PAN HEAD	1	1				
11	5JJ–83913–00	COLLAR, LEVER 1	1	1				
12	B90–83969–00	SWITCH, HANDLE 5	1	1				
13	98507–04025	.SCREW, PAN HEAD	2	2				
14	B90–83963–00	SWITCH, HANDLE 3	1	1				
15	98507–04020	.SCREW, PAN HEAD	1	1				
16	98507–04030	.SCREW, PAN HEAD	1	1				
17	90464–13073	CLAMP	4	4				

FIG. 44 ELECTRICAL 1

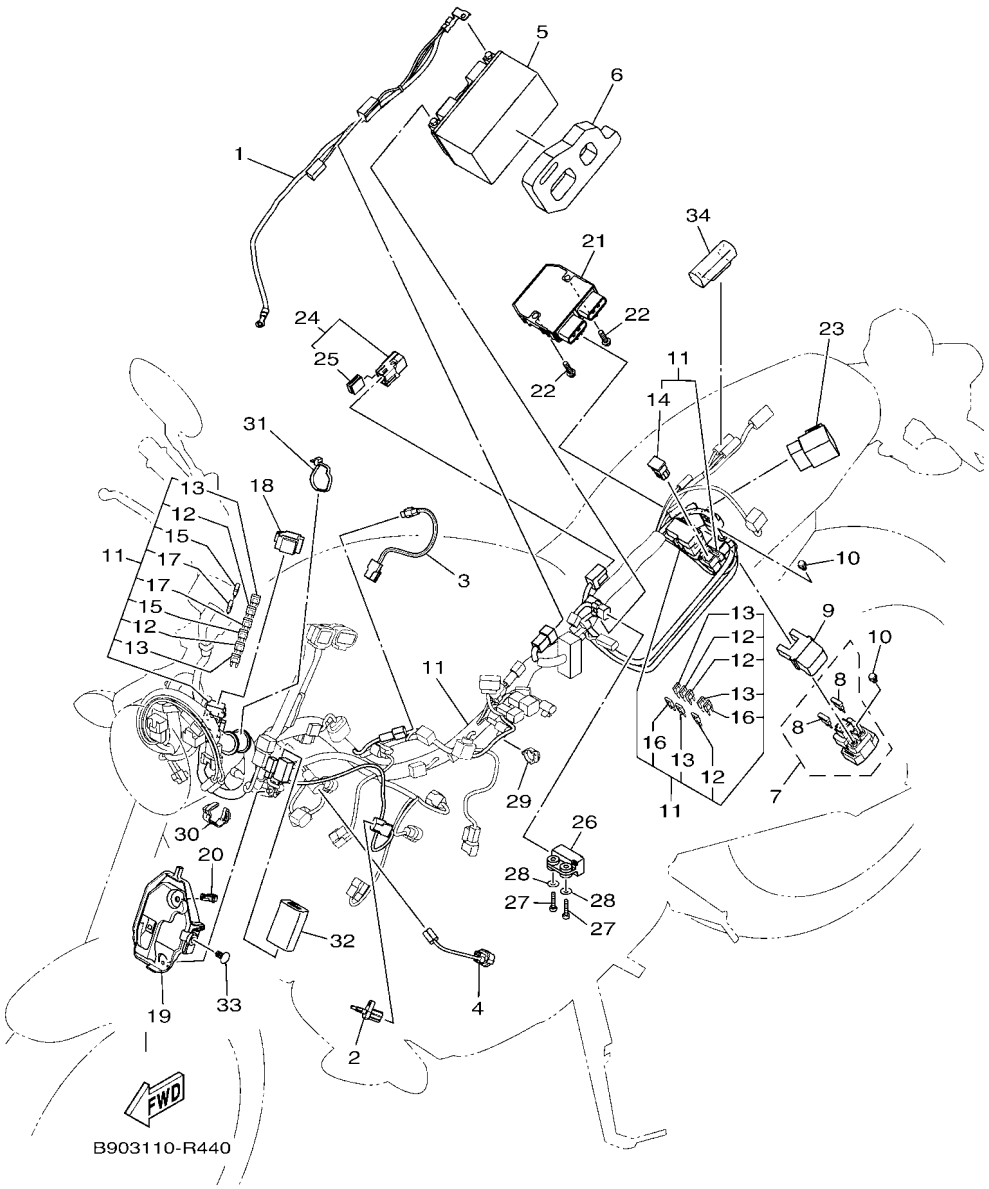

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B90–82116–00	WIRE, MINUS LEAD	1	1				
2	5YU–85886–00	SENSOR, AIR TEMPERATURE	1	1				
3	1RC–82309–01	WIRE, SUB LEAD	1	1				
4	1RC–82509–00	WIRE, SUB LEAD	1	1				
5	5VY–82100–00	BATTERY ASSY (YUASA YTZ10S)	1	1				
6	B90–8246K–00	SPACER	1	1				
7	5S7–81940–00	STARTER RELAY ASSY (RC19-089A)	1	1				
8	42X–82151–00	.FUSE (10A-BL)	2	2				
9	5SL–82119–30	COVER, LEAD WIRE	1	1				
10	95022–06008	BOLT, FLANGE	2	2				
11	B90–82590–10	WIRE HARNESS ASSY	1	1				
12	5JJ–82151–00	.FUSE (7.5A-BL)	5	5				
13	5JJ–82151–10	.FUSE (15A-BL)	5	5				
14	5JW–82151–10	.FUSE (50A)	1	1				
15	5JJ–82151–80	.FUSE (2A-BL)	2	2				
16	5JJ–82151–60	.FUSE (30A-BL)	2	2				
17	5JJ–82151–30	.FUSE (10A-BL)	2	2				
18	1RC–82544–00	CLAMP	1	1				
19	1RC–82599–00	COVER, CONNECTER	1	1				
20	90464–15157	CLAMP	1	1				
21	1D7–81960–01	RECTIFIER & REGULATOR ASSY	1	1				
22	90105–06148	BOLT, FLANGE	2	2				
23	5VK–81950–40	RELAY ASSY (5VK-40)	1	1				
24	1ST–81950–00	RELAY ASSY (1ST-00)	1	1				
25	5JJ–81952–00	.HOLDER, RELAY	1	1				
26	5PS–82576–01	SENSOR, LEAN ANGLE	1	1				
27	91312–04020	BOLT	2	2				

FIG. 44 ELECTRICAL 1

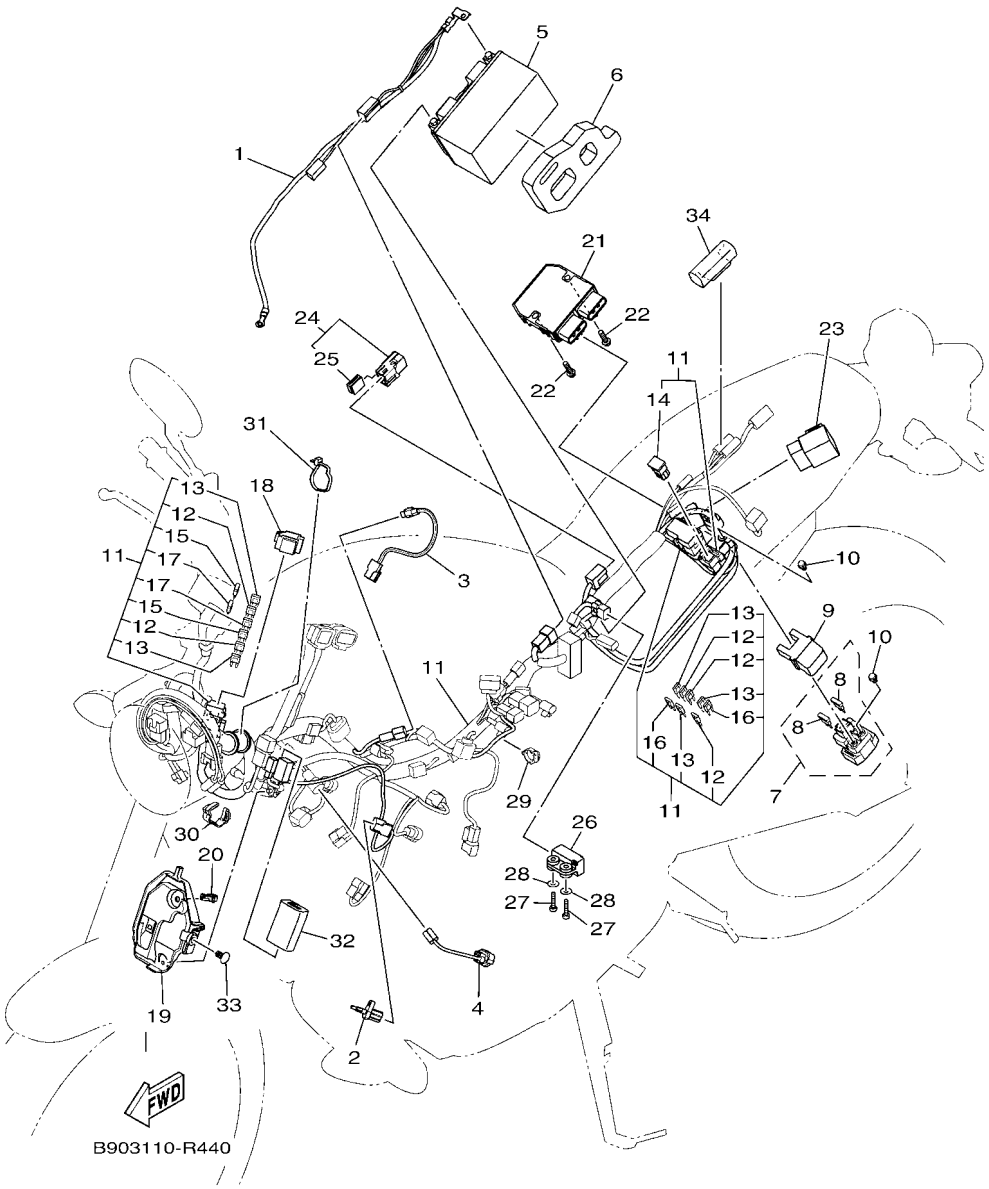

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90201–04030	WASHER, PLATE	2	2				
29	90464–14010	CLAMP	1	1				
30	90464–14010	CLAMP	1	1				
31	3MA–82591–00	BAND	1	1				
32	1RC–82589–00	PROTECTER, WIRE HARNESS	1	1				
33	90269–07015	RIVET	1	1				
34	2D1–82589–00	PROTECTER, WIRE HARNESS	1	1				

FIG. 45 ELECTRICAL 2

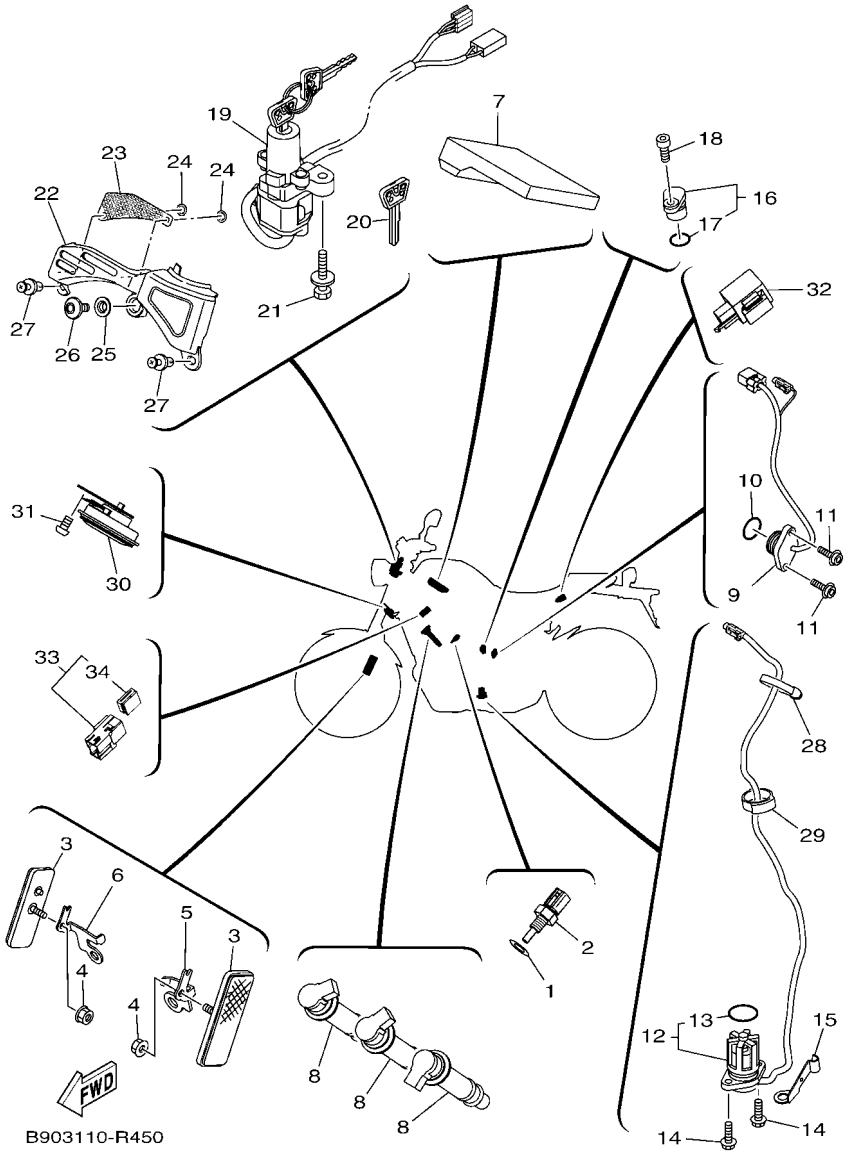

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	90430–10004	GASKET	1	1				
2	4P9–83591–00	THERMO UNIT	1	1				
3	11H–85110–01	REFLECTOR ASSY	2	2				
4	95702–05500	NUT, FLANGE	2	2				
5	1RC–85112–00	BRACKET, REFLECTOR 1	1	1				
6	1RC–85122–00	BRACKET, REFLECTOR 2	1	1				
7	B90–8591A–40	ENGINE CONTROL UNIT ASSY	1	1				
8	1RC–82310–00	IGNITION COIL ASSY	3	3				
9	1RC–82540–00	NEUTRAL SWITCH ASSY	1	1				
10	93210–21001	O-RING	1	1				
11	90110–05067	BOLT, HEXAGON SOCKET HEAD	2	2				
12	5S7–85720–00	OIL LEVEL GAUGE ASSY	1	1				
13	5VY–8A8E0–00	.O-RING	1	1				
14	95022–06016	BOLT, FLANGE	2	2				
15	90465–08053	CLAMP	1	1				
16	3P6–15399–00	PLUG, BLIND	1	1				
17	93210–15566	.O-RING	1	1				
18	90110–06161	BOLT, HEXAGON SOCKET HEAD	1	1				
19	1RC–82501–30	MAIN SWITCH STEERING LOCK	1	1				
20	4BH–82511–09	BLANK KEY	1	1				AP
21	90109–08195	BOLT	2	2				
22	B90–82568–00	COVER, MAIN SWITCH	1	1				
23	B90–28309–00	GRILLE, FRONT	1	1				
24	90183–05M02	NUT, SPRING	2	2				
25	90387–09020	COLLAR	1	1				
26	90111–06090	BOLT,HEX. SOCKET BUTTON	1	1				
27	90269–06018	RIVET	2	2				

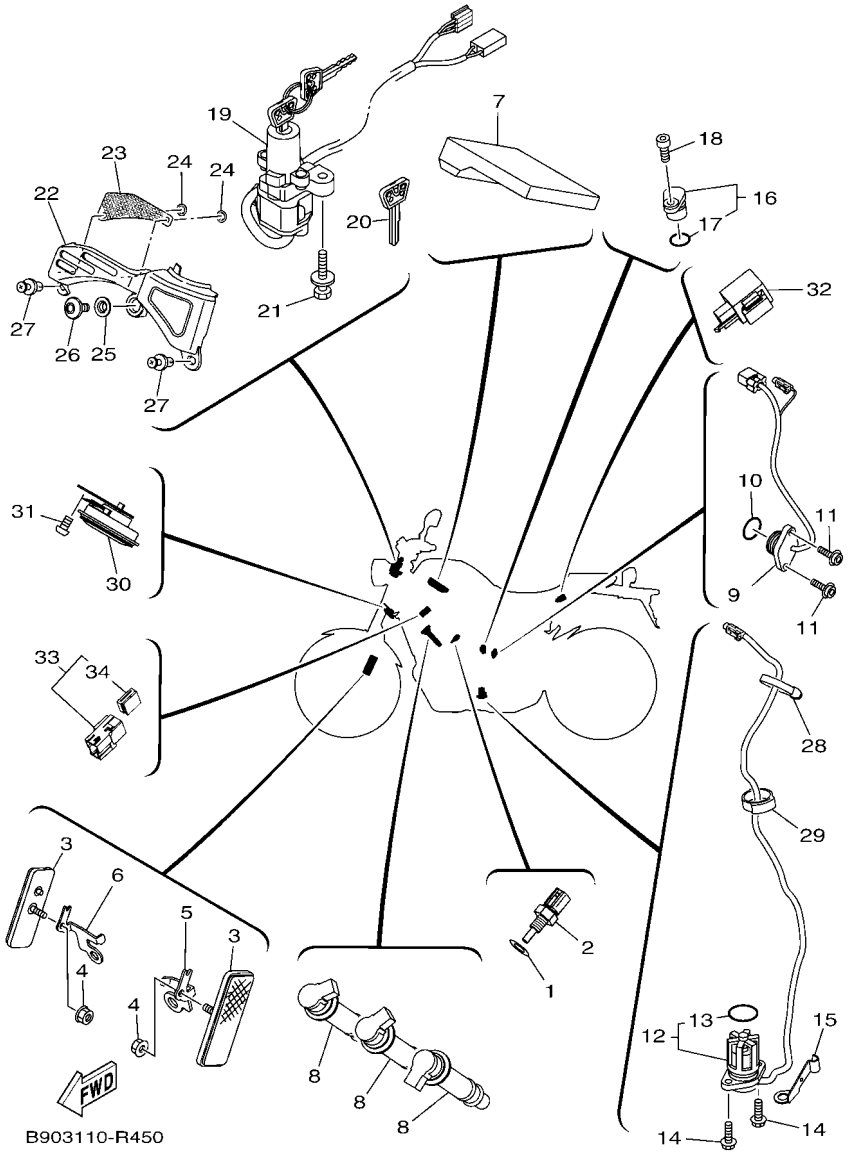

FIG. 45 ELECTRICAL 2

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
28	90464–13073	CLAMP	1	1				
29	90464–16001	CLAMP	1	1				
30	BS2–83371–00	HORN	1	1				
31	92017–06010	BOLT, BUTTON HEAD	1	1				
32	4C8–83350–10	FLASHER RELAY ASSY	1	1				
33	1ST–81950–00	RELAY ASSY (1ST-00)	1	1				
34	5JJ–81952–00	.HOLDER, RELAY	1	1				

FIG. 46 ELECTRICAL 3

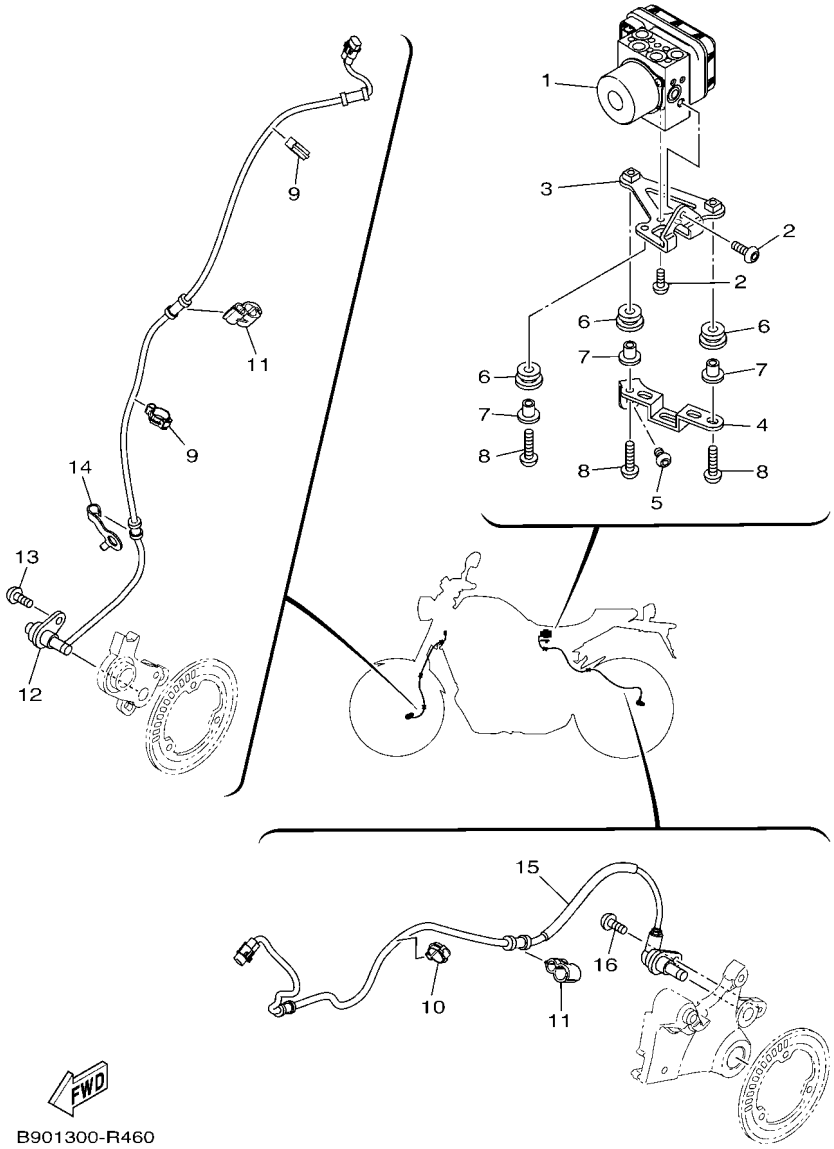

REF. NO.	PART NO.	DESCRIPTION	B90H	B90J				REMARKS
1	B50–85930–09	HYDRAULIC UNIT ASSY	1	1				
2	92012–06010	BOLT, BUTTON HEAD	2	2				
3	2DR–85991–00	BRACKET, UNIT	1	1				
4	2DR–85542–00	BRACKET	1	1				
5	90111–06085	BOLT,HEX. SOCKET BUTTON	1	1				
6	90480–13567	GROMMET	3	3				
7	90387–06160	COLLAR	3	3				
8	92012–06020	BOLT, BUTTON HEAD	3	3				
9	90464–12013	CLAMP	2	2				
10	90464–14003	CLAMP	1	1				
11	90464–10233	CLAMP	2	2				
12	B90–85970–00	WHEEL SENSOR ASSY, FRONT	1	1				
13	92014–06014	BOLT, BUTTON HEAD	1	1				
14	2DR–23318–00	WIRE, HOLDER 1	1	1				
15	2DR–85980–01	WHEEL SENSOR ASSY, REAR	1	1				
16	92014–06014	BOLT, BUTTON HEAD	1	1				

PART NO.	REF. NO.
B90–11101–09	1 – 1
5VY–1111G–00	1 – 11
	1 – 28
	1 – 30
2C0–11133–11	1 – 2
B90–11165–00	1 – 23
4TR–11167–00	1 – 26
1RC–11169–00	1 – 24
BS2–11181–00	1 – 12
1RC–11191–10	1 – 13
1RC–11193–01	1 – 15
214–11198–01	8 – 5
1RC–11400–00	2 – 1
2S3–11413–00	2 – 14
2S3–11413–10	2 – 14
2S3–11413–20	2 – 14
2S3–11413–30	2 – 14
2S3–11413–40	2 – 14
5VY–11416–00	2 – 5
5VY–11416–10	2 – 5
5VY–11416–20	2 – 5
5VY–11416–30	2 – 5
5VY–11416–A0	2 – 5
1RC–11500–00	2 – 13
1RC–11603–00	2 – 7
1RC–11631–00	2 – 6
39P–11633–00	2 – 8
1RC–11650–00	2 – 2
1RC–11654–00	2 – 3
1RC–11656–00	2 – 4
1RC–11656–10	2 – 4
1RC–11656–20	2 – 4
1RC–11656–30	2 – 4
1RC–12111–00	3 – 1
1RC–12113–00	3 – 4
1RC–12114–00	3 – 5
1RC–12116–00	3 – 3
3D7–12117–00	3 – 6
1WG–12118–00	3 – 7
4TE–12119–00	3 – 8
1RC–12121–00	3 – 2
4C8–12153–09	3 – 10
4C8–12153–10	3 – 10
1HX–12168–F0	3 – 9
1HX–12168–H1	3 – 9
1HX–12168–K1	3 – 9
1HX–12168–M1	3 – 9
1HX–12168–R1	3 – 9
1HX–12168–U1	3 – 9
1HX–12168–W1	3 – 9
1HX–12168–Y1	3 – 9
1HX–12169–11	3 – 9
1HX–12169–31	3 – 9
1HX–12169–50	3 – 9
1HX–12169–70	3 – 9
1HX–12169–90	3 – 9
1HX–12169–E0	3 – 9
1HX–12169–G0	3 – 9
1HX–12169–J0	3 – 9
1HX–12169–L0	3 – 9
1HX–12169–N0	3 – 9
1HX–12169–T0	3 – 9
1RC–12170–00	4 – 1
20S–12176–00	4 – 3
1RC–12180–00	4 – 2
B90–12210–00	4 – 6
1WS–12213–00	4 – 9
5SL–12214–00	4 – 8
5EL–12228–00	4 – 7
5BE–12241–00	1 – 14
1RC–12250–01	4 – 12
1RC–12251–00	4 – 11
5VY–12277–00	26 – 14
	26 – 33
1RC–12405–01	6 – 2
B90–1240J–00	6 – 13
1RC–12410–00	5 – 21
1RC–12420–00	5 – 1
1RC–12422–00	5 – 3
5FC–12437–00	6 – 10
5VK–12438–00	5 – 7
1RC–12439–00	5 – 11
1RC–1243A–00	6 – 22
1RC–12450–00	5 – 2
1RC–12459–00	5 – 4
2PP–12461–00	6 – 1
4FL–12462–00	6 – 9
1RC–12467–00	6 – 5
1RC–12469–00	5 – 23
1AA–12535–00	6 – 4
1RC–12564–00	14 – 7
1RC–12572–00	10 – 4
1RC–12576–00	5 – 35
1RC–12577–00	5 – 18
BS2–12578–00	5 – 26
BS2–12579–00	5 – 29
1RC–12588–00	5 – 32
1RC–12637–00	6 – 15
1RC–12637–00	6 – 3
5VY–13117–10	7 – 9
1RC–13300–00	7 – 1
1RC–13355–00	7 – 2
B56–13400–10	8 – 3
1RC–13410–00	7 – 6
1RC–13414–00	8 – 6
5GH–13440–60	8 – 2
BS2–13470–00	8 – 10
2HC–13473–00	8 – 11
1RC–13542–00	9 – 4
1RC–13544–00	9 – 2
1RC–13556–00	10 – 6
8FP–13556–00	10 – 7
1RC–13573–00	10 – 10
1RC–13635–00	10 – 1
1RC–13750–00	9 – 1
B90–13750–10	9 – 1
4C8–13761–00	10 – 8
1RC–13907–00	27 – 21
1RC–13930–00	10 – 3
1RC–13938–00	10 – 5
B90–13971–00	27 – 29
2C0–14105–00	9 – 15
5PS–14147–00	10 – 9
2C0–14216–00	9 – 9
5FL–14216–00	9 – 14
8CC–14216–10	9 – 12
3XV–14251–00	9 – 7
8FP–14349–00	9 – 6
8FP–14349–20	9 – 5
8FP–14349–30	9 – 8
1RC–14411–00	10 – 12
1RC–14421–20	10 – 13
1RC–14425–00	10 – 23
1RC–14426–00	10 – 24
B90–1443J–10	9 – 21
1RC–1444J–00	9 – 22
1RC–14451–00	10 – 14
1RC–14452–00	10 – 15
1RC–14453–00	10 – 17
1RC–14454–00	10 – 19
1RC–1445C–00	11 – 7
1RC–14463–00	10 – 18
14B–14465–00	9 – 19
1RC–14466–00	9 – 20
4FM–14613–00	12 – 5
B90–14708–00	12 – 3
B90–14710–00	12 – 1
5VY–14747–00	12 – 7
5VY–1482K–00	1 – 17
5JW–1482K–01	1 – 16
2S3–14840–00	11 – 1
1RC–14881–00	11 – 2
1RC–14882–00	11 – 4
1RC–14883–00	11 – 6
5JW–14889–00	1 – 21
5PS–14890–00	1 – 20
5SL–14890–00	1 – 18
5SL–14899–00	1 – 19
BS2–15100–09	13 – 1
5EB–15155–00	13 – 2
23P–15156–00	13 – 9
1RC–15163–00	17 – 2
36Y–15189–00	13 – 18
1RC–15191–00	14 – 27
1RC–15199–00	14 – 15
B90–15316–00	14 – 17
B90–15326–00	14 – 26
2H7–15361–00	13 – 17
5GJ–15363–10	14 – 28
1RC–15377–00	13 – 24
1RC–15393–00	10 – 25
3P6–15399–00	45 – 16
1RC–15411–00	14 – 1
1RC–15416–10	14 – 30
1RC–15418–00	13 – 25
1RC–15421–10	14 – 16
1RC–15441–00	13 – 22
1RC–15451–00	14 – 6
1RC–15456–00	14 – 31
1RC–15461–00	14 – 20
1RC–15484–00	14 – 13
B90–15490–00	14 – 24
B90–15492–00	14 – 18
B90–15494–00	14 – 25
1RC–15512–00	15 – 1
1RC–15515–00	15 – 5
5EB–15521–00	15 – 2
1RC–15590–00	15 – 3
1RC–16150–00	16 – 1
5VY–16154–00	16 – 2
2C0–16164–00	16 – 27
5VY–16164–00	16 – 26
B90–16173–00	16 – 9
1TD–16178–00	16 – 16
1RC–16181–00	16 – 28
5TA–16321–00	16 – 4
1TD–16324–00	16 – 7
4B1–16324–00	16 – 14
	16 – 15
4B1–16325–00	16 – 14
	16 – 15
5VY–16325–00	16 – 6
	16 – 14
	16 – 15
B90–16331–00	16 – 5
2CR–16337–00	16 – 11
1RC–16340–00	16 – 22
132–16346–00	19 – 2
B90–16350–00	16 – 8
B90–16352–00	16 – 10
4XV–16356–01	16 – 21
B90–16371–00	16 – 3
5VY–16382–10	16 – 31
1TD–16383–00	16 – 12
1TD–16384–00	16 – 13
1RC–17121–00	17 – 13
1RC–17131–00	17 – 8
1RC–17151–00	17 – 5
1RC–17161–00	17 – 10
1RC–17211–00	17 – 32
2PP–17221–00	17 – 21
1RC–17231–00	17 – 29
1RC–17241–00	17 – 26
1RC–17251–10	17 – 30
2PP–17261–00	17 – 24
1RC–17411–00	17 – 1
1RC–17421–00	17 – 16
5PS–17460–00	17 – 34
1RC–18101–01	19 – 8
1RC–18110–00	19 – 17
1RC–18112–00	19 – 14
5EB–18113–00	19 – 18
3VD–18115–00	19 – 19
5VX–18116–00	19 – 22
1D7–18127–00	19 – 4
1RC–18140–00	19 – 11
5VX–18154–00	19 – 23
2C0–18175–00	19 – 10
1RC–18511–00	18 – 4
1RC–18512–00	18 – 5
1RC–18513–00	18 – 6
1RC–18531–00	18 – 7
20S–18535–00	18 – 8
2C0–18536–00	18 – 9
1RC–18540–00	18 – 1
3D7–18542–00	18 – 3
1RC–18562–00	18 – 10
1RC–21110–40	20 – 1
1RC–2117G–00	20 – 17
1RC–2117X–00	20 – 4
1RC–2117Y–00	20 – 5
B90–21190–00	20 – 2
5VN–21268–00	20 – 13
5VX–21289–00	20 – 15
1RC–2144G–00	35 – 32
1RC–21495–00	20 – 8
4C8–21495–00	20 – 12
B90–21511–00–P1	21 – 1
B90–21513–00	21 – 13
B90–21514–00	21 – 14
B90–21629–00	21 – 26
B90–2163E–00	21 – 37
3P6–21649–00	25 – 20
B90–2164F–00	21 – 36
B90–2164G–00–0X	21 – 31
1RC–21650–00	23 – 19
14B–21668–00	21 – 53
B90–21682–00	21 – 43
1RC–21684–00	10 – 29
1RC–21686–00	10 – 30
B90–21691–00	21 – 25
B90–21711–00	22 – 18
	22 – 25
4B5–21717–00	21 – 21
B90–2172E–00–P0	22 – 1
B90–2172K–00	22 – 3
B90–2172L–00	22 – 12
1RC–2172W–00	6 – 32
B90–21731–00	22 – 19
B90–21741–00	22 – 26
1RC–21748–00	6 – 39
1RC–21749–00	6 – 35
B90–2174E–00–P0	22 – 9
B90–2176E–00	22 – 6
	22 – 15
1RC–21816–00	6 – 31
1RC–21826–00	6 – 28
1RC–21828–00	6 – 27

PART NO.	REF. NO.
1RC–21871–00	6 – 25
1RC–21875–00	6 – 26
B90–2198F–00	22 – 4
B90–2198G–00	22 – 13
B90–21998–00	21 – 34
B90–22110–01	23 – 1
20S–22128–00	23 – 6
46X–22141–00	23 – 45
1RC–22151–00	23 – 12
1RC–22159–00	23 – 46
1RC–2217A–00	23 – 30
1RC–2217M–00	23 – 42
30X–2219X–00	23 – 4
B90–22210–20	24 – 1
1RC–2221A–00	23 – 22
1RC–2221B–00	23 – 23
1RC–22311–00	23 – 14
1RC–22358–00	23 – 29
1RC–22825–00	6 – 30
14B–22873–00	22 – 10
B90–23102–00	26 – 20
B90–23103–00	26 – 1
1RC–23110–01	26 – 22
B90–23111–00	26 – 36
B90–23111–10	26 – 17
B90–23113–00	25 – 19
1RC–23118–00	26 – 15
	26 – 34
1RC–23120–01	26 – 3
2PN–23121–00	25 – 22
4KM–23123–01	26 – 42
1RC–23125–00	26 – 8
	26 – 27
1RC–23126–40	26 – 2
	26 – 21
2PN–23131–00	25 – 23
2PP–23141–00	26 – 13
	26 – 32
4EB–23144–00	26 – 4
	26 – 23
4EB–23145–01	26 – 6
	26 – 25
36Y–23146–10	26 – 7
	26 – 26
3XJ–23147–L0	26 – 18
	26 – 37
26H–23156–00	26 – 5
	26 – 24
509–23158–L0	26 – 11
	26 – 30
2PP–23170–00	26 – 29
2PP–23170–10	26 – 10
4FM–23171–40	26 – 9
	26 – 28
B90–23174–10	25 – 17
278–23181–50	26 – 12
	26 – 31
B90–23195–00	25 – 26
2DR–23318–00	46 – 14
1RC–23340–11	26 – 38
3LC–23357–00	26 – 16
	26 – 35
B90–23361–00	21 – 3
B90–23371–00	21 – 8
1RC–23377–00	25 – 29
B90–23389–00	25 – 25
1RC–23393–00	25 – 7
5VX–23415–00	25 – 2
26H–23418–01	25 – 5
1RC–23435–30	25 – 8
1RC–23441–11	25 – 11
3GB–23448–00	23 – 33
1RC–2344A–11	25 – 12
3FV–23462–00	26 – 39
B90–23857–00	33 – 11
B90–24110–00	27 – 1
B90–2411F–00	27 – 32
B90–2411L–00	27 – 33
B90–24121–00	27 – 2
B90–2412Y–00	27 – 7
B90–2413Y–00	27 – 35
B90–24145–00	27 – 8
B90–2414K–00	27 – 4
B90–2414N–00	27 – 5
B90–2416B–01	27 – 61
2CR–24170–00	27 – 51
B90–24183–00	27 – 52
B90–24191–00	27 – 13
B90–2419F–00	27 – 53
B90–241B1–00–P1	27 – 46
B90–24217–00	27 – 31
B90–24313–10	27 – 55
1RC–24315–00	27 – 25
1RC–24316–00	27 – 27
B90–24321–00	27 – 57
68V–24376–00	9 – 3
1RC–24486–00	27 – 23
B90–24491–00	27 – 22
B90–24491–00	27 – 18
1RC–2465B–00	21 – 39
B90–24665–00	27 – 36
B90–2466M–00	27 – 37
B90–24730–10	28 – 1
B90–24742–00	27 – 38
B90–24780–00	28 – 5
1RC–2478X–00	28 – 7
1RC–24847–11	25 – 14
1RC–24848–11	25 – 15
3TB–24877–A0	21 – 55
2PP–25117–00	29 – 2
2DR–25168–00–98	29 – 1
2DR–2517A–00	30 – 29
2DR–2517G–00	30 – 3
	32 – 3
1RC–25181–00	29 – 9
2PP–25317–00	31 – 7
2DR–25338–00–98	31 – 3
1RC–25364–00	31 – 8
5JJ–25366–00	31 – 12
1RC–2537W–00	31 – 19
1RC–25381–00	31 – 24
1RC–25383–00	31 – 14
3SP–25388–00	31 – 22
1RC–25389–00	31 – 23
5MT–25398–00	29 – 7
	31 – 11
5MT–25398–10	29 – 7
	31 – 11
5MT–25398–20	29 – 7
	31 – 11
1RC–25445–00	31 – 16
4SV–25802–00	30 – 8
	30 – 19
5SL–25802–00	32 – 6
4SV–25802–10	30 – 6
	30 – 17
5SL–25803–00	32 – 7
3GM–25803–10	30 – 7
	30 – 18
3MA–25803–10	30 – 9
	30 – 20
5SL–25805–00	30 – 10
	30 – 21
5VX–25806–00	32 – 14
1MC–25807–00	34 – 2
56P–25808–50	36 – 2
2DR–2580A–00	34 – 1
1RC–2580T–00	30 – 5
2DR–2580U–00	30 – 16
2DR–2580W–00	32 – 5
2DR–2581J–00	36 – 24
2DR–2581K–00	36 – 21
1RC–2581T–00	30 – 1
1J3–25824–00	30 – 14
5VS–25824–00	30 – 25
8CR–25824–00	32 – 18
306–25825–01	30 – 15
	30 – 26
1UY–25825–51	32 – 19
5SL–25827–00	32 – 20
5SL–25827–10	32 – 21
5SL–25828–01	32 – 22
2D1–2582A–00	36 – 3
1RC–2582E–00	36 – 28
1RC–2582W–00	32 – 1
5SL–25838–00	32 – 9
56P–2583V–00	36 – 1
2DR–2584A–00	34 – 20
2DR–2584B–00	34 – 21
2C0–25852–00	36 – 8
5VS–25852–00	34 – 3
20S–25854–00	34 – 5
2VN–25854–00	36 – 9
2VN–25855–00	36 – 10
5VS–25855–00	34 – 4
4BP–2585F–01	36 – 4
5VS–25867–00	34 – 11
2DR–25872–00	34 – 16
B90–25876–00	25 – 27
14B–25894–00	36 – 7
1RC–25895–00	36 – 13
5VS–2589F–00	34 – 7
5VS–2589H–00	34 – 6
5SL–25914–00	32 – 11
5DH–25916–00	32 – 16
3JD–25917–00	32 – 13
5SL–25917–00	32 – 8
13S–25919–00	30 – 11
	30 – 22
5SL–25919–00	32 – 10
2DR–25921–50	32 – 12
4SV–25924–00	30 – 12
4SV–25924–00	30 – 23
8CR–25924–00	32 – 15
3GM–25925–00	30 – 13
	30 – 24
1RC–25926–00	32 – 17
5VS–25975–00	30 – 27
1RC–26111–10	33 – 1
B90–2612E–00	34 – 23
1RC–26132–00	6 – 19
5PS–26133–20	33 – 14
	33 – 16
2DR–26199–00	21 – 18
4YR–26240–02	33 – 3
4YR–26241–02	33 – 2
5GJ–26246–00	33 – 4
39P–2627E–00	33 – 6
1B3–26280–20	33 – 13
4KG–26281–00	33 – 7
3XW–26282–01	33 – 8
1B3–26290–20	33 – 15
1RC–26302–00	33 – 5
2C0–26326–00	36 – 12
5VS–26332–00	34 – 10
1RC–26335–01	33 – 10
4GL–27114–00	28 – 2
5UY–27114–00	28 – 3
1RC–27200–00	35 – 27
4BP–27222–02	36 – 5
1RC–27267–00	35 – 40
1RC–27311–00	35 – 1
1RC–27321–00	35 – 2
1RC–27410–00	35 – 15
1RC–2741L–01	35 – 45
1RC–2742L–01	35 – 52
3VR–27431–02	35 – 44
1RC–27432–00	35 – 34
5VX–27437–00	35 – 48
	35 – 55
3VR–27441–02	35 – 51
1RC–27442–00	35 – 17
1RC–27443–00	35 – 26
3XV–27461–02	35 – 21
2DR–27491–00	30 – 30
1RC–274A3–00	35 – 12
1RC–28100–00	28 – 11
1RC–28135–00	28 – 12
2H7–28151–00	28 – 13
2GV–28152–00	28 – 14
14B–28164–00	28 – 16
23P–28164–00	28 – 15
29P–2816R–00	27 – 60
4KG–28186–10	28 – 17
B90–28309–00	45 – 23
2CR–28333–00	21 – 33
14B–2836B–00	40 – 9
4D9–28415–00	42 – 15
3JJ–28446–A1	21 – 54
1RC–81410–00	37 – 2
1RC–81450–00	37 – 1
1RC–81815–00	38 – 9
28P–81826–00	38 – 2
4XV–8182A–00	38 – 6
	38 – 10
4B5–81840–00	38 – 4
11H–81844–00	38 – 8
1FK–81847–00	38 – 7
3TB–81847–00	38 – 3
	38 – 5
1RC–81890–00	38 – 1
5S7–81940–00	44 – 7
1ST–81950–00	44 – 24
	45 – 33
5VK–81950–40	44 – 23
5JJ–81952–00	44 – 25
	45 – 34
1D7–81960–01	44 – 21
5VY–82100–00	44 – 5
B90–82116–00	44 – 1
5SL–82119–30	44 – 9
B90–8212B–00	21 – 17
1RC–82137–00	21 – 24
42X–82151–00	44 – 8
5JJ–82151–00	44 – 12
5JJ–82151–10	44 – 13
5JW–82151–10	44 – 14
5JJ–82151–30	44 – 17
5JJ–82151–60	44 – 16
5JJ–82151–80	44 – 15
34D–82176–00	20 – 16
1RC–82309–01	44 – 3
1RC–82310–00	45 – 8
1WS–82380–00	9 – 10
2C0–82380–00	9 – 10
B90–8246K–00	44 – 6
1RC–82501–30	45 – 19
1RC–82509–00	44 – 4

PART NO.	REF. NO.
4BH–82511–09	45 – 20
B90–82530–00	35 – 31
1RC–82540–00	45 – 9
1RC–82544–00	44 – 18
B90–82552–00	25 – 10
1RC–82566–50	35 – 7
B90–82568–00	45 – 22
5PS–82576–01	44 – 26
1RC–82589–00	44 – 32
2D1–82589–00	44 – 34
B90–82590–10	44 – 11
3MA–82591–00	44 – 31
1RC–82599–00	44 – 19
1B3–82911–00	43 – 1
3YX–82917–01	43 – 8
32C–83310–01	39 – 10
32C–83318–00	39 – 9
	39 – 18
32C–83320–01	39 – 14
5PW–83330–10	39 – 1
5GJ–83331–00	39 – 11
	39 – 15
5PW–83331–00	39 – 2
	39 – 6
5PW–8333A–10	39 – 7
	39 – 12
5PW–83340–10	39 – 5
5PW–8334A–10	39 – 3
	39 – 16
4C8–83350–10	45 – 32
BS2–83371–00	45 – 30
B90–83500–20	40 – 1
B90–83513–00	40 – 4
B90–8355X–00	40 – 5
4P9–83591–00	45 – 2
B90–83599–00	40 – 6
B90–83912–00	43 – 2
5JJ–83913–00	43 – 11
B90–83922–00	34 – 9
4XV–83929–00	43 – 7
2C0–83945–00	43 – 3
5LV–83951–00	43 – 6
B90–83963–00	43 – 14
B90–83969–00	43 – 12
1HP–83980–01	34 – 12
5PX–84125–00	41 – 13
4DN–84145–00	41 – 17
B34–84310–20	41 – 1
B90–84311–00–P1	41 – 16
8G9–84314–00	41 – 5
B34–84315–00	41 – 2
5PX–84317–00	41 – 15
5PX–84318–00	41 – 4
B90–8431U–00	41 – 20
5PX–84320–00	41 – 3
5PX–84325–00	41 – 11
5PX–84331–00	41 – 7
5PX–84332–00	41 – 8
5PX–84334–00	41 – 9
1TP–84347–00	42 – 9
5PX–84352–00	41 – 14
5PX–84354–00	41 – 12
5PX–84385–00	41 – 10
2PN–84396–00	41 – 23
5PX–84397–00	41 – 6
1FK–84527–00	42 – 14
1WS–84547–00	42 – 8
32D–84553–00	21 – 20
B90–84700–00	42 – 1
B90–84736–00	42 – 2
1WS–84740–00	42 – 7
1RC–84751–10	21 – 48
11H–85110–01	45 – 3
1RC–85112–00	45 – 5
1RC–85122–00	45 – 6
3Y6–85130–02	42 – 5
449–85131–02	21 – 51
2DR–85132–00	34 – 22
2DR–85142–00	36 – 22
2DR–85542–00	46 – 4
5S7–85720–00	45 – 12
1MC–85884–00	9 – 13
13S–85885–00	9 – 11
5YU–85886–00	44 – 2
B90–8591A–40	45 – 7
59C–8592A–00	12 – 2
B50–85930–09	46 – 1
B90–85970–00	46 – 12
2DR–85980–01	46 – 15
2DR–85991–00	46 – 3
5VY–8A8E0–00	45 – 13
1RC–W2470–00	28 – 9
B90–Y24HA–20–0X	27 – 40
B90–Y24JA–20–0X	27 – 43
90101–08013	23 – 25
90101–10042	24 – 2
90105–06027	1 – 3
90105–06066	7 – 4
90105–06066	6 – 7
90105–06126	23 – 24
90105–06148	34 – 27
	44 – 22
90105–06192	34 – 24
	36 – 23
90105–06202	13 – 14
90105–06557	34 – 28
90105–07006	4 – 4
90105–10174	23 – 49
90105–10188	35 – 3
90105–10210	23 – 40
	23 – 43
90105–10246	35 – 43
90105–10391	20 – 9
90105–10435	35 – 20
90105–10437	20 – 10
90105–10440	30 – 28
90105–126A8	2 – 11
90109–06081	25 – 24
90109–06100	13 – 16
90109–061F7	1 – 8
90109–06202	21 – 22
90109–06245	22 – 23
	22 – 30
90109–06271	1 – 29
90109–06293	1 – 10
90109–06309	27 – 34
90109–06311	27 – 47
90109–06313	22 – 21
	22 – 28
90109–064G6	30 – 2
90109–066F0	1 – 27
90109–08045	32 – 2
90109–08170	12 – 10
90109–08195	45 – 21
90109–08231	35 – 16
	35 – 25
90109–10027	23 – 35
90110–05067	45 – 11
90110–05112	27 – 19
90110–06102	21 – 7
	21 – 12
90110–06108	13 – 23
90110–06161	45 – 18
90110–06164	8 – 12
90110–06168	14 – 14
90110–06169	8 – 8
90110–06173	7 – 10
90110–06175	1 – 22
90110–06223	37 – 3
90110–06233	6 – 38
	10 – 27
90110–06245	27 – 9
90110–06274	5 – 25
90110–06321	14 – 23
90110–06388	5 – 16
	10 – 11
	14 – 10
	14 – 22
	38 – 11
90110–06389	14 – 11
90110–06394	5 – 15
	14 – 12
90110–06395	4 – 10
90110–06396	5 – 13
	14 – 32
90110–06402	41 – 24
90110–10043	20 – 6
90111–05036	35 – 8
90111–05048	22 – 8
	22 – 17
90111–06038	40 – 8
90111–06084	27 – 16
90111–06085	46 – 5
90111–06090	45 – 26
90111–06098	19 – 25
90111–06099	12 – 4
90111–06104	21 – 29
90111–06127	21 – 6
	21 – 11
	21 – 16
	30 – 32
90111–06130	13 – 28
90111–06159	6 – 14
90111–06161	23 – 21
90111–08028	35 – 29
90111–08038	36 – 15
90111–10039	35 – 18
90116–08087	1 – 6
90116–10048	31 – 17
90119–06M55	34 – 29
90119–09010	13 – 8
90119–09013	13 – 7
90119–09017	1 – 7
90149–05029	30 – 4
	32 – 4
90149–05037	1 – 25
90149–06082	17 – 15
90149–06158	14 – 19
	18 – 11
90149–06233	25 – 28
90149–08030	15 – 4
90149–08230	35 – 58
90149–10059	20 – 3
90159–06150	35 – 39
90160–05012	21 – 44
90160–05013	10 – 16
90160–05017	40 – 2
90170–06228	19 – 20
90170–08010	36 – 6
90176–06008	41 – 26
90176–06016	21 – 47
90179–05523	6 – 34
	21 – 32
90179–06074	22 – 2
	22 – 11
90179–06520	22 – 20
	22 – 27
90179–08410	12 – 6
90179–10024	20 – 11
90179–20011	16 – 19
90179–22018	17 – 36
90179–25004	25 – 3
90183–05076	22 – 7
	22 – 16
90183–05M02	45 – 24
90183–06069	21 – 19
90185–08089	35 – 28
90185–18009	31 – 25
90201–04030	44 – 28
90201–05036	40 – 3
90201–054K4	42 – 13
90201–06033	6 – 21
90201–06M94	27 – 50
90201–08048	35 – 42
90201–08066	36 – 17
90201–08103	35 – 30
90201–087G2	12 – 9
90201–10029	16 – 24
90201–10035	23 – 38
	35 – 10
90201–10075	20 – 7
90201–101J1	24 – 4
90201–12008	2 – 12
90201–12541	5 – 14
90201–12575	19 – 7
90201–127E1	19 – 3
90201–13015	23 – 37
90201–17018	35 – 11
90201–177G4	19 – 12
90201–18021	31 – 26
90201–20008	17 – 37
90201–20030	16 – 17
90201–22018	25 – 6
90202–06007	22 – 22
	22 – 29
90202–07164	23 – 28
90202–26142	25 – 4
90206–17084	35 – 19
90208–20001	16 – 18
90208–22002	17 – 35
90209–21332	17 – 6
90209–21351	17 – 12
90209–22352	17 – 11
90209–28008	17 – 22
90214–28002	17 – 28
90214–29002	17 – 27
90240–08005	36 – 16
90249–03002	21 – 40
90269–05055	27 – 30
90269–06008	27 – 48
90269–06018	45 – 27
90269–07001	27 – 49
90269–07007	21 – 23
	22 – 24
	22 – 31
	23 – 13
	23 – 18
90269–07015	44 – 33
90269–07076	21 – 38
90269–07077	41 – 21
90280–05029	2 – 10
90338–07157	6 – 6
	28 – 4
90338–16262	13 – 5
90338–23172	20 – 14
90340–14011	13 – 20
90340–14132	8 – 4
90340–18002	1 – 4

PART NO.	REF. NO.
90340–36003	14 – 2
90380–16134	23 – 2
90387–05021	21 – 5
	21 – 10
90387–05028	36 – 11
90387–05042	42 – 10
90387–06022	23 – 20
90387–06040	21 – 27
90387–06066	23 – 16
90387–06158	6 – 18
90387–06160	46 – 7
90387–06161	42 – 3
90387–06205	10 – 21
90387–06242	21 – 30
90387–06266	27 – 11
90387–06285	6 – 33
90387–06286	13 – 26
90387–06287	27 – 15
90387–062X0	23 – 15
90387–06315	41 – 25
90387–06322	19 – 24
90387–06372	30 – 31
90387–067K8	41 – 19
90387–06M16	35 – 38
90387–07717	6 – 8
90387–08021	12 – 8
90387–08102	35 – 41
90387–09020	45 – 25
90387–10050	35 – 9
90387–10106	23 – 48
90387–102R4	23 – 7
	23 – 39
90387–127W0	23 – 34
90387–17017	29 – 8
90387–20035	31 – 21
90387–20036	31 – 20
90387–21003	17 – 9
90387–25008	17 – 31
90387–25030	17 – 4
90387–28004	17 – 25
90387–30012	17 – 18
90387–31003	17 – 20
90401–10042	34 – 18
90401–10172	34 – 17
	36 – 25
90401–20008	8 – 1
90413–06031	9 – 16
90430–06014	5 – 12
90430–08143	14 – 5
90430–10004	45 – 1
90430–10005	34 – 19
	36 – 26
90445–197J2	35 – 6
90450–32003	5 – 33
	5 – 36
90450–38040	5 – 19
	5 – 34
90450–53007	10 – 20
90450–56009	10 – 2
90464–07M40	6 – 41
90464–09M31	27 – 59
90464–10233	34 – 26
	46 – 11
90464–12013	46 – 9
90464–12089	41 – 22
90464–13073	43 – 17
	45 – 28
90464–14003	46 – 10
90464–14010	44 – 29
	44 – 30
90464–14013	21 – 46
90464–15157	35 – 36
	44 – 20
90464–16001	33 – 17
	45 – 29
90464–16003	34 – 25
90464–16012	21 – 2
90464–18002	21 – 15
	23 – 27
90464–18007	36 – 20
90464–20023	36 – 19
90464–30011	21 – 45
90465–06025	8 – 9
90465–08053	45 – 15
90465–12356	42 – 16
90467–08075	6 – 29
	6 – 37
90467–09006	9 – 23
	27 – 26
	27 – 28
	27 – 56
90467–09103	9 – 18
90467–10039	6 – 23
	6 – 24
90467–10041	27 – 58
90467–100A1	9 – 17
90467–120A3	36 – 14
90467–14015	10 – 28
90467–14015	10 – 26
90467–17003	11 – 8
90467–17089	11 – 3
	11 – 5
90467–200A0	5 – 28
	5 – 31
90467–21068	5 – 27
	5 – 30
90467–310A0	5 – 20
	5 – 37
90480–01558	27 – 42
	27 – 45
90480–11009	42 – 11
90480–12012	23 – 11
90480–12314	10 – 22
90480–12607	35 – 37
90480–13010	7 – 8
90480–13018	13 – 27
90480–13203	6 – 36
90480–13567	46 – 6
90480–15363	6 – 17
90480–16003	27 – 14
90480–16014	41 – 18
90480–18008	27 – 10
90501–06022	18 – 2
90501–12743	35 – 46
	35 – 53
90506–18021	19 – 1
90506–20032	35 – 5
90506–23008	35 – 33
90508–09007	21 – 41
90508–18051	16 – 23
90508–20572	35 – 24
90508–32141	19 – 9
90520–02013	27 – 3
90520–10029	27 – 6
91312–04020	44 – 27
91312–05010	27 – 20
	27 – 24
91312–06020	19 – 15
91312–06025	8 – 7
91312–06030	6 – 20
91312–06035	7 – 5
91314–06018	25 – 18
91314–08030	25 – 9
	25 – 13
91314–08030	26 – 41
91314–08035	26 – 19
91317–05014	41 – 27
91317–05035	33 – 9
91401–20012	36 – 18
91401–25015	35 – 50
	35 – 57
91402–25015	35 – 23
91701–08040	35 – 22
91702–08040	35 – 49
	35 – 56
91808–16023	1 – 5
92012–05030	6 – 40
92012–06010	46 – 2
92012–06012	27 – 54
92012–06020	46 – 8
92012–06030	27 – 12
	35 – 14
92012–06040	35 – 13
92014–06014	46 – 13
	46 – 16
92017–05014	21 – 4
	21 – 9
92017–06010	33 – 12
	45 – 31
92017–06012	22 – 5
	22 – 14
	40 – 7
92017–06016	21 – 28
92017–06020	27 – 39
92017–08012	14 – 4
92902–04100	34 – 14
92902–04600	34 – 15
92902–06600	21 – 49
92907–05600	6 – 12
92907–08600	16 – 33
93101–12173	5 – 6
93102–12106	19 – 5
93102–15212	16 – 29
93102–25017	29 – 4
93102–28022	31 – 5
93102–40030	17 – 33
93106–22002	23 – 10
93106–40013	31 – 15
93108–35004	23 – 5
93109–17071	23 – 9
	23 – 32
93210–04092	13 – 3
93210–07540	13 – 10
93210–12790	13 – 6
93210–14369	13 – 21
93210–15566	45 – 17
93210–16325	13 – 19
93210–19123	14 – 29
93210–21001	45 – 10
93210–22001	7 – 7
93210–28543	14 – 8
93210–30694	5 – 17
93210–357A3	14 – 3
93210–46044	5 – 24
93210–61750	5 – 10
93306–00106	5 – 5
93306–00416	31 – 6
93306–20352	29 – 3
93306–20464	17 – 14
	17 – 38
93306–20480	31 – 4
93306–205B5	31 – 13
93306–20663	17 – 17
93306–30534	17 – 3
93310–33277	16 – 20
93315–21570	16 – 30
93315–31758	23 – 8
	23 – 31
93317–11096	16 – 32
93317–11295	19 – 16
93317–22262	23 – 3
93399–99931	25 – 1
93399–99932	26 – 40
93430–02001	21 – 42
93440–25186	17 – 7
93440–31187	17 – 23
93440–64199	17 – 19
93450–18157	2 – 9
93501–04011	35 – 47
	35 – 54
93603–16219	5 – 8
93607–44002	4 – 13
93610–20189	14 – 21
93900–00030	29 – 6
	31 – 10
94112–17127	29 – 5
94118–17078	31 – 9
94581–79066	7 – 11
94582–31110	31 – 1
94591–57128	4 – 5
94682–31031	31 – 2
94701–00431	1 – 9
95022–06008	44 – 10
95022–06014	28 – 10
95022–06016	28 – 8
	45 – 14
95027–06020	43 – 5
95302–06600	42 – 4
95302–08600	23 – 26
95304–06700	19 – 21
95602–05200	42 – 6
	42 – 12
95602–10100	24 – 3
95602–10200	23 – 41
	23 – 44
	23 – 50
	25 – 16
	31 – 18
95602–14200	23 – 47
95607–06100	21 – 50
95607–06200	43 – 4
95612–10100	23 – 36
	35 – 4
95617–06100	34 – 8
95702–05500	45 – 4
95702–06500	28 – 6
95707–05500	21 – 52
	36 – 27
95707–06500	21 – 35
95802–06010	35 – 35
95807–06016	25 – 21
95812–06040	13 – 11
95812–06050	13 – 12
95812–06065	13 – 13
95812–08060	13 – 15
95822–06012	6 – 16
95822–06025	5 – 22
95827–08120	27 – 17
97002–06016	23 – 17
97007–05012	6 – 11
97706–04012	39 – 4
	39 – 8
97707–40012	39 – 13
	39 – 17
98502–04012	34 – 13
98507–04010	43 – 10
98507–04020	43 – 15
98507–04025	43 – 13

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
98507–04030	43 – 16										
98704–03020	43 – 9										
99001–07600	16 – 34										
99002–10600	19 – 6										
99009–10400	16 – 25										
99009–12400	5 – 9										
99009–15500	7 – 3										
99009–17400	19 – 13										
99221–00140	27 – 41										
	27 – 44										
99530–08012	14 – 9										
99530–10014	13 – 4										
99530–12016	1 – 31										